

[Manuals.plus](#) /

› [Energizer](#) /

› Energizer MAX C Alkaline Batteries User Manual

Energizer E93FP-8

Energizer MAX C Alkaline Batteries User Manual

Model: E93FP-8

INTRODUCTION

This manual provides essential information for the safe and effective use of Energizer MAX C Alkaline Batteries. These batteries are designed to deliver long-lasting power for a variety of everyday devices.



Image: An 8-pack of Energizer MAX C Alkaline Batteries in their retail packaging, featuring the Energizer MAX branding.

SAFETY INFORMATION

WARNING:

- Do not install batteries backwards.
- Do not charge alkaline batteries.
- Do not put batteries in fire.
- Do not mix with used or other battery types.
- Failure to follow these instructions may cause batteries to explode or leak, resulting in injury.
- Replace all batteries in a device at the same time.



Image: The back of the Energizer MAX C Batteries packaging, displaying important safety warnings and recycling information.

SETUP AND INSTALLATION

1. Identify the battery compartment in your device.
2. Observe the polarity markings (+ and -) inside the compartment.
3. Insert the Energizer MAX C batteries, ensuring the positive (+) end aligns with the positive marking and the negative (-) end aligns with the negative marking.
4. Close the battery compartment securely.

Always ensure correct polarity to prevent damage to the device and the batteries.



RELIABLE POWER

FOR THE DEVICES YOU LOVE

Image: A collection of household devices such as a flashlight, remote control, and alarm clock, illustrating the versatility of Energizer batteries.

OPERATING INSTRUCTIONS

Energizer MAX C Alkaline Batteries provide reliable power for a wide range of electronic devices. Once correctly installed, the device should function as intended. These batteries are designed for single use and are not rechargeable.

LONG LASTING **POWER**



Image: A single Energizer MAX C battery with the text "LONG LASTING POWER" emphasizing its primary feature.

MAINTENANCE AND STORAGE

- Store batteries in a cool, dry place at normal room temperature.
- Avoid extreme temperatures, as this can reduce battery life.
- Keep batteries in their original packaging until ready for use to prevent short-circuiting.
- Do not store loose batteries together with metal objects like coins or keys.
- Energizer MAX C batteries hold power for up to 10 years in storage.

HOLDS POWER FOR UP TO
10 YEARS
IN STORAGE



Image: Two Energizer MAX C batteries illustrating their ability to hold power for up to 10 years in storage.

TROUBLESHOOTING

If your device is not functioning after installing new batteries:

- **Check Polarity:** Ensure batteries are inserted with the correct positive (+) and negative (–) orientation.
- **Verify Battery Type:** Confirm that C-size batteries are the correct type for your device.
- **Inspect Contacts:** Check for any corrosion or debris on the battery contacts in the device and on the batteries themselves. Clean if necessary.
- **Replace All Batteries:** If one battery is depleted, it can affect the performance of the entire set. Replace all batteries in the device simultaneously.
- **Device Malfunction:** If the issue persists, the problem may lie with the device itself, not the batteries.

SPECIFICATIONS

Brand	Energizer
Model Number	E93FP-8

Battery Cell Composition	Alkaline
Battery Size	C
Number of Batteries	8 (included)
Product Dimensions	2 x 4.1 x 2 inches
Item Weight	2.34 ounces
Manufacturer	Energizer Batteries- Consumables
First Available Date	November 15, 2006



Image: A single Energizer MAX C battery highlighting its "Made to Last Not to Leak" feature.

RECYCLING AND DISPOSAL

Please dispose of used batteries responsibly according to local regulations. Many communities offer recycling programs for batteries. Do not dispose of batteries in household trash or fire.

For more information on recycling, visit [Energizer's Recycling Information](#) or [How2Recycle.info](#).

WARRANTY AND SUPPORT

For information regarding product warranty or customer support, please visit the official Energizer website or contact their customer service directly.

Official Website: www.energizer.com

You can also explore the Energizer Brand Store for more products: [Energizer Brand Store](#)

© 2025 Energizer. All rights reserved. This manual is for informational purposes only.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0044DA3NS>

More documents and user manuals: <https://manuals.plus/>