

LELO 12009

LELO MIA 3 Personal Massager User Manual

Model: 12009

[Introduction](#) [Safety Information](#) [Package Contents](#) [Setup](#) [Operating](#)
[Instructions](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. Introduction

The LELO MIA 3 is a compact and discreet personal massager designed for convenience and versatility. Featuring a lipstick-inspired design, it offers 8 distinct vibration settings and is fully waterproof, making it suitable for various environments. Its USB-rechargeable design ensures it is always ready for use, whether at home or while traveling.



Image: LELO MIA 3 Personal Massager in Deep Rose. This image displays the sleek, compact design of the device.

2. Safety Information

- Do not use the device if it appears damaged.
- Consult a medical professional if you experience discomfort or pain during use.
- Keep out of reach of children.
- Do not expose the device to extreme temperatures or direct sunlight.
- Use only LELO-approved chargers or standard USB ports for charging.
- Discontinue use if the device overheats or malfunctions.

3. Package Contents

Verify that all items are present in your LELO MIA 3 package:

- 1 x LELO MIA 3 Personal Massager
- 1 x Storage Pouch
- 1 x User Manual (this document)

4. Setup

4.1 Charging the Device

Before first use, fully charge your LELO MIA 3 for 2 hours. The device features an integrated USB charging port for convenience.

1. Gently twist and pull the top section of the device to reveal the USB connector.
2. Insert the USB connector into any standard USB port (e.g., computer, USB wall adapter).
3. The indicator light will blink during charging and remain steady when fully charged.
4. Once charging is complete, remove the device from the USB port and securely reattach the top section.

Features



8 PLEASURE SETTINGS

powerful performance in a subtle design



LUXURIOUS FEEL WITH UPGRADED MATERIAL

that feels warm to the touch



WATERPROOF DESIGN

perfect for the bath and shower



Image: LELO MIA 3 Useful Information. This image highlights the charging time, use time, travel lock, and USB rechargeable feature.

4.2 First Use Preparation

Clean the device thoroughly before its first use and after each subsequent use. Refer to the "Maintenance" section for detailed cleaning instructions.

5. Operating Instructions

5.1 Power On/Off

- To turn on: Press the + button briefly.
- To turn off: Press the - button.

5.2 Changing Vibration Settings

The LELO MIA 3 offers 8 distinct vibration patterns.

- To switch between the 8 modes: Double press the + or - button.

- To decrease or increase intensity within a mode: Press the+ and - buttons.

Useful information



CHARGING TIME / USE TIME

up to 2 h / up to 1.5 h



TRAVEL LOCK

to unlock, hold + and – for 3 seconds



USB RECHARGEABLE & WATERPROOF

enjoy unlimited climaxes anytime, anyplace



STAND BY

up to 90 days



Image: LELO MIA 3 How to Use. This image provides instructions for turning the device on/off and changing vibration modes and intensity.



how to use?

STEP 1

Prep

For the smoothest experience, apply a liberal amount of LELO Personal Moisturizer to the device and your body.

Image: LELO MIA 3 How to Use - Step 1 Prep. This image illustrates the first step of preparing the device for use.



STEP 2

Engage

Turn on the device and slowly explore different pleasure settings

Image: LELO MIA 3 How to Use - Step 2 Engage. This image shows the second step of engaging with the device.



STEP 3

Indulge

Find the spot that feels the best and tease your way to a powerful climax.

Image: LELO MIA 3 How to Use - Step 3 Indulge. This image depicts the third step of indulging with the device.

5.3 Travel Lock

To prevent accidental activation during travel, the LELO MIA 3 features a travel lock function.

- To activate/deactivate: Hold the + and - buttons simultaneously for 3 seconds. The indicator light will confirm

activation/deactivation.

6. Maintenance

6.1 Cleaning

Always clean your LELO MIA 3 thoroughly before and after each use.

- Wash the device with warm water and a mild, antibacterial soap.
- Rinse thoroughly with clean water.
- Dry with a lint-free cloth or towel.
- For best results, use a LELO-approved cleaning spray.
- Do not use cleaners containing alcohol, petroleum, or acetone, as these may damage the silicone.

6.2 Storage

Store your LELO MIA 3 in the provided storage pouch in a cool, dry place, away from direct sunlight and extreme temperatures.

7. Troubleshooting

Problem	Possible Cause	Solution
Device does not turn on.	Battery is depleted or travel lock is active.	Charge the device for 2 hours. Deactivate travel lock by holding + and - for 3 seconds.
Vibrations are weak.	Battery is low.	Recharge the device.
Device not charging.	USB connection issue or faulty port.	Ensure USB connector is fully inserted. Try a different USB port or charger.

8. Specifications

- **Model:** 12009
- **Material:** Body-safe Silicone
- **Dimensions:** 4.37 x 0.87 x 0.87 inches (111 x 22 x 22 mm)
- **Weight:** 3.84 ounces (36 g)
- **Battery:** 1 Lithium Ion (included)
- **Charging:** USB Rechargeable
- **Use Time:** Up to 1.5 hours
- **Charging Time:** Up to 2 hours
- **Standby Time:** Up to 90 days
- **Interface:** 2-button interface
- **Vibration Settings:** 8 patterns
- **Waterproof:** Rated fully waterproof to IPX7 standard



Image: LELO MIA 3 features and certifications. This image details safety certifications, material, settings, and dimensions.

9. Warranty & Support

LELO products are manufactured to the highest standards and come with a comprehensive warranty.

- **1-Year Warranty:** Covers manufacturing defects from the date of purchase.
- **10-Year Quality Guarantee:** Ensures product quality and performance for an extended period.

For warranty claims, technical support, or any inquiries, please visit the official LELO website or contact their customer service directly. Please retain your proof of purchase for warranty validation.

© 2026 LELO. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question