

## Oster TSSTTVVGS1

# Oster TSSTTVVGS1 4-Slice Toaster Oven Instruction Manual

Model: TSSTTVVGS1

## INTRODUCTION

---

Thank you for choosing the Oster TSSTTVVGS1 4-Slice Toaster Oven. This compact and versatile appliance is designed to provide efficient toasting, baking, and broiling for your everyday needs. Please read this instruction manual thoroughly before operating your new toaster oven to ensure safe and optimal performance. Keep this manual for future reference.



Figure 1: Front view of the Oster TSSTTVVGS1 4-Slice Toaster Oven.

## IMPORTANT SAFETY INFORMATION

---

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Do not use appliance for other than intended use.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off," then remove plug from wall outlet.
- Oversize foods or metal utensils must not be inserted in a toaster oven as they may create a fire or risk of electric shock.
- A fire may occur if the toaster oven is covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not place any materials other than manufacturer's recommended accessories in this oven.
- Do not place cardboard, plastic, paper, or similar materials in the oven.
- Do not store any materials, other than manufacturer's recommended accessories, in this oven when not in use.
- Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of electric shock.
- Always wear protective, insulated oven mitts when inserting or removing items from the hot oven.

## SETUP AND FIRST USE

---

### Unpacking

Carefully remove the toaster oven and all accessories from the packaging. Ensure all packing materials, including any protective films or inserts, are removed from the appliance before use. Verify that all components listed in the 'Included Components' section are present.

### Placement

Place the toaster oven on a flat, stable, heat-resistant surface. Ensure there is adequate ventilation around the appliance, with at least 4-6 inches of clearance on all sides and above to prevent overheating. Do not place it directly against a wall or under cabinets.

### Initial Cleaning

Before first use, wipe down the interior and exterior of the toaster oven with a damp cloth. Wash the baking pan and wire rack in warm, soapy water, then rinse and dry thoroughly. Ensure the removable crumb tray

is properly inserted.



Figure 2: Interior view showing the baking pan and wire rack.

## First Use (Burn-Off)

It is normal for a new toaster oven to emit a slight odor or smoke during its first use. This is due to the burning off of manufacturing residues. To minimize this, operate the oven empty on the 'Bake' function at 450°F (230°C) for approximately 15 minutes. Ensure the area is well-ventilated during this process.

## OPERATING INSTRUCTIONS

---

The Oster TSSTTVGS1 features user-friendly control dials for various cooking functions.



Figure 3: Control panel with temperature, function, and timer dials.

## Control Dials

1. **Temperature Control Dial:** Located at the top, this dial allows you to select the desired cooking temperature from 150°F to 450°F.
2. **Function Selector Dial:** The middle dial selects the cooking mode: **Broil**, **Bake**, or **Toast**.
3. **Timer Dial:** The bottom dial sets the cooking time up to 30 minutes. For continuous operation, select 'Stay On'. For toasting, turn past 10 and then back to the desired toast shade (light to dark).

## Cooking Functions

- **Toast:** Ideal for bread, bagels, and frozen waffles. Place items directly on the wire rack. Select 'Toast' function, set the temperature to 450°F, and adjust the timer for desired browning. The oven has a 4-slice capacity.
- **Bake:** Use for casseroles, cookies, and reheating. Place food in the baking pan on the wire rack. Select 'Bake' function, set the desired temperature, and set the timer.
- **Broil:** Perfect for melting cheese, browning toppings, or cooking thin cuts of meat. Place food on the baking pan. Select 'Broil' function, set the temperature to 450°F, and set the timer. Monitor food closely as broiling is a fast cooking method.



Figure 4: Toaster oven in use, showing food being prepared.

## CARE AND MAINTENANCE

---

Regular cleaning and maintenance will ensure the longevity and optimal performance of your toaster oven.

### Cleaning the Interior

Always unplug the appliance and allow it to cool completely before cleaning. Remove the wire rack and baking pan. The interior walls can be wiped with a damp cloth and mild liquid soap. For stubborn stains, use a non-abrasive cleaner. Do not use metal scouring pads or harsh chemicals.

### Cleaning the Removable Crumb Tray

The removable crumb tray slides out from the bottom front of the oven. Pull it out, discard crumbs, and wash it in warm, soapy water. Rinse and dry thoroughly before reinserting. This feature simplifies cleanup and helps prevent grease buildup.



Figure 5: Exploded view highlighting the removable crumb tray.

## Cleaning the Exterior

Wipe the exterior surfaces with a damp cloth and dry thoroughly. Do not use abrasive cleaners or polishes that may scratch the stainless steel finish.

## TROUBLESHOOTING

- **Appliance does not turn on:** Ensure the power cord is securely plugged into a working electrical outlet. Check your household circuit breaker.
- **Uneven toasting/cooking:** Ensure food is placed centrally on the rack. Preheat the oven for a few minutes before adding food for more consistent results. Adjust cooking time and temperature as needed.
- **Smoke or odor during operation:** A slight odor is normal during first use. If excessive smoke occurs, unplug the oven immediately. Check for food spills or debris on heating elements or crumb tray. Ensure the crumb tray is clean.
- **Timer not working:** Ensure the timer dial is turned past the '10' mark and then back to the desired setting for toasting, or directly to the desired time for baking/broiling. For continuous operation, select 'Stay On'.

## SPECIFICATIONS

Feature	Detail
Brand	Oster
Model Number	TSSTTVVGS1
Color	Stainless Steel
Capacity	4-Slice
Functions	Toast, Bake, Broil

Feature	Detail
Control Type	Knob
Wattage	1000 watts
Product Dimensions (D x W x H)	11.56" x 15.91" x 8.25"
Interior Chamber Dimensions (W x D x H)	10.87" x 7.98" x 3.46" (lower rack to upper heater)
Item Weight	1 Pounds
Material	Stainless Steel
Special Features	Durable, Easy Clean, Manual Controls, Removable Drip Tray, See-through Glass, Dropdown Door

## WARRANTY INFORMATION

---

This Oster TSSTTVGS1 4-Slice Toaster Oven comes with a **1-year manufacturer limited warranty**. Please refer to the warranty card included with your product for specific terms, conditions, and registration details. Keep your purchase receipt as proof of purchase.

## CUSTOMER SUPPORT

---

For any questions, assistance, or to report issues with your Oster TSSTTVGS1 4-Slice Toaster Oven, please contact Oster customer service. Contact information can typically be found on the product packaging, the official Oster website, or the warranty card.