

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Brookstone](#) /

› [Brookstone Towel Warmer Instruction Manual](#)

Brookstone 647156



Brookstone Towel Warmer Instruction Manual

Model: 647156

1. INTRODUCTION

Thank you for purchasing the Brookstone Towel Warmer. This manual provides important information regarding the safe operation, setup, maintenance, and troubleshooting of your new appliance. Please read all instructions carefully before use and retain this manual for future reference.

2. IMPORTANT SAFETY INFORMATION

To reduce the risk of fire, electric shock, or injury, always follow basic safety precautions when using electrical appliances.

- Read all instructions before using this appliance.
- Do not use this appliance near water, such as bathtubs, showers, or swimming pools.
- Always unplug the appliance from the electrical outlet when not in use or before cleaning.
- Do not operate any appliance with a damaged cord or plug, or if the appliance malfunctions or has been damaged in any manner.
- Keep the cord away from heated surfaces.
- Do not insert any object into any opening.
- Do not use outdoors.
- Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
- This appliance is for household use only.
- Close supervision is necessary when this appliance is used by or near children or individuals with disabilities.
- The surface of the warmer will become hot during operation. Avoid direct contact with heated surfaces.

3. PRODUCT OVERVIEW

The Brookstone Towel Warmer is designed to provide warm towels, bathrobes, or blankets for a luxurious experience. Its extra-large capacity can accommodate up to two oversized towels.

Brookstone®

Towel Warmer

LUXURIOUS WARMTH—
JUST LIKE THE SPA



This image displays the Brookstone Towel Warmer in its packaging. The main unit is a white cylindrical warmer with a clear lid, designed to heat towels. A hand is shown placing a towel into the warmer. To the left, a stack of neatly folded towels in various shades of grey and beige is visible, suggesting the product's use.

Key Features:

- Holds and warms 2 oversized towels.
- Also suitable for blankets and bathrobes.
- Warms to approximately 120°F (49°C) in just 10 minutes.
- Features an automatic shut-off for safety.
- Transparent lid allows visibility of contents.

4. SETUP

The Brookstone Towel Warmer requires minimal setup.

- Unpack:** Carefully remove the towel warmer from its packaging.
- Placement:** Place the unit on a flat, stable, heat-resistant surface away from water sources.
- Plug In:** Plug the power cord into a standard 120V AC electrical outlet.

5. OPERATING INSTRUCTIONS

Follow these steps to warm your towels:

- Prepare Item:** Open the lid and place one or two dry towels, a bathrobe, or a blanket loosely inside the warmer. For best results, unfold the item as much as possible to allow heat to circulate evenly.
- Close Lid:** Securely close the transparent lid.
- Activate:** Press the power button to start the warming cycle. An indicator light will illuminate.
- Wait:** Allow approximately 10 minutes for the item to reach its optimal warm temperature of up to 120°F (49°C).
- Auto Shut-off:** The unit will automatically shut off after the warming cycle is complete. The indicator light will turn off.
- Remove Item:** Carefully open the lid and remove your warm item. Be cautious as the item and interior surfaces may be hot.

Note on Initial Use: It is normal for a new heating appliance to emit a slight odor during its first few uses. This will dissipate over time. You may run the warmer empty for a few cycles in a well-ventilated area to help reduce this initial smell.

6. MAINTENANCE AND CARE

Proper care will ensure the longevity of your towel warmer.

- Cleaning:** Always unplug the unit and allow it to cool completely before cleaning. Wipe the exterior with a soft, damp cloth. Do not immerse the unit in water or any other liquid. Do not use abrasive cleaners or scouring pads.
- Storage:** When not in use, store the towel warmer in a cool, dry place. Ensure the unit is clean and dry before storing.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Unit does not turn on or heat.	Not plugged in; power outlet issue; unit malfunction.	Ensure the unit is securely plugged into a working outlet. Check household circuit breaker. If problem persists, contact customer support.
Towels are not evenly warm.	Towels are folded too tightly or too many items inside.	Ensure towels are placed loosely and unfolded as much as possible. Do not overload the warmer.
Unpleasant odor during operation.	New unit odor; dust accumulation.	This is common for new appliances. Run the unit empty for several cycles in a well-ventilated area. Ensure the unit is clean.
Unit does not shut off automatically.	Internal sensor malfunction.	Immediately unplug the unit. Do not use if the auto shut-off feature is not working. Contact customer support for assistance.

8. SPECIFICATIONS

Model Number	647156
--------------	--------

Product Dimensions	13 x 13 x 22 inches (33 x 33 x 56 cm)
Item Weight	8 pounds (3.6 kg)
Manufacturer	Brookstone
Power Input	120V AC (Standard US Outlet)

9. WARRANTY AND SUPPORT

For warranty information or technical support, please contact Brookstone customer service. Keep your purchase receipt as proof of purchase.

For the most up-to-date contact information, please visit the official Brookstone website or refer to the contact details provided with your product packaging.

