



[Manuals.plus](#) /

› [TOSHIBA](#) /

› Toshiba BDX1100 Blu-ray Disc Player User Manual

TOSHIBA BDX1100

Toshiba BDX1100 Blu-ray Disc Player User Manual

Model: BDX1100

[Overview](#) [Setup](#) [Operation](#) [Introduction](#) [Maintenance](#) [Safety Information](#) [Troubleshooting](#) [Product Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

This manual provides essential information for the safe and efficient use of your Toshiba BDX1100 Blu-ray Disc Player. Please read this manual thoroughly before operating the device and retain it for future reference. The Toshiba BDX1100 offers high-definition video and audio playback, enhancing your home entertainment experience.

2. SAFETY INFORMATION

Always follow basic safety precautions when using this product to reduce the risk of fire, electric shock, and injury.

- **Electrical Safety:** Do not expose the unit to rain or moisture. Do not open the casing; refer all servicing to qualified personnel. Ensure the power cord is securely plugged into a grounded outlet.
- **Ventilation:** Do not block ventilation openings. Allow adequate space around the unit for proper airflow to prevent overheating.
- **Placement:** Place the unit on a stable, level surface. Avoid placing it near heat sources, direct sunlight, or areas with excessive dust or vibration.
- **Disc Handling:** Handle discs by their edges. Keep discs clean and free from scratches to ensure optimal playback.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- Toshiba BDX1100 Blu-ray Disc Player
- Remote Control
- Power Cord
- User Manual (this document)

Note: HDMI cables and other connection cables are typically sold separately.

4. PRODUCT OVERVIEW

4.1 Front Panel



Image: Front view of the Toshiba BDX1100 Blu-ray Disc Player, showing the disc tray, power button, and control buttons.

- **Disc Tray:** Insert Blu-ray discs, DVDs, or CDs here.
- **Power Button:** Turns the player on or off.
- **Eject Button:** Opens and closes the disc tray.
- **SD Card Slot:** For storing BD-Live content or playing media from an SD card.
- **USB Port:** For connecting USB storage devices for media playback.

4.2 Rear Panel



Image: Rear view of the Toshiba BDX1100 Blu-ray Disc Player, showing various connection ports.

- **HDMI Output:** Connects to your TV or AV receiver for high-definition video and audio.
- **Ethernet Port:** Connects to your home network for BD-Live features and firmware updates.
- **Digital Audio Output (Coaxial):** Connects to an AV receiver for digital audio.
- **Analog Audio Output (RCA L/R):** Connects to an AV receiver or stereo system for analog audio.
- **Video Output (Composite):** Connects to older TVs for standard definition video.

4.3 Remote Control



Image: Remote control for the Toshiba BDX1100 Blu-ray Disc Player, displaying various function buttons.

The remote control allows you to operate all functions of the Blu-ray player from a distance. It includes buttons for power, disc tray open/close, playback controls (play, pause, stop, fast forward, rewind), navigation, menu access, and volume control.

5. SETUP

5.1 Connecting to Your TV

1. **HDMI Connection (Recommended):** Connect one end of an HDMI cable (not included) to the HDMI OUT port on the Blu-ray player and the other end to an HDMI input on your TV.

2. **Composite Video Connection (Alternative):** If your TV does not have an HDMI input, connect a composite video cable (yellow) to the VIDEO OUT port on the player and the corresponding video input on your TV. Connect the red and white audio cables to the AUDIO OUT (L/R) ports on the player and the audio inputs on your TV.

5.2 Connecting to Audio System (Optional)

- **Digital Coaxial Audio:** For high-quality digital audio, connect a digital coaxial cable to the DIGITAL AUDIO OUT (COAXIAL) port on the player and the corresponding input on your AV receiver.

5.3 Network Connection (for BD-Live)

To access BD-Live features, connect an Ethernet cable from the LAN port on the Blu-ray player to your home router or network switch.

5.4 Power Connection

Plug the power cord into the AC IN socket on the rear of the player, then plug the other end into a wall outlet.

5.5 Initial Setup

After connecting all cables and powering on the unit, follow the on-screen instructions to complete the initial setup, which may include language selection, display resolution, and network settings.

6. OPERATING INSTRUCTIONS

6.1 Basic Disc Playback

1. Turn on your TV and the Blu-ray player. Select the correct input source on your TV.
2. Press the Eject button on the player or remote control to open the disc tray.
3. Place a Blu-ray disc, DVD, or CD onto the disc tray with the label side facing up.
4. Press the Eject button again to close the disc tray. The disc will load automatically.
5. Use the remote control's Play, Pause, Stop, Fast Forward, and Rewind buttons to control playback.

6.2 BD-Live Features

If connected to the internet, BD-Live allows access to online bonus content related to your Blu-ray discs. An SD card inserted into the SD Card Slot may be required to store downloaded content.

6.3 AVCHD Playback

The player supports AVCHD format playback, allowing you to view high-definition home movies recorded on compatible media.

6.4 Media Playback via USB/SD Card

Insert a USB storage device into the USB port or an SD card into the SD Card Slot. Use the player's menu to navigate and select media files (photos, music, videos) for playback.

7. MAINTENANCE

- **Cleaning the Unit:** Wipe the exterior of the player with a soft, dry cloth. Do not use liquid or aerosol cleaners.
- **Cleaning Discs:** Wipe discs gently from the center outwards with a soft, lint-free cloth. Do not use abrasive cleaners.
- **Storage:** When not in use for extended periods, unplug the player and store it in a cool, dry place.

8. TROUBLESHOOTING

If you encounter issues, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No power	Power cord not connected; power outlet faulty.	Ensure power cord is securely connected. Try a different outlet.
No picture	Incorrect TV input; HDMI/video cable loose or faulty.	Select the correct TV input. Check HDMI/video cable connections.
No sound	Audio cables loose; TV/receiver volume low or muted.	Check audio cable connections. Adjust TV/receiver volume.
Disc does not play	Disc is dirty, scratched, or inserted incorrectly; incompatible disc format.	Clean the disc. Insert disc with label side up. Ensure disc format is supported.
Remote control not working	Batteries depleted; obstruction between remote and player.	Replace batteries. Remove any obstructions.

9. SPECIFICATIONS

- **Model:** BDX1100
- **Brand:** TOSHIBA
- **Video Output:** 1080p Full HD (24 fps native)
- **Connectivity:** HDMI 1.3, Ethernet, USB, SD Card Slot
- **Audio Support:** Dolby TrueHD, DTS-HD Master Audio | Essential
- **Media Playback:** Blu-ray Disc, BD-R, DVD, DVD+R, DVD+RW, DVD-R, DVD-RW, VCD, MP3, AVCHD
- **Dimensions:** Approximately 9.13 x 14.17 x 1.77 inches
- **Weight:** Approximately 1.77 pounds

10. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the warranty card included with your product or visit the official Toshiba support website. Do not attempt to repair the unit yourself, as this may void your warranty.