

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Warner Home Video](#) /
- › [Presumed Innocent DVD Instruction Manual](#)

Warner Home Video WHV1000171071DVD

Presumed Innocent DVD Instruction Manual

Model: WHV1000171071DVD

INTRODUCTION

This manual provides instructions for the proper use and care of your Presumed Innocent DVD. This DVD features the film "Presumed Innocent," a legal thriller starring Harrison Ford as Rusty Sabich, a prosecutor accused of murder. The film explores themes of justice, infidelity, and the complexities of the legal system.

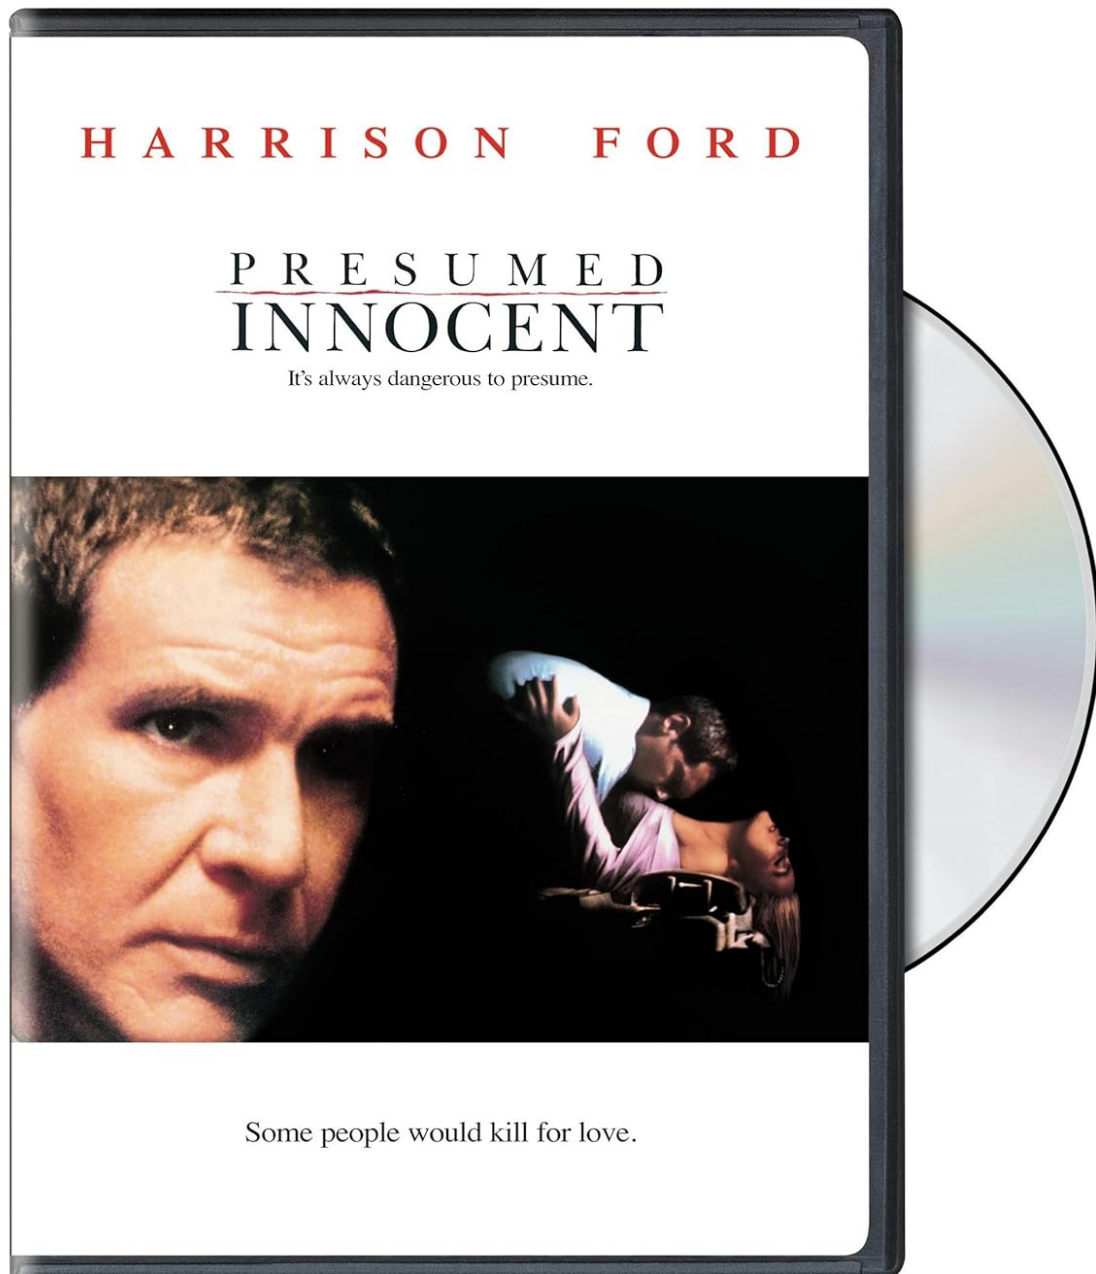


Image: Front cover of the Presumed Innocent DVD. It displays the title "Presumed Innocent" with "Harrison Ford" above it, and an image of Harrison Ford's face alongside a dramatic scene from the film. The tagline "It's always dangerous to presume." is also visible.

SETUP

To begin watching your Presumed Innocent DVD, follow these steps:

1. **Unpack the DVD:** Carefully remove the DVD disc from its case. Hold the disc by its edges to avoid touching the playback surface.
2. **Insert into Player:** Open the disc tray of your DVD player, Blu-ray player, or computer's optical drive. Place the DVD disc onto the tray with the label side facing up. Close the disc tray.
3. **Power On:** Ensure your DVD player and television/monitor are powered on and correctly connected.
4. **Select Input:** Use your television remote to select the correct input source (e.g., HDMI 1, AV, Component) that corresponds to your DVD player's connection.

5. **Start Playback:** The DVD should automatically load and display a menu. If not, press the "Play" button on your DVD player remote.

OPERATING INSTRUCTIONS

Basic functions for navigating and playing the Presumed Innocent DVD:

- **Play/Pause:** Press the **PLAY** button to start playback or resume from a paused state. Press the **PAUSE** button to temporarily stop playback.
- **Stop:** Press the **STOP** button to end playback and return to the main menu or stop the disc.
- **Fast Forward/Rewind:** Use the **FF (Fast Forward)** and **REW (Rewind)** buttons to quickly scan through the film.
- **Chapter Skip:** Use the **NEXT CHAPTER** and **PREVIOUS CHAPTER** buttons to jump between chapters of the film.
- **Menu Navigation:** Use the arrow keys (**UP, DOWN, LEFT, RIGHT**) on your remote to navigate menu options, and press **ENTER** or **SELECT** to confirm.
- **Audio/Subtitles:** Access the DVD menu to select preferred audio tracks (English, French, Spanish) or subtitle options (English, French, Spanish).

MAINTENANCE

To ensure the longevity and optimal performance of your Presumed Innocent DVD:

- **Handling:** Always hold the DVD by its outer edges or by the center hole. Avoid touching the shiny playback surface.
- **Cleaning:** If the disc becomes dirty or smudged, gently wipe it with a soft, lint-free cloth. Wipe from the center of the disc outwards in a straight line, not in a circular motion. Do not use abrasive cleaners or solvents.
- **Storage:** Store the DVD in its original case, away from direct sunlight, extreme temperatures, and high humidity.
- **Avoid Scratches:** Do not place the disc on rough surfaces or expose it to objects that could scratch it.

TROUBLESHOOTING

If you encounter issues while playing the Presumed Innocent DVD, consider the following:

Problem	Possible Cause	Solution
Disc does not play or load.	Disc is dirty or scratched; incorrect input selected on TV; player malfunction.	Clean the disc. Ensure TV input is correct. Try the disc in another player.
Picture or sound skips/freezes.	Disc surface is dirty or damaged; player lens is dirty.	Clean the disc. Consider cleaning the player's lens with a specialized cleaning disc.

Problem	Possible Cause	Solution
No sound.	TV or player volume is muted/low; incorrect audio track selected.	Check volume levels. Ensure correct audio track (e.g., English Dolby Digital 4.0) is selected in the DVD menu.
No subtitles.	Subtitles are turned off or incorrect language selected.	Enable subtitles and select the desired language (English, French, Spanish) from the DVD menu.

SPECIFICATIONS

- **Title:** Presumed Innocent
- **Format:** DVD
- **Model Number:** WHV1000171071DVD
- **Studio:** Warner Home Video
- **Release Date:** November 9, 2010
- **Run Time:** 2 hours and 5 minutes
- **MPAA Rating:** R (Restricted)
- **Media Format:** Color, Dolby, Dubbed, Multiple Formats, NTSC, Subtitled, Widescreen
- **Audio Languages:** English (Dolby Digital 4.0), French (Dolby Digital 4.0), Spanish (Mono)
- **Subtitles:** English, French, Spanish
- **Number of Discs:** 1
- **Product Dimensions:** 0.7 x 7.5 x 5.4 inches; 2.08 ounces
- **Director:** Alan J. Pakula
- **Actors:** Bonnie Bedelia, Brian Dennehy, Harrison Ford, Paul Winfield, Raul Julia

WARRANTY INFORMATION

This DVD is manufactured to high-quality standards. In the unlikely event of a manufacturing defect, please refer to the return policy of your retailer. Physical damage due to improper handling or storage is not covered.

CUSTOMER SUPPORT

For further assistance regarding this product, please contact the retailer from whom it was purchased. For general inquiries about Warner Home Video products, please visit their official website or refer to the contact information provided on the DVD packaging.