

Aiwa XP-V5260C

AIWA Portable CD Player XP-V5260C User Manual

Model: XP-V5260C

1. INTRODUCTION

Thank you for purchasing the AIWA Portable CD Player XP-V5260C. This device is designed to provide high-quality audio playback from your favorite compact discs, including CD-R/RW formats. It features a 48-second Electronic Anti-Shock System (EASS) for uninterrupted listening during movement and a Digital Sound Level (DSL) bass boost function for enhanced audio. Please read this manual thoroughly before using the player to ensure proper operation and to maximize your listening experience.

2. SAFETY INFORMATION

- **Hearing Protection:** Avoid listening at high volume levels for extended periods to prevent hearing damage.
- **Moisture:** Do not expose the unit to rain, moisture, or extreme temperatures.
- **Power Source:** Use only the specified power adapter or batteries. Ensure correct battery polarity.
- **Disassembly:** Do not attempt to disassemble or modify the unit. Refer all servicing to qualified personnel.
- **Cleaning:** Use a soft, dry cloth for cleaning. Avoid liquid cleaners or abrasive materials.

3. PACKAGE CONTENTS

Please check that all items listed below are included in your package:

- AIWA Portable CD Player XP-V5260C
- Stereo Headphones
- AC Power Adapter (if included with your model)
- User Manual (this document)

4. PRODUCT OVERVIEW

Familiarize yourself with the various parts of your AIWA Portable CD Player XP-V5260C.



Figure 1: Front view of the AIWA Portable CD Player XP-V5260C. This image shows the main unit with the CD compartment lid closed, displaying the control buttons and LCD screen.

Controls and Features:

- **CD Compartment Lid:** Opens to insert or remove a CD.
- **LCD Display:** Shows track number, time, playback mode, and battery status.
- **PLAY/PAUSE (▶/--):** Starts or pauses CD playback.
- **STOP (■):** Stops CD playback.
- **SKIP/SEARCH (◀◀ / ▶▶):** Skips to the previous/next track. Hold to search backward/forward within a track.
- **MODE:** Selects playback modes (e.g., Repeat 1, Repeat All, Random).
- **DSL (Digital Sound Level):** Activates or deactivates bass boost.
- **VOLUME Control:** Adjusts the headphone output volume.
- **HEADPHONE Jack:** 3.5mm stereo output for headphones.
- **DC IN 4.5V Jack:** For connecting the AC power adapter.
- **Battery Compartment:** Located on the bottom, for inserting AA batteries.

5. SETUP

5.1 Powering the Unit

The XP-V5260C can be powered by either batteries or an AC power adapter.

Using Batteries:

1. Open the battery compartment cover on the bottom of the unit.

2. Insert two (2) AA-size batteries (not included), ensuring correct polarity (+/-) as indicated inside the compartment.
3. Close the battery compartment cover securely.

Note: Battery life is approximately 32 hours with standard alkaline batteries. Remove batteries if the unit will not be used for an extended period.

Using AC Power Adapter (Optional):

1. Plug the AC power adapter (not included with all models) into the DC IN 4.5V jack on the unit.
2. Plug the other end of the adapter into a standard wall outlet.

5.2 Connecting Headphones

Insert the 3.5mm stereo plug of your headphones into the HEADPHONE jack on the side of the unit.

6. OPERATING INSTRUCTIONS

6.1 Loading a CD

1. Gently press the OPEN button or slide the latch to open the CD compartment lid.
2. Place a CD with the label side facing up onto the center spindle.
3. Press down gently on the center of the CD until it clicks into place.
4. Close the CD compartment lid firmly until it latches.

6.2 Basic Playback

- **To Play:** Press the PLAY/PAUSE (►/--) button. The CD will start playing from the first track, or from where it was last paused.
- **To Pause:** Press the PLAY/PAUSE (►/--) button during playback. Press again to resume.
- **To Stop:** Press the STOP (■) button.
- **To Skip Tracks:** Press the SKIP/SEARCH (►►) button to go to the next track. Press the SKIP/SEARCH (◀◀) button to go to the beginning of the current track, or press twice to go to the previous track.
- **To Search:** During playback, press and hold the SKIP/SEARCH (►►) button to fast-forward, or the SKIP/SEARCH (◀◀) button to fast-rewind. Release the button to resume normal playback.
- **Volume Adjustment:** Rotate the VOLUME control to adjust the listening level.

6.3 Electronic Anti-Shock System (EASS)

The XP-V5260C features a 48-second EASS to prevent audio interruptions caused by bumps or vibrations. This system stores audio data in a buffer, allowing for continuous playback even if the laser momentarily loses track. The EASS activates automatically during playback.

6.4 Digital Sound Level (DSL) Bass Boost

Press the DSL button to activate or deactivate the bass boost function. When activated, the audio output will have enhanced low-frequency response.

6.5 Playback Modes

Press the MODE button repeatedly to cycle through different playback modes:

- **Repeat 1:** Repeats the current track.
- **Repeat All:** Repeats all tracks on the CD.

- **Random:** Plays tracks in a random order.
- **Intro:** Plays the first few seconds of each track.
- **Normal Play:** Plays tracks in sequential order without repetition.

6.6 CD-R/RW Playback

This unit is compatible with both commercially produced audio CDs and user-recorded CD-R/RW discs. Ensure that CD-R/RW discs are finalized after recording for proper playback.

7. MAINTENANCE

7.1 Cleaning the Unit

- Wipe the exterior of the unit with a soft, dry cloth.
- Do not use abrasive cleaners, waxes, or solvents.
- To clean the CD lens, use a commercially available CD lens cleaner disc.

7.2 Battery Care

- Remove batteries if the unit will not be used for an extended period to prevent leakage.
- Do not mix old and new batteries, or different types of batteries.
- Dispose of used batteries according to local regulations.

7.3 Storage

Store the unit in a cool, dry place away from direct sunlight and extreme temperatures.

8. TROUBLESHOOTING

If you experience problems with your CD player, please refer to the following table for possible solutions:

Problem	Possible Cause	Solution
No power	Batteries are dead or inserted incorrectly. AC adapter not connected or faulty.	Replace batteries, check polarity. Ensure AC adapter is securely connected to unit and outlet.
CD does not play / "NO DISC" displayed	CD inserted incorrectly. CD is dirty or scratched. CD compartment lid not closed.	Insert CD with label side up. Clean CD with a soft cloth. Close lid firmly. Try another CD.
Skipping or distorted sound	CD is dirty or scratched. Unit is subjected to excessive vibration.	Clean CD. Ensure unit is on a stable surface or allow EASS to buffer.
No sound from headphones	Headphones not plugged in correctly. Volume too low. Headphones faulty.	Ensure headphones are fully inserted. Increase volume. Try different headphones.

9. SPECIFICATIONS

Feature	Specification
Model	XP-V5260C

Feature	Specification
Supported Disc Formats	CD, CD-R, CD-RW
Anti-Skip Buffer	48 seconds (EASS)
Power Supply	2 x AA batteries (DC 3V) or DC 4.5V AC adapter
Battery Life	Up to 32 hours (with alkaline batteries)
Audio Output	3.5mm Stereo Headphone Jack
Dimensions (Approx.)	5.6 x 5.4 x 2.1 inches (Package Dimensions)
Weight (Approx.)	0.8 ounces (Item Weight)
Special Feature	Portable, DSL Bass Boost

10. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official Aiwa website. Keep your proof of purchase for warranty claims.