

[manuals.plus](#) /

› [Nikon](#) /

› [Nikon EN-EL15 Rechargeable Li-Ion Battery Instruction Manual](#)

Nikon EN-EL15

Nikon EN-EL15 Rechargeable Li-Ion Battery Instruction Manual

Model: EN-EL15

INTRODUCTION

This manual provides essential information for the safe and effective use of your Nikon EN-EL15 Rechargeable Li-Ion Battery. The EN-EL15 battery is compatible with a range of Nikon DSLR cameras, including the D7000, V1, D600, D800, D800E, D7100, D610, D810, D810A, D750, D7200, and D500.



Image: Nikon EN-EL15 Rechargeable Li-Ion Battery. This image displays the compact, black lithium-ion battery with the Nikon logo and "Nikon Lithium Ion Battery Pack" text visible on its surface.

SETUP AND INSTALLATION

To prepare your Nikon EN-EL15 battery for use, follow these steps for proper installation into your compatible Nikon camera.

- Open the Battery Chamber:** Locate the battery chamber cover on the bottom of your camera. Slide the latch to open the cover.
- Insert the Battery:** Align the battery with the orientation indicated inside the camera's battery chamber. Gently slide the battery into the compartment until it clicks into place. Ensure the battery is fully seated.
- Close the Battery Chamber:** Close the battery chamber cover and slide the latch to secure it.

Video: This video demonstrates the process of inserting an EN-EL15 battery into a Nikon camera, showing the correct orientation and secure placement.

OPERATING THE BATTERY

Once installed, the EN-EL15 battery powers your Nikon camera. The camera's display will typically show the remaining battery level. For optimal performance, ensure the battery is fully charged before extended use.

- **Battery Life:** Battery life varies based on camera usage, ambient temperature, and settings (e.g., frequent use of Live View, flash, or video recording will consume power faster).
- **Temperature Considerations:** Extreme temperatures can affect battery performance and capacity. Avoid using the battery in very cold or very hot environments.

MAINTENANCE AND CHARGING

Proper charging and maintenance are crucial for extending the lifespan and ensuring the safety of your EN-EL15 battery.

Charging Instructions:

1. **Use a Compatible Charger:** Always use a Nikon-approved charger or a compatible third-party charger designed for the EN-EL15 battery.
2. **Insert Battery:** Place the battery into the charger, ensuring correct alignment of the contacts.
3. **Connect Power:** Plug the charger into a power outlet. The charging indicator light on the charger will typically illuminate (e.g., red) to show charging is in progress.
4. **Monitor Charging:** The indicator light will change (e.g., to green) when charging is complete. Disconnect the charger from the power source and remove the battery once fully charged.



Video: This video demonstrates the use of a dual-bay charger for EN-EL15 batteries, showing how to insert batteries and the indicator lights for charging status.

Storage and Care:

- **Long-Term Storage:** For extended storage, charge the battery to approximately 50% capacity and store it in a cool, dry place away from direct sunlight.
- **Avoid Short Circuits:** Keep battery terminals clean and avoid contact with metal objects to prevent short circuits.
- **Disposal:** Do not dispose of batteries in fire. Follow local regulations for proper disposal of lithium-ion batteries.

TROUBLESHOOTING

If you encounter issues with your EN-EL15 battery, consider the following common troubleshooting steps:

- **Battery Not Charging:**
 - Ensure the charger is properly connected to a power source and the battery is correctly inserted.
 - Check for any debris or corrosion on the battery terminals or charger contacts.
 - Try a different power outlet or USB port if using a USB charger.
- **Short Battery Life:**
 - Verify the battery is fully charged before use.
 - Reduce power-intensive camera features like Live View, continuous shooting, or flash usage.
 - Extreme temperatures can reduce battery performance.
 - If the battery is old, its capacity may have degraded, and replacement might be necessary.
- **Battery Not Recognized by Camera:**
 - Remove and reinser the battery to ensure proper contact.
 - Ensure the battery is a genuine Nikon EN-EL15 or a fully compatible third-party equivalent.
 - Check for any firmware updates for your camera, as these sometimes include battery compatibility improvements.

SPECIFICATIONS

Model Number	EN-EL15
Brand	Nikon
Battery Cell Composition	Lithium Ion
Battery Capacity	1900 Milliamp Hours
Product Dimensions	0.8 x 1.6 x 2.2 inches
Item Weight	3.04 ounces
Recommended Uses	Camera
Compatible Cameras	Nikon D7000, V1, D600, D800, D800E, D7100, D610, D810, D810A, D750, D7200, D500

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the official Nikon website or contact Nikon customer service directly. The battery itself may have specific warranty terms from Nikon. For third-party batteries, consult the manufacturer's documentation.

Some third-party batteries may list support contact information directly on the battery label, such as: Support: (718)677-0239 (as seen on some compatible batteries).

© 2024 Nikon Corporation. All rights reserved. Information in this manual is subject to change without notice.