



[Manuals.plus](#) /

› [Kingston Brass](#) /

› Kingston Brass KSPR3961 Pop-Up Rod Instruction Manual

Kingston Brass KSPR3961

Kingston Brass KSPR3961 Pop-Up Rod Instruction Manual

Model: KSPR3961

INTRODUCTION

This manual provides detailed instructions for the installation, operation, and maintenance of your Kingston Brass KSPR3961 Pop-Up Rod. This component is designed to work with compatible Kingston Brass faucets, enabling the control of your sink drain stopper. Please read these instructions carefully before proceeding with installation or use.

PRODUCT OVERVIEW AND DIMENSIONS

The Kingston Brass KSPR3961 is a decorative pop-up rod, fabricated from solid brass material for durability and reliability. It measures 11-11/16 inches in length and features a polished chrome finish.



Figure 1: Technical drawing illustrating the dimensions of the Kingston Brass Pop-Up Rod (KSPR3960 series, including KSPR3961). The diagram shows a total length of 11-1/8 inches for the rod, a rod diameter of 3/16 inches, and the decorative knob at the top measuring 7/8 inches in height and 15/16 inches in diameter. This image provides critical measurements for compatibility and installation.

SETUP AND INSTALLATION

This pop-up rod is designed to integrate with a compatible Kingston Brass faucet and drain assembly (e.g., KS3961 series). Professional installation is recommended. Ensure all necessary tools and components are available before beginning.

1. **Preparation:** Turn off the water supply to the sink. Clear the area under the sink for access to the drain assembly.
2. **Identify Components:** Locate the existing pop-up rod mechanism on your faucet and the drain stopper assembly. The new rod will replace the old one or be installed as part of a new faucet setup.
3. **Connect to Lift Rod Strap:** Insert the bottom end of the pop-up rod into the designated hole on the lift rod strap (clevis strap) of the drain assembly. Secure it with the provided screw or nut, ensuring a firm connection that allows free movement.
4. **Insert into Faucet Body:** Guide the top end of the pop-up rod through the opening in the back of the faucet body.
5. **Test Operation:** Once connected, gently push and pull the pop-up rod to ensure it smoothly operates the drain stopper. Adjust the connection point on the lift rod strap if the stopper does not fully open or close.
6. **Final Check:** Turn on the water supply and check for any leaks around the drain assembly.

Note: Specific installation steps may vary slightly depending on the exact faucet and drain model. Refer to your faucet's instruction manual for detailed drain assembly instructions.

OPERATING INSTRUCTIONS

The Kingston Brass KSPR3961 Pop-Up Rod provides simple control over your sink's drain stopper.

- **To Close the Drain:** Push the pop-up rod downwards. This action will lower the drain stopper, sealing the sink basin.
- **To Open the Drain:** Pull the pop-up rod upwards. This action will raise the drain stopper, allowing water to drain from the sink basin.

Ensure the rod moves freely without excessive force. If resistance is encountered, check for obstructions or misalignment in the drain assembly.

MAINTENANCE

Regular maintenance will ensure the longevity and smooth operation of your pop-up rod.

- **Cleaning:** Clean the polished chrome finish regularly with a soft, damp cloth. Avoid abrasive cleaners, harsh chemicals, or scouring pads, as these can damage the finish. Mild soap and water are sufficient for most cleaning.
- **Lubrication:** If the rod begins to stick or operate roughly, a small amount of silicone-based lubricant can be applied to the pivot points of the lift rod strap and where the rod passes through the faucet body. Do not use petroleum-based lubricants, as they can damage rubber components.
- **Inspection:** Periodically inspect the rod and its connection points for any signs of wear, corrosion, or damage. Ensure all screws and nuts are snug.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Pop-up rod is stiff or difficult to move.	Accumulation of mineral deposits or debris; lack of lubrication; misalignment.	Clean the rod and pivot points. Apply silicone lubricant. Check for proper alignment of the lift rod strap and drain stopper.
Drain stopper does not fully open or close.	Incorrect adjustment of the lift rod strap; obstruction in the drain.	Adjust the connection point of the pop-up rod to the lift rod strap. Clear any debris from the drain.
Water leaks around the drain assembly.	Improperly sealed drain assembly; loose connections.	This issue is typically related to the drain assembly itself, not the pop-up rod. Re-seal the drain assembly with plumber's putty or silicone sealant. Tighten all connections.

SPECIFICATIONS

Model Number: KSPR3961

Material: Solid Brass

Finish: Polished Chrome

Length: 11-11/16 inches (approx. 29.69 cm)

Item Weight: 54 g (approx. 1.9 oz)

UPC: 663370177507

WARRANTY AND SUPPORT

For information regarding warranty coverage and customer support, please refer to the documentation provided with your original Kingston Brass faucet or visit the official Kingston Brass website. This pop-up rod is a component part and its

warranty may be covered under the main faucet assembly.

