



Manuals.plus /

› Emerson /

› Emerson EM60 Talking Caller ID Box User Manual

Emerson EM60

Emerson EM60 Talking Caller ID Box User Manual

Model: EM60

INTRODUCTION

This manual provides instructions for the setup, operation, and maintenance of your Emerson EM60 Large Display Talking Caller ID Box. Please read these instructions carefully before using the device to ensure proper functionality and longevity.

PACKAGE CONTENTS

Verify that all items are present in the package:

- Emerson EM60 Talking Caller ID Box
- AC Power Adapter
- Telephone Line Cord
- User Manual (this document)

SETUP

1. Power Connection

Connect the supplied AC power adapter to the DC IN jack on the back of the EM60 unit and then plug the adapter into a standard electrical outlet. For battery backup, insert 4 AAA batteries (not included) into the battery compartment, observing correct polarity. The batteries provide power during outages, preserving caller ID memory.

2. Telephone Line Connection

Connect one end of the telephone line cord to the LINE jack on the back of the EM60 unit. Connect the other end of the telephone line cord to your wall telephone jack. If you are connecting a telephone to the EM60, connect it to the PHONE jack on the back of the unit.



Figure 1: Emerson EM60 Talking Caller ID Box. This image displays the front of the device with its large, backlit display and control buttons.

OPERATING INSTRUCTIONS

Caller ID Display

When an incoming call is received, the EM60 will display the caller's name and number on its large, backlit screen. The display will illuminate to enhance visibility.

Number Announce Feature

The Talking Caller ID feature audibly announces the incoming caller's number. This feature can be enabled or disabled via the unit's settings (refer to the on-screen menu for specific steps).

Memory Function (60 Numbers)

The EM60 stores up to 60 incoming caller ID records. Use the navigation buttons (typically **UP** and **DOWN** arrows) to scroll through the stored call history. Press the **VIEW** or **SELECT** button to view details of a specific call record.

Time and Date Setting

The unit automatically sets the time and date upon receiving the first caller ID signal. Manual adjustment options are available through the menu settings if required.

MAINTENANCE

Cleaning

To clean the EM60, use a soft, dry cloth. Do not use liquid cleaners or aerosol sprays, as these may damage the unit. Ensure the device is unplugged from the power source before cleaning.

Battery Replacement

If the display becomes dim or the memory function is inconsistent during power outages, replace the 4 AAA batteries in the battery compartment. Always replace all batteries at the same time with new ones of the same type.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No display or dim display	No power or low batteries.	Ensure AC adapter is securely plugged in. Replace AAA batteries if installed.
No Caller ID information displayed	Caller ID service not activated or incorrect phone line connection.	Contact your telephone service provider to confirm Caller ID service is active. Check telephone line cord connection to the wall jack and EM60 unit.
Number Announce not working	Feature disabled or volume too low.	Check the unit's settings to ensure Number Announce is enabled. Adjust volume settings.
Incorrect time/date	First Caller ID signal not received or manual setting required.	Wait for an incoming call with Caller ID. If issue persists, manually set time/date via menu.

SPECIFICATIONS

- **Model:** EM60
- **Brand:** Emerson
- **Telephone Type:** Corded
- **Power Source:** Corded Electric (AC Adapter)
- **Battery Backup:** 4 x AAA batteries (not included)
- **Answering System Type:** Digital
- **Compatible Devices:** PSTN, Standard Landline Networks
- **Multiline Operation:** Single-Line Operation
- **Caller ID:** Yes
- **Memory Capacity:** 60 numbers
- **Item Dimensions:** 17.3 x 9.7 x 10.2 Centimeters

- **Item Weight:** Approximately 0.9 Pounds
- **Manufacturer:** Emerson
- **UPC/GTIN:** 803982995391, 680079560416, 777782631769, 069060016970

WARRANTY AND SUPPORT

Information regarding product warranty and customer support is typically provided with the product packaging or available on the manufacturer's official website. Please refer to the documentation included with your purchase or visit the Emerson website for detailed warranty terms and support contact information.

