

SeKi 30788

SeKi Slim Universal Learning Remote Control

MODEL 30788 INSTRUCTION MANUAL

1. Introduction

Thank you for choosing the SeKi Slim Universal Learning Remote Control. This remote is designed to simplify your home entertainment experience by consolidating the essential functions of your existing infrared (IR) remote controls into one compact device. With its learning function, you can easily program the SeKi Slim to control your television, VCR, audio devices, or stereo systems. This manual will guide you through the setup, operation, and maintenance of your new remote control.


2. Safety Information

- Keep the remote control away from water or other liquids.
- Do not expose the remote control to direct sunlight or extreme temperatures.
- Avoid dropping the remote control or subjecting it to strong impacts.
- Dispose of used batteries according to local regulations. Do not mix old and new batteries, or different types of batteries.
- Keep batteries out of reach of children.

3. Product Overview

The SeKi Slim remote control is a universal learning remote featuring a minimalist design with 6 large, easy-to-press buttons. It is compatible with a wide range of infrared-controlled devices, including televisions, VCRs, audio devices, and stereo systems. Its compact and ergonomic design ensures comfortable handling.



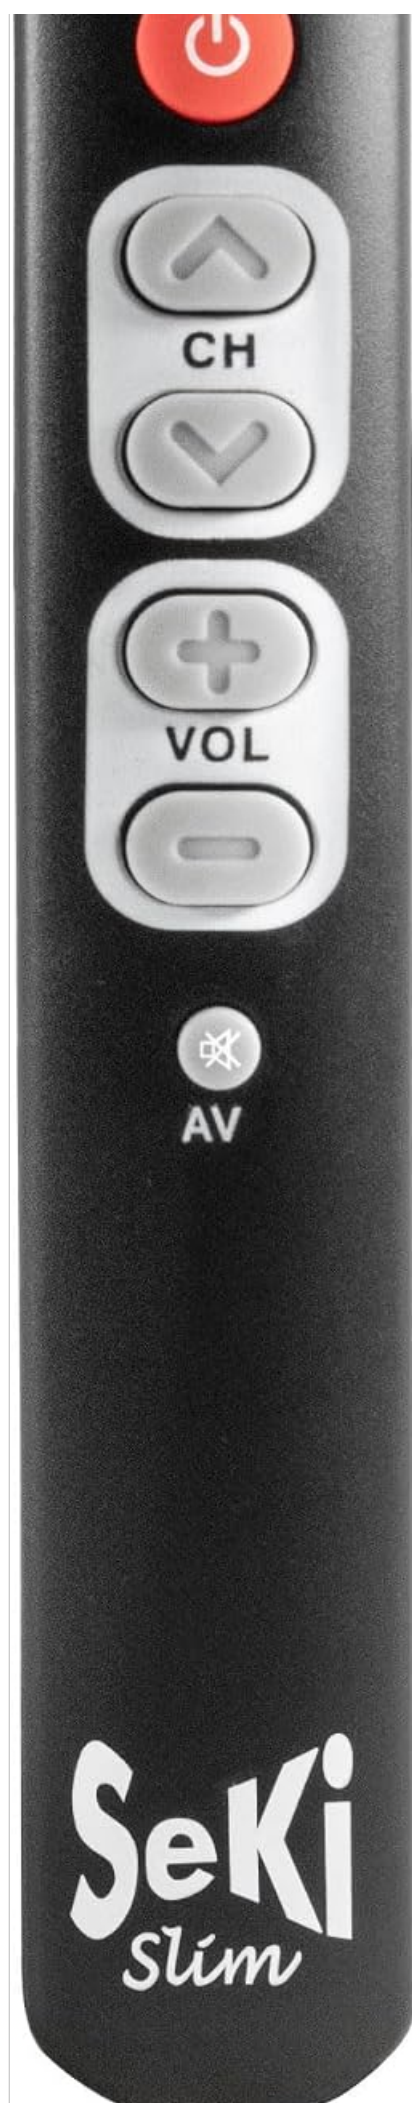

Front view of the SeKi Slim Universal Learning Remote Control, showcasing its 6 main buttons: Power, Channel Up, Channel Down, Volume Up, Volume Down, and AV input.



The SeKi Slim remote is available in a variety of colors, offering a personalized touch to your home entertainment setup.

4. Setup

4.1 Battery Installation

The SeKi Slim remote requires two AAA batteries (not included). To install the batteries:

1. Open the battery compartment cover on the back of the remote control.
2. Insert two AAA batteries, ensuring the correct polarity (+ and -) as indicated inside the compartment.
3. Close the battery compartment cover securely.



Image showing the open battery compartment of the SeKi Slim remote, ready for AAA battery insertion.

4.2 Learning Function (Programming)

The SeKi Slim remote learns commands directly from your original remote control. Follow these steps to program each button:

1. **Position Remotes:** Place the SeKi Slim remote and your original remote control face-to-face on a flat surface. Ensure the infrared emitters are aligned and the distance between them is approximately 2 to 5 cm (1 to 2 inches).
2. **Enter Learning Mode:** Simultaneously press and hold the **POWER** and **CH ^** buttons on the SeKi Slim remote for a few seconds until the red LED indicator starts flashing rapidly. This indicates the remote is in learning mode.
3. **Select Button to Program:** Briefly press the button on the SeKi Slim remote that you wish to program (e.g., **POWER**). The LED will illuminate continuously, waiting for a signal.
4. **Transmit Signal:** Press and hold the corresponding button on your original remote control (e.g., the **POWER** button of your TV remote). Once the SeKi Slim successfully receives the signal, its LED will flash slowly twice, then resume rapid flashing. Release the button on your original remote.
5. **Repeat for Other Buttons:** Repeat steps 3 and 4 for all other buttons you wish to program **CH ^**, **CH v**, **VOL +**,

VOL -, AV).

6. **Exit Learning Mode:** To exit the programming procedure, simultaneously press and hold the **POWER** and **CH ^** buttons on the SeKi Slim remote again. The LED indicator will turn off.

Note: You can reprogram individual buttons at any time by repeating the steps above for that specific button. Ensure your original remote has working batteries and a clear line of sight during the learning process.



Illustration of the SeKi Slim remote control in the process of learning a command from an original remote, with infrared signals indicated.

5. Operating Instructions

Once programmed, operating the SeKi Slim remote is straightforward:

- **POWER:** Turns your device on or off.
- **CH ^ / CH v:** Changes channels up or down.
- **VOL + / VOL -:** Increases or decreases the volume.

- **AV:** Switches between input sources (e.g., TV, HDMI 1, HDMI 2).

Point the SeKi Slim remote directly at the infrared receiver of your device and press the desired button. Ensure there are no obstructions between the remote and the device.

6. Maintenance

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use abrasive cleaners or solvents.
- **Battery Replacement:** Replace batteries when the remote's performance diminishes or the LED indicator does not light up during operation. Always replace both batteries at the same time.
- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage.

7. Troubleshooting

Problem	Possible Cause	Solution
Remote does not respond.	Dead or incorrectly inserted batteries.	Check battery polarity or replace with new AAA batteries.
Learning function fails.	Original remote batteries are low; remotes not aligned; too far apart; ambient light interference.	Ensure original remote has fresh batteries. Re-align remotes (2-5 cm). Try in a dimly lit room. Repeat learning steps carefully.
Short operating range.	Low batteries; obstruction; strong light source.	Replace batteries. Ensure clear line of sight to device. Avoid strong light sources near the device's IR receiver.
Button performs incorrect function.	Incorrect programming.	Re-program the specific button following the learning function steps (Section 4.2).

8. Specifications

Brand: SeKi

Model Name: 30788

Color: Black

Special Feature: IR, Universal, Learning Function

Maximum Number of Supported Devices: 1

Compatible Devices: Televisions, VCRs, Audio Devices, Stereo Systems

Connectivity Technology: Infrared (IR)

Number of Buttons: 6


Controller Type: Button Control


Maximum Range: 6 Meters

Battery Type: 2 x AAA (not included)

Item Dimensions (L x W x H): 17.5 x 2.9 x 2 cm

Country of Origin: Germany

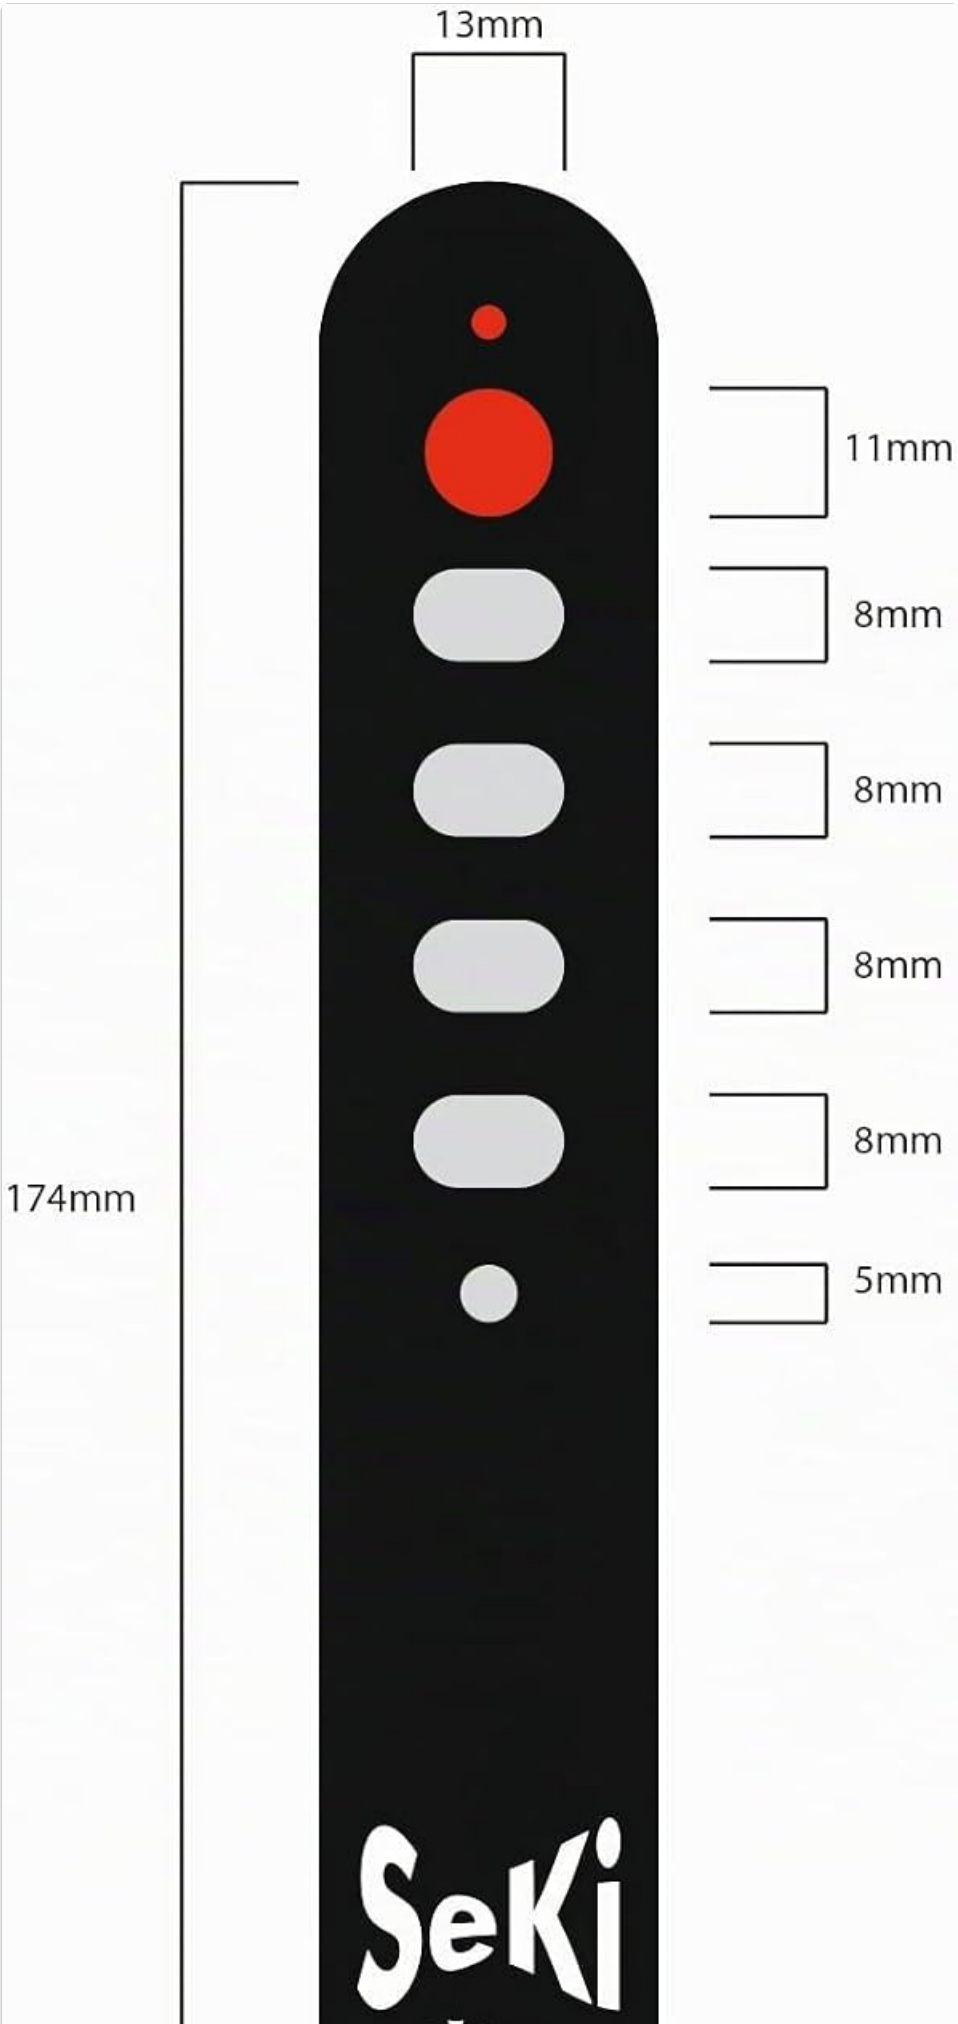

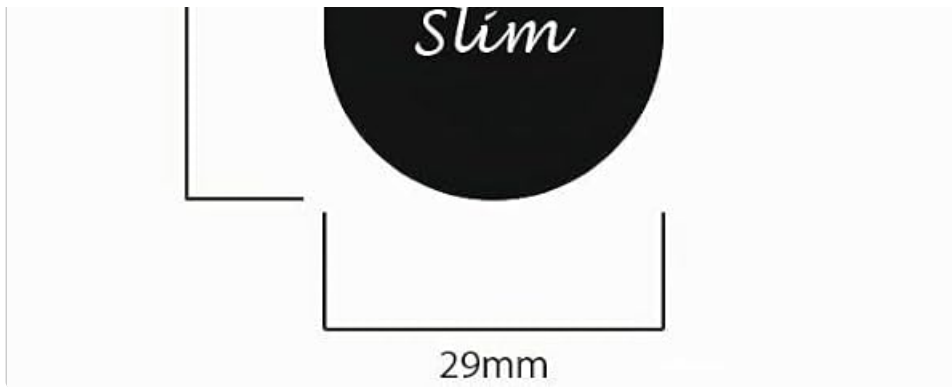

Dimensional diagram of the SeKi Slim remote control, indicating its length, width, and button spacing.

9. Warranty and Support

The SeKi Slim Universal Learning Remote Control comes with a **2-year manufacturer's warranty**. Please retain your proof of purchase for warranty claims.

For technical support or warranty inquiries, please contact your retailer or the manufacturer directly. Contact information can typically be found on the product packaging or the manufacturer's official website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question