

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [ViewSonic](#) /

› [ViewSonic VFD823-50 8-Inch Digital Photo Frame User Manual](#)

ViewSonic VFD823-50

ViewSonic VFD823-50 8-Inch Digital Photo Frame User Manual

Model: VFD823-50

INTRODUCTION

This manual provides instructions for the setup, operation, and maintenance of your ViewSonic VFD823-50 8-Inch Digital Photo Frame. Please read this manual thoroughly before using the device to ensure proper functionality and to maximize your viewing experience.

PRODUCT OVERVIEW

Key Features

- 8-inch LED-backlit display.
- High resolution of 800x600 for clear image quality.
- 4:3 aspect ratio to minimize image distortion.
- Integrated Calendar and Clock functions.
- Supports SD, MMC, and SDHC memory cards.
- Features an Auto On/Off function for power management.
- Compatible with JPG file/photo format.
- Includes USB host support for external devices.

Front View



This image shows the front of the digital photo frame, featuring its 8-inch display. The frame is black and has a clean, minimalist design. A vibrant image of a child blowing bubbles is visible on the screen.

Rear View and Controls



The rear view of the digital photo frame displays the control panel, including buttons for power, menu navigation, and playback. Also visible are the memory card slot (SD/MMC/SDHC), a USB host port, and the DC power input. A metallic stand is attached for upright positioning.

The control panel on the back of the frame includes buttons for:

- **Power Button:** To turn the frame on or off.
- **Menu Button:** To access the main menu and settings.
- **Navigation Buttons (Up, Down, Left, Right):** For moving through menu options and selecting images.
- **Enter/Play/Pause Button:** To confirm selections or control slideshow playback.
- **Exit/Return Button:** To go back to the previous screen or exit a menu.

SETUP

1. **Unpacking:** Carefully remove the digital photo frame and all accessories from the packaging. Ensure all components are present: the digital photo frame, power adapter, and user manual.
2. **Positioning:** Place the frame on a stable, flat surface. Adjust the stand on the back to achieve the desired viewing angle.

- Power Connection:** Connect the provided power adapter to the DC IN port on the back of the frame. Plug the other end of the adapter into a standard electrical outlet.
- Inserting a Memory Card:** Locate the SD/MMC/SDHC card slot on the side or back of the frame. Insert your memory card with photos facing the correct direction until it clicks into place. The frame supports JPG image format.
- Connecting a USB Device:** If using a USB flash drive, insert it into the USB host port on the back of the frame.
- Initial Power On:** Press the Power button on the back of the frame to turn it on. The frame will typically start displaying photos automatically or prompt you to select a source.

OPERATING INSTRUCTIONS

Basic Navigation

- Power On/Off:** Press the **Power** button once to turn the frame on. Press and hold the **Power** button for a few seconds to turn it off.
- Accessing Menus:** Press the **Menu** button to enter the main menu. Use the navigation buttons (Up, Down, Left, Right) to highlight options and the **Enter** button to select.
- Exiting Menus:** Press the **Exit/Return** button to go back to the previous menu level or to the photo display.

Photo Playback

- Starting a Slideshow:** Once a memory card or USB device is inserted, the frame will typically start a slideshow automatically. If not, navigate to the "Photo" or "Slideshow" option in the menu and select it.
- Pausing/Resuming:** During a slideshow, press the **Play/Pause** button to pause or resume playback.
- Navigating Photos:** Use the Left/Right navigation buttons to manually move to the previous or next photo during a paused slideshow or single photo view.
- Slideshow Settings:** In the menu, you can often find options to adjust slideshow interval, transition effects, and playback order (e.g., sequential, random).

Clock and Calendar Functions

- Accessing:** Navigate to the "Clock" or "Calendar" option in the main menu.
- Setting Time/Date:** Use the navigation buttons to adjust the time and date. Confirm settings with the **Enter** button.
- Display Mode:** Some models allow displaying the clock/calendar alongside a photo. Check the display settings for this option.

Auto On/Off Feature

- Setting Schedule:** In the system settings menu, locate the "Auto On/Off" or "Timer" option.
- Configuring Times:** Set desired power-on and power-off times for each day or for a daily schedule. This feature helps conserve energy.

MAINTENANCE

- Cleaning the Screen:** Use a soft, lint-free cloth to gently wipe the screen. For stubborn smudges, slightly dampen the cloth with water or a non-abrasive screen cleaner. Avoid harsh chemicals.
- Cleaning the Frame:** Wipe the exterior of the frame with a soft, dry cloth.
- Storage:** When not in use for extended periods, disconnect the power adapter and store the frame in a cool, dry place, away from direct sunlight and extreme temperatures.
- Avoid Liquids:** Do not expose the frame to water or other liquids. If liquid enters the device, immediately disconnect power and contact customer support.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Frame does not power on.	Power adapter not connected properly or power outlet issue.	Ensure the power adapter is securely connected to both the frame and a working electrical outlet. Try a different outlet.
No images displayed.	Memory card/USB not inserted correctly, no supported files, or incorrect source selected.	Ensure the memory card or USB device is fully inserted. Verify that the photos are in JPG format. Check the menu to ensure the correct source (SD/USB) is selected. Try another memory card or USB device.
Images appear distorted or stretched.	Image aspect ratio does not match the frame's 4:3 ratio, or display settings are incorrect.	Check the display settings in the menu for options to adjust image fit or aspect ratio. Ensure your photos are optimized for a 4:3 aspect ratio.
Buttons are unresponsive.	Temporary software glitch.	Disconnect the power adapter, wait 10 seconds, then reconnect it to restart the frame.

SPECIFICATIONS

Feature	Detail
Model Number	VFD823-50
Brand	ViewSonic
Screen Size	8 Inches
Resolution	800 x 600 pixels
Aspect Ratio	4:3
Display Type	LED Backlight
Supported Memory Cards	SD, MMC, SDHC
Supported Image Format	JPG
Connectivity	USB Host
Features	Clock, Calendar, Auto On/Off
Product Dimensions (LxWxH)	21.7 x 2.4 x 17.6 cm
Item Weight	450 g

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the warranty card included with your product or visit the official ViewSonic website. Keep your purchase receipt as proof of purchase for warranty claims.