



Manuals.plus /

- › TOTAL Chef /
- › TOTAL Chef Czech Cooker Electric Oven (Model TCCZ02SN) User Manual

TOTAL Chef TCCZ02SN

TOTAL Chef Czech Cooker Electric Oven (Model TCCZ02SN) User Manual

Brand: TOTAL Chef | Model: TCCZ02SN

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using your TOTAL Chef Czech Cooker. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- **Electrical Safety:** Always unplug the appliance from the outlet when not in use, before cleaning, or if left unattended. Do not immerse the heating unit, cord, or plug in water or other liquids.
- **Supervision:** Close supervision is necessary when any appliance is used by or near children.
- **Heat Precautions:** The appliance generates heat during operation. Use oven mitts or gloves when handling hot surfaces, especially the lid and cooking pot. Always place the cooker on a heat-safe, stable surface.
- **Proper Use:** Use the appliance only for its intended household purpose. Do not use outdoors.
- **Avoid Overheating:** Do not preheat or operate the cooker when empty. This can damage the non-stick coating and heating element.
- **Cord Safety:** Do not let the power cord hang over the edge of a table or counter, or touch hot surfaces.
- **Damage:** Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer support for assistance.

2. PRODUCT COMPONENTS

Familiarize yourself with the parts of your TOTAL Chef Czech Cooker:

- **Heating Unit:** The base unit containing the electrical components and temperature control.
- **Cooking Pot:** A removable, non-stick pot designed for various cooking methods.
- **Lid with Heating Element:** The lid contains the primary heating element and features a variable temperature control dial.
- **Heat-Safe Stands:** Protective stands for both the cooker base and the lid to safeguard your surfaces.



Figure 1: Overview of the TOTAL Chef Czech Cooker with ingredients.

3. SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Initial Cleaning:** Before first use, wash the non-stick cooking pot and the lid (excluding the electrical components) with warm, soapy water. Rinse thoroughly and dry. Wipe the exterior of the heating unit with a damp cloth.
3. **Assembly:** Place the cooking pot securely into the heating unit. Ensure the unit is placed on a stable, heat-safe surface, away from flammable materials.
4. **Power Connection:** Plug the power cord into a standard 120V AC electrical outlet.

4. OPERATING INSTRUCTIONS

The TOTAL Chef Czech Cooker offers versatile cooking options with its unique top-heating design and adjustable thermostat.

4.1. Temperature Control

The temperature is controlled via a simple dial on the lid's handle. It offers 5 heat settings, ranging from 195°F (90°C) to 356°F (180°C).



Figure 2: Adjustable thermostat dial for precise temperature control.

4.2. Cooking Functions

This electric oven can perform various cooking tasks:

- **Roasting:** Ideal for meats and vegetables.
- **Baking:** Suitable for cakes, breads, and casseroles.
- **Broiling:** Achieves browning from the top-mounted heating element.
- **Stewing/Simmering:** Perfect for slow-cooked meals like soups and stews.
- **Reheating:** Gently warms food without drying it out.



Figure 3: Example of food cooking in the non-stick pot.

4.3. Energy Efficiency

The powerful heating element uses less than 450 watts, offering significant electricity savings compared to traditional ovens.

4.4. Product Overview Video

Video 1: Official product overview demonstrating the features and use of the TOTAL Chef Czech Cooker.

5. MAINTENANCE AND CLEANING

Proper cleaning ensures the longevity and performance of your appliance.

- **Before Cleaning:** Always unplug the cooker and allow it to cool completely before cleaning.
- **Cooking Pot:** The non-stick cooking pot is dishwasher safe for easy cleaning. For hand washing, use warm, soapy water and a non-abrasive sponge.
- **Lid:** The lid can be washed with warm, soapy water. Avoid immersing the electrical components of the lid.
- **Heating Unit:** Wipe the exterior of the heating unit with a damp cloth. Do not immerse in water.

- **Storage:** Ensure all parts are clean and dry before storing. Store in a cool, dry place.



Figure 4: Cleaning the non-stick interior of the cooking pot.

6. TROUBLESHOOTING

If you encounter issues with your Czech Cooker, refer to the following common solutions:

- **Appliance Not Turning On:** Ensure the power cord is securely plugged into a functional electrical outlet. Check the temperature dial to ensure it is not set to 'Off'.
- **Uneven Cooking:** Verify that the lid is properly seated on the cooking pot. Ensure the temperature setting is appropriate for the food being cooked.
- **Electrical Issues:** If you observe smoke, unusual odors, or any electrical malfunction, immediately unplug the appliance and discontinue use. Contact customer support.
- **Food Sticking:** Ensure sufficient oil or liquid is used, especially when sauteing. The pot features a non-stick coating, but excessive heat or lack of lubrication can still cause sticking.

7. SPECIFICATIONS

Feature	Detail
Brand	TOTAL Chef
Model Number	TCCZ02SN
Capacity	3.23 Liters
Material	Stainless steel
Color	Black
Product Dimensions	12.25"D x 17"W x 8"H
Wattage	450 watts
Voltage	120 Volts
Control Method	Touch
Operation Mode	Manual
Dishwasher Safe (Pot)	Yes

8. WARRANTY AND SUPPORT

For warranty information or product support, please refer to the documentation included with your purchase or visit the official TOTAL Chef website. Keep your proof of purchase for any warranty claims.