

Manuals.plus /

- › **Bosch** /
- › Bosch 621101 Service T-Disc for Tassimo Coffee Machines Instruction Manual

## Bosch 621101

# Bosch 621101 Service T-Disc Instruction Manual

Essential for Setup, Cleaning, and Descaling of Tassimo Coffee Machines



## INTRODUCTION

---


The Bosch 621101 Service T-Disc is a genuine original replacement part designed for the maintenance of compatible Tassimo coffee machines. This plastic disc is crucial for the initial setup, regular cleaning, and descaling processes, ensuring optimal performance and longevity of your appliance.

It is compatible with various Tassimo models, including the T20, T40, T65, T85, and the TA1000, TA1080, TA1100, TA1200, and TA1400 Series.

## PRODUCT OVERVIEW



---

The Service T-Disc is a yellow plastic disc with a unique barcode. This barcode communicates with your Tassimo machine, instructing it to perform specific functions such as pumping hot water through the system for cleaning or descaling.

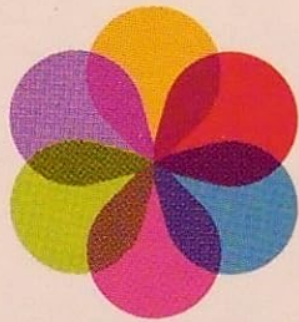

# TASSIMO

SERVICE T DISC

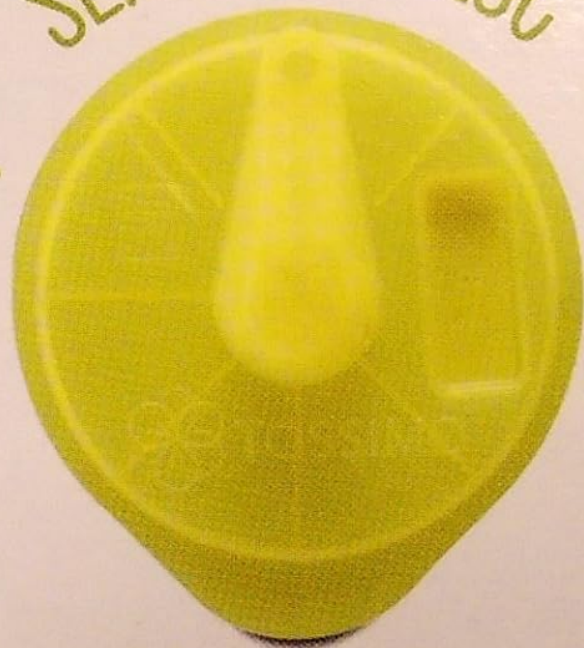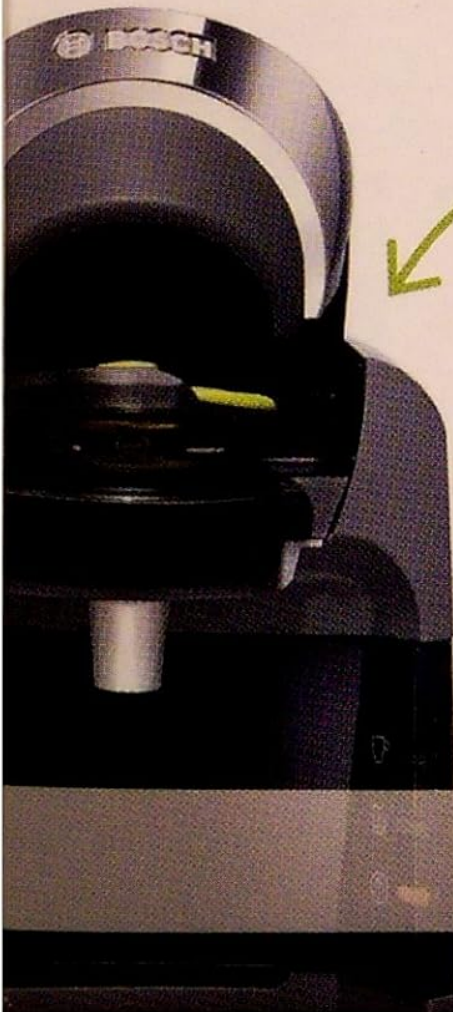

Original parts for



**BOSCH**

Image: The Bosch 621101 Service T-Disc shown in its retail packaging. The packaging highlights its use as a Service T Disc for Tassimo machines and confirms it as an original Bosch part.



Image: Close-up view of the yellow Bosch 621101 Service T-Disc. This disc is essential for the cleaning and descaling functions of Tassimo coffee machines.

## SETUP AND FIRST USE

---

The Service T-Disc is required when setting up your Tassimo machine for the first time or after a period of inactivity. It initiates the initial rinse cycle to prepare the machine for brewing.

1. Ensure the water reservoir is filled with fresh water.
2. Open the brew head and insert the Service T-Disc into the capsule holder, ensuring it is seated correctly.
3. Close the brew head firmly.
4. Place an empty cup or container (at least 500ml capacity) under the coffee outlet.
5. Press the start button to begin the initial rinse cycle. The machine will draw water from the reservoir and dispense it through the system.
6. Once the cycle is complete, discard the water from the cup. Your machine is now ready for use.

**de Service T DISC**

Zur Reinigung/Entkalkung eines Bosch TASSIMO Multi-Getränke-Automaten

**en Service T DISC**

To clean and descale the Bosch TASSIMO multi-beverage system

**fr T DISC de service**

Pour l'entretien et le détartrage des machines multi-boissons Bosch TASSIMO

**es T DISC de servicio**

Para limpiar y descalcificar la máquina multi-bébedas TASSIMO de Bosch

**no Service T DISC**

For rengjøring og avkalkning av Bosch TASSIMO kapselmaskin

**da Service T DISC**

Til rengøring og afkalkning af Bosch TASSIMO maskiner

**el Service T DISC**

Για τον καθαρισμό και την αφαλάτωση της μηχανής ροφημάτων Bosch TASSIMO

**pt Serviço T DISC**

para fazer a limpeza e descalcificação da máquina de bebidas TASSIMO de Bosch

**sv Service T DISC**

För rengöring och avkalkning av Bosch TASSIMO kapselmaskin

**ko 서비스 티디스크**

타시모 머신 세척 및 디스칼슘링(석회질 제거) 전용

**pl Service T DISC**

Do czyszczenia i odkamieniania ekspresów do kawy Bosch TASSIMO

**ro T DISC Service**

Pentru curățarea și decalcifierea aparatului Bosch TASSIMO

**sk Servisný T DISC**

Pre vyčistenie a odvápnenie Bosch TASSIMO nápojového automatu

**uk Сервісний Тдиск**

Для очищення та декальцинації машин для приготування напоїв Bosch TASSIMO

**ru Сервисный T DISC**

Для удаления накипи и очистки приборов для приготовления горячих напитков Bosch TASSIMO

**cs Servisní T DISC**

Pro čištění a odvápění Bosch TASSIMO nápojového automatu

**nl Service T DISC**

Voor de reiniging en ontkalking van Bosch TASSIMO machines



Article No.  
00311530

Article No. 00576836



4 242001 169768



**Made in China**

BSH Hausgeräte Service GmbH  
Carl-Wery-Straße 34, 81739 Munich, Germany

Image: Diagram illustrating the steps for using the Service T-Disc. It shows the disc being inserted into the machine and the cleaning process with water being dispensed into a cup.

## OPERATING FOR CLEANING AND DESCALING

---

The Service T-Disc is essential for the regular cleaning and descaling of your Tassimo coffee machine. The machine's indicator light (often a spray icon) will illuminate when descaling is required, typically after approximately 400 coffee preparations, depending on water hardness.

### Descaling Procedure:

1. Prepare a descaling solution according to your descaler product's instructions. For example, a common solution is 2 parts water to 1 part citric acid.
2. Fill the water reservoir with the prepared descaling solution.
3. Insert the Service T-Disc into the capsule holder, replacing any coffee capsule.
4. Close the brew head.
5. Place a container (at least 500ml capacity) under the coffee outlet to collect the dispensed solution.
6. Press and hold the start button (often marked with a cup icon) for approximately 10 seconds. The machine will begin the automatic descaling program.
7. The descaling program typically lasts about 30 minutes, and the machine will operate automatically. Ensure the collection container does not overflow.
8. Once the program is complete, empty and thoroughly rinse the water reservoir.
9. Refill the reservoir with clean, fresh water.
10. With the Service T-Disc still in place, run 4-5 empty cycles using only fresh water to thoroughly flush the machine and remove any residual descaling solution.
11. Your machine is now descaled and ready for normal operation.

### Hot Water Dispensing:

The Service T-Disc can also be used to dispense plain hot water for tea or other beverages. Simply insert the T-Disc, fill the reservoir with water, and press the start button. The machine will dispense hot water without brewing a coffee capsule.

## MAINTENANCE

---

The Service T-Disc itself requires minimal maintenance. After each use, rinse it under clean water and allow it to air dry before storing. Store the T-Disc in a safe place, such as the dedicated slot in your Tassimo machine (if available) or a small box, to prevent loss or damage to its barcode.

Regular use of the Service T-Disc for descaling, as outlined in the "Operating for Cleaning and Descaling" section, is the primary maintenance procedure for your Tassimo coffee machine.

## TROUBLESHOOTING

---

- **T-Disc Not Recognized:** Ensure the T-Disc is inserted correctly and the brew head is fully closed. If the barcode on the T-Disc is damaged (e.g., by water or wear), the machine may not recognize it. A damaged T-Disc will need to be replaced.
- **T-Disc Does Not Fit:** This Service T-Disc (Bosch 621101) is compatible with specific Tassimo models (T20, T40, T65, T85, TA1000, TA1080, TA1100, TA1200, TA1400 Series). It may not fit all Tassimo machines, such as the Tassimo T55, due to differences in barcode placement or disc shape. Always verify compatibility with your specific machine model.
- **Machine Not Descaling:** If the descaling process does not start or complete correctly, ensure you have

followed all steps in the "Operating for Cleaning and Descaling" section, including holding the start button for the required duration. Check that the water reservoir contains sufficient descaling solution.

## SPECIFICATIONS

<b>Brand</b>	Bosch
<b>Model Number</b>	621101
<b>Item Form</b>	Capsule (Disc)
<b>Material</b>	Plastic
<b>Specific Uses</b>	Coffee Maker Cleaning, Descaling, Hot Water Dispensing
<b>Compatible Tassimo Models</b>	T20, T40, T65, T85, TA1000, TA1080, TA1100, TA1200, TA1400 Series
<b>Item Weight</b>	0.02 Pounds
<b>Number of Items</b>	1

