

KitchenAid KGSSA

KitchenAid 80127 Stand Mixer Attachment User Manual

Model: KGSSA

INTRODUCTION

The KitchenAid 80127 Stand Mixer Attachment is a versatile accessory designed to expand the capabilities of your KitchenAid Stand Mixer. This comprehensive attachment set includes a food grinder, a rotor slicer/shredder, and a sausage stuffer, allowing you to prepare a wide variety of ingredients with ease. From grinding fresh meats for burgers to shredding cheeses and slicing vegetables, this attachment streamlines your food preparation tasks.

SAFETY INFORMATION

- Always ensure the stand mixer is turned off and unplugged before attaching or removing accessories.
- Keep hands and utensils away from moving parts during operation.
- Do not operate the attachment without all parts properly assembled.
- This attachment is designed for household use only.
- Do not immerse the main housing of the attachment in water. Refer to cleaning instructions for proper care.
- Keep out of reach of children.

PARTS LIST

The KitchenAid 80127 attachment set includes the following components:

- Food Grinder Housing
- Food Grinder Screw
- Food Grinder Blade
- Fine Grinding Plate (for meats)
- Coarse Grinding Plate (for firm vegetables & cheeses)
- Rotor Slicer/Shredder Housing
- Fine Shredding Cone
- Coarse Shredding Cone

- Thin Slicing Cone
- Thick Slicing Cone
- Food Pusher
- Sausage Stuffer Tubes (2 sizes)



Image: Overview of the KitchenAid 80127 Stand Mixer Attachment components, showing the food grinder and rotor slicer/shredder attached to stand mixers, along with various cones and stuffer tubes.

SETUP AND ASSEMBLY

Before assembly, ensure your KitchenAid Stand Mixer is unplugged and the power switch is off.

Attaching the Attachment to the Stand Mixer:

1. Turn the stand mixer off and unplug it.
2. Loosen the attachment knob on the front of the mixer head by turning it counter-clockwise.
3. Remove the attachment hub cover.
4. Insert the attachment shaft into the attachment hub, ensuring the shaft fits into the square socket.
5. Rotate the attachment back and forth if necessary until it seats properly in the hub.
6. Tighten the attachment knob clockwise until the attachment is securely fastened.

Assembling the Food Grinder:

1. Place the food grinder screw into the grinder housing.

2. Place the blade onto the end of the screw, ensuring the sharp edge faces outwards.
3. Select the desired grinding plate (fine or coarse) and place it over the blade.
4. Secure the assembly with the retaining ring, turning it clockwise until tight.

Assembling the Rotor Slicer/Shredder:

1. Open the rotor slicer/shredder housing by pressing the release button and lifting the top cover.
2. Insert the desired cone (fine shredding, coarse shredding, thin slicing, or thick slicing) into the housing. Ensure it clicks into place.
3. Close the top cover until it latches securely.

OPERATING INSTRUCTIONS

Always ensure ingredients are prepared to fit the feed tube and are free of bones or hard foreign objects.

Using the Food Grinder:

1. Attach the assembled food grinder to your stand mixer.
2. Place a bowl under the grinder outlet to collect processed food.
3. Turn the mixer to Speed 4 for grinding.
4. Feed ingredients into the feed tube using the food pusher. Do not use fingers or other utensils.
5. For best results when grinding meat, ensure meat is chilled and cut into small pieces.

Using the Rotor Slicer/Shredder:

1. Attach the assembled rotor slicer/shredder with the desired cone to your stand mixer.
2. Place a bowl under the outlet to collect sliced or shredded ingredients.
3. Turn the mixer to Speed 4 for slicing or shredding.
4. Feed ingredients into the feed tube using the food pusher.
5. For shredding cheese, ensure the cheese is firm and chilled for optimal results.

No official product videos from the seller are available for embedding.

Using the Sausage Stuffer (with Food Grinder):

1. Assemble the food grinder without the blade or grinding plate.
2. Attach the desired sausage stuffer tube to the end of the grinder housing.
3. Place the prepared sausage casing onto the stuffer tube.
4. Turn the mixer to Speed 4.
5. Feed the sausage mixture into the grinder feed tube using the food pusher, guiding the casing as it fills.

MAINTENANCE AND CLEANING

Proper cleaning ensures the longevity and hygiene of your attachment.

- **Disassembly:** Always disassemble the attachment completely after each use.
- **Hand Washing:** All parts of the attachment are recommended for hand washing. Wash with warm, soapy water immediately after use to prevent food from drying on surfaces.
- **Rinsing:** Rinse all parts thoroughly with clean water.

- **Drying:** Dry all parts completely before storing to prevent rust or corrosion, especially for metal components like blades and grinding plates.
- **Storage:** Store the attachment and its components in a clean, dry place.

Note: Do not wash any part of the attachment in a dishwasher unless specifically stated in the product's official user guide.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Attachment not fitting securely.	Attachment shaft not fully inserted or knob not tightened.	Ensure the shaft is fully seated in the square socket and tighten the attachment knob firmly.
Food not processing efficiently.	Ingredients too large, too soft, or attachment speed too low.	Cut ingredients into smaller pieces. Ensure ingredients are firm and chilled if applicable. Increase mixer speed to recommended setting (Speed 4).
Food grinder blade or plate jamming.	Bones or hard foreign objects in food.	Turn off and unplug mixer. Disassemble and clear obstruction. Ensure food is free of hard objects before grinding.
Slicer/shredder cones not rotating.	Cone not properly seated or housing not closed securely.	Ensure the cone is clicked into place and the top cover of the housing is latched securely.

SPECIFICATIONS

Brand: KitchenAid

Model Number: KGSSA (80127)

Color: White

Recommended Uses: Shredder, Slice, Grind

Product Care: Hand Wash

Product Dimensions: 4.5 x 8.8 x 7 inches

Item Weight: 5 pounds

Compatibility: Fits all Household KitchenAid Stand Mixers.

WARRANTY AND SUPPORT

For detailed warranty information and customer support, please refer to the official KitchenAid website or the warranty card included with your product.

You may also find additional resources and frequently asked questions on the [KitchenAid Store on Amazon](#).

A user guide in PDF format is also available: [User Guide \(PDF\)](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question