

Casio EFA-131D-1A1VDF

Casio Edifice EFA-131D-1A1VDF Analog-Digital Watch Instruction Manual

Model: EFA-131D-1A1VDF

1. INTRODUCTION

This manual provides detailed instructions for the proper use and maintenance of your Casio Edifice EFA-131D-1A1VDF Analog-Digital Watch. Please read this manual carefully to ensure correct operation and to fully utilize all features of your timepiece.

The Casio Edifice EFA-131D-1A1VDF features a black dial, stainless steel case, and stainless steel band. It combines analog timekeeping with digital display functions, offering versatility and precision.

- **Dial Color:** Black
- **Case Shape:** Round
- **Dial Glass Material:** Mineral
- **Band Color:** Silver
- **Band Material:** Stainless Steel
- **Watch Movement Type:** Quartz
- **Watch Display Type:** Analog-Digital
- **Case Material:** Stainless Steel
- **Case Diameter:** 49 millimeters
- **Clasp Type:** Deployment Clasp

2. SETUP AND INITIAL SETTINGS

Before using your watch, it is important to set the correct time and date.

2.1. Adjusting the Analog Time

1. Pull the crown (B) out to the second click. This will stop the second hand.
2. Rotate the crown to set the hour and minute hands to the desired time.
3. Push the crown back in to the normal position.

2.2. Adjusting the Digital Time and Date

The digital display can be adjusted using the buttons on the side of the watch.

1. Press the **MODE** button (C) repeatedly until the Timekeeping Mode is displayed.
2. Hold down the **ADJUST** button (A) until the city code starts to flash in the digital display. This indicates the setting screen.
3. Use the **FORWARD** button (D) and **REVERSE** button (E) to select the desired setting item (e.g., city code, DST, 12/24-hour format, hour, minute, year, month, day).
4. Use the **MODE** button (C) to move between setting items.
5. Once all settings are configured, press the **ADJUST** button (A) to exit the setting screen.



Image: Front view of the Casio Edifice EFA-131D-1A1VDF watch, highlighting the analog and digital displays, and the various control buttons for setting adjustments.

2.3. Band Adjustment

The stainless steel band can be adjusted for a comfortable fit. It is recommended to have this adjustment performed by a qualified jeweler or watch technician to prevent damage to the band or clasp.

3. OPERATING THE WATCH FUNCTIONS

Your Casio Edifice watch offers several functions accessible via the **MODE** button (C).

3.1. Mode Navigation

Press the **MODE** button (C) to cycle through the different modes:

- **Timekeeping Mode:** Displays the current time and date.
- **Stopwatch Mode:** Measures elapsed time.
- **Alarm Mode:** Sets daily alarms.
- **World Time Mode:** Displays the current time in various cities around the world.

3.2. Stopwatch Function

1. Navigate to the Stopwatch Mode using the **MODE** button (C).
2. Press the **START/STOP** button (D) to start the stopwatch.
3. Press the **START/STOP** button (D) again to stop the stopwatch.
4. Press the **RESET** button (E) to reset the stopwatch to zero.

3.3. Alarm Function

1. Navigate to the Alarm Mode using the **MODE** button (C).
2. Hold down the **ADJUST** button (A) until the alarm time starts to flash.
3. Use the **FORWARD** button (D) and **REVERSE** button (E) to set the desired alarm hour and minute.
4. Press the **ADJUST** button (A) to confirm and exit the setting screen.
5. Press the **FORWARD** button (D) in Alarm Mode to toggle the alarm ON/OFF.

3.4. Illumination (Light)

Press the **LIGHT** button (F) to illuminate the digital display for easy viewing in low-light conditions.



Image: Angled front view of the Casio Edifice EFA-131D-1A1VDF watch, illustrating the digital display and the positions of the control buttons for various functions.

4. MAINTENANCE

Proper maintenance ensures the longevity and performance of your watch.

4.1. Water Resistance

This watch is water resistant up to 100 meters (10 BAR). This means it is suitable for swimming and snorkeling, but not for scuba diving. Do not operate the watch buttons or crown while the watch is wet or submerged in water.

4.2. Cleaning

Wipe the watch case and band with a soft, dry cloth to remove dirt and moisture. For stainless steel bands, a soft brush with mild soapy water can be used, followed by thorough rinsing and drying. Avoid using chemical cleaners or solvents.

4.3. Battery Replacement

The watch is powered by a quartz movement. When the battery runs low, the display may dim or the watch may stop functioning. Battery replacement should be performed by an authorized Casio service center or a qualified watch technician to ensure proper sealing and water resistance.



Image: Back view of the Casio Edifice EFA-131D-1A1VDF watch, displaying the stainless steel case back where water resistance information is typically engraved, and the deployment clasp.

5. TROUBLESHOOTING

If you encounter issues with your watch, refer to the following common problems and solutions:

- **Watch is not keeping accurate time (Analog or Digital):**

Ensure the time settings are correct as described in Section 2. If the issue persists, the battery may be low and require replacement.

- **Digital display is blank or dim:**

This typically indicates a low battery. Replace the battery at an authorized service center.

- **Buttons are unresponsive:**

Check if the watch is wet. Do not operate buttons underwater. If the watch is dry and buttons are still unresponsive, there might be an internal malfunction requiring professional inspection.

- **Condensation inside the watch:**

If condensation appears inside the watch glass and does not clear quickly, it may indicate a breach in water resistance. Seek immediate professional service to prevent further damage.

6. SPECIFICATIONS

Feature	Detail
Model Number	EFA-131D-1A1VDF
Movement Type	Quartz
Display Type	Analog-Digital
Case Material	Stainless Steel
Case Diameter	49 Millimeters
Case Thickness	13 Millimeters
Band Material	Stainless Steel
Band Color	Silver
Dial Color	Black
Dial Glass Material	Mineral
Water Resistance Depth	100 Meters (10 BAR)
Item Weight	318 g
Product Dimensions	1.5 x 1.5 x 1.5 cm



Image: Close-up of the watch's case back, detailing engraved specifications such as water resistance and material composition.

7. WARRANTY AND SUPPORT

7.1. Warranty Information

Your Casio Edifice EFA-131D-1A1VDF watch comes with a **2 Years Domestic Warranty** from the manufacturer. This warranty covers manufacturing defects under normal use. Please retain your purchase receipt as proof of warranty.

7.2. Customer Support

For warranty claims, service, or further assistance, please contact Casio customer support or visit an authorized Casio service center. Contact details can typically be found on the official Casio website or your warranty card.