

[Manuals.plus](#) /

› [Dreambaby](#) /

› Dreambaby F803 EZY-CHECK® Oven Door Lock Instruction Manual

Dreambaby F803

Dreambaby F803 EZY-CHECK® Oven Door Lock Instruction Manual

Model: F803

INTRODUCTION

The Dreambaby EZY-CHECK® Oven Door Lock (Model F803) is designed to help prevent young children from opening hot oven doors, microwaves, dishwashers, washing machines, tumble dryers, and other household appliances. This device features an EZY-CHECK indicator that provides a quick visual confirmation of whether the lock is active or not. A red indicator signifies the appliance is unsecured, while a green indicator confirms it is safely locked.

This instruction manual provides essential information for the correct installation, operation, and maintenance of your Dreambaby EZY-CHECK® Oven Door Lock to ensure optimal child safety.

SAFETY INFORMATION

- Always ensure the EZY-CHECK indicator shows **green** to confirm the lock is active and the appliance is secured.
- This product is a deterrent and not a substitute for adult supervision.
- Regularly check the lock for proper adhesion and functionality.
- Do not use if any part of the lock is damaged or missing.

PACKAGE CONTENTS

- 1 x Dreambaby EZY-CHECK® Oven Door Lock (Model F803)

SETUP AND INSTALLATION

The Dreambaby EZY-CHECK® Oven Door Lock is designed for easy installation using strong, heat-resistant adhesive. No tools are required.

1. **Prepare the Surface:** Ensure the appliance surface where the lock will be applied is clean, dry, and free from grease or dust. Use a mild cleaner if necessary, and allow the surface to dry completely.
2. **Determine Placement:** Position the lock so that the main body is on the appliance frame and the locking arm can

securely engage with the appliance door. Ensure the lock does not interfere with the appliance's normal operation when unlocked. For ovens, place it high enough to be out of reach of small children but still accessible for adults.

3. **Peel Adhesive Backing:** Carefully peel off the protective backing from the adhesive pads on the back of the lock components.
4. **Apply the Lock:** Firmly press each part of the lock onto the prepared surfaces. Apply pressure for at least 30 seconds to ensure a strong bond.
5. **Allow to Cure:** For optimal adhesion, allow the adhesive to cure for at least 24 hours before regular use. This ensures the strongest possible bond.



Image: The Dreambaby EZY-CHECK Oven Door Lock securely installed on an oven, demonstrating its placement between the oven frame and door.

OPERATING INSTRUCTIONS

The EZY-CHECK® Oven Door Lock features a simple squeeze-and-release mechanism for adult operation and a clear indicator for lock status.

1. **To Lock:** Ensure the appliance door is fully closed. Push the locking arm into its housing until you hear a click and the EZY-CHECK indicator displays **green**. This confirms the lock is engaged and the appliance door is secured.
2. **To Unlock:** Simultaneously squeeze the two release buttons on the sides of the lock. While holding the buttons, pull the locking arm away from the appliance door. The EZY-CHECK indicator will display **red**, indicating the appliance is now unsecured and can be opened.



Image: The Dreambaby EZY-CHECK Oven Door Lock shown in an unlocked state, allowing the oven door to be opened. The red indicator would be visible in this state.

MAINTENANCE

To ensure the longevity and effectiveness of your Dreambaby EZY-CHECK® Oven Door Lock, follow these maintenance guidelines:

- **Cleaning:** Wipe the lock regularly with a damp cloth and mild soap. Avoid abrasive cleaners or solvents, as these can damage the plastic or adhesive.
- **Adhesion Check:** Periodically check the adhesive bond by gently attempting to move the lock. If it feels loose, consider replacing the lock or reapplying with new adhesive if possible (though replacement is generally recommended for safety products).
- **Functionality Check:** Test the squeeze-and-release mechanism and the EZY-CHECK indicator regularly to ensure they are working correctly.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Lock does not adhere properly or becomes loose.	Surface was not clean/dry during installation, insufficient curing time, or prolonged exposure to high heat.	Ensure surface is thoroughly cleaned and dried before installation. Allow 24 hours for adhesive to cure. If the adhesive has failed due to heat, the lock may need replacement.

Problem	Possible Cause	Solution
EZY-CHECK indicator does not change color.	Locking mechanism is jammed or damaged.	Ensure no debris is obstructing the mechanism. If the mechanism is damaged, discontinue use and replace the lock.
Lock is difficult to open or close.	Misalignment during installation or internal mechanism issue.	Check alignment. If the issue persists, the lock may be faulty and should be replaced.

SPECIFICATIONS

Model Number: F803

Product Dimensions: 19.5 x 11.7 x 3.5 cm

Weight: 40 g

Color: White

Material Composition: Polyacrylic

Batteries Required: No

Manufacturer: Dreambaby®

WARRANTY AND SUPPORT

For warranty information or product support, please refer to the packaging or contact Dreambaby customer service directly. Contact details can typically be found on the official Dreambaby website or product packaging.

Note: This product is designed as a safety aid. It is not a substitute for constant adult supervision.

