

[Manuals.plus](#) /

> [Sanyo](#) /

> Sanyo 7.0kg Fully Automatic Washing Machine SANYO ASW-P70D-W User Manual

Sanyo ASW-P70D-W

Sanyo 7.0kg Fully Automatic Washing Machine ASW-P70D-W User Manual

Model: ASW-P70D-W

INTRODUCTION

This user manual provides comprehensive instructions for the safe and efficient operation, installation, maintenance, and troubleshooting of your Sanyo 7.0kg Fully Automatic Washing Machine, model ASW-P70D-W. Please read this manual thoroughly before using the appliance and keep it for future reference.

SAFETY INFORMATION

To ensure safe operation and prevent damage to the appliance or injury to yourself and others, please observe the following safety precautions:

- Always connect the washing machine to a grounded power outlet.
- Do not operate the machine if the power cord or plug is damaged.
- Keep children and pets away from the washing machine during operation.
- Do not wash items that are soiled with flammable substances.
- Ensure the water supply and drain hoses are securely connected to prevent leaks.
- Do not open the lid during the spin cycle.
- Unplug the machine before cleaning or performing any maintenance.

PRODUCT OVERVIEW

The Sanyo ASW-P70D-W is a 7.0kg capacity fully automatic washing machine designed for efficient and convenient laundry care. It features a top-loading design with intuitive controls.

Main Components

- Control Panel
- Lid
- Washing Tub (Stainless Steel)
- Detergent Dispenser
- Lint Filter
- Water Inlet
- Drain Hose
- Power Cord



Figure 1: Front-top view of the Sanyo ASW-P70D-W washing machine. This image shows the overall design, including the control panel and the top lid.



Figure 2: Top view of the washing machine, illustrating the lid in both closed and open positions. The top image shows the lid closed, while the bottom image shows the lid open, revealing the washing tub.

SETUP

1. Unpacking

Carefully remove all packaging materials, including the base packaging and any protective films. Inspect the machine for any signs of damage during transit. Keep packaging materials away from children.

2. Installation Location

Place the washing machine on a firm, level surface to minimize vibration and noise during operation. Ensure there is adequate space around the machine for ventilation and access. Avoid direct sunlight or locations with high humidity.

3. Water Supply Connection

Connect the water inlet hose to the water tap and the water inlet valve on the back of the washing machine. Ensure connections are tight to prevent leaks. Use only the new hose sets provided with the appliance.

4. Drain Hose Connection

Position the drain hose to allow for proper drainage. The hose should be placed into a standpipe or over the edge of a sink, ensuring it is securely fixed to prevent displacement during the drain cycle. The height of the drain outlet should be between 80-100 cm from the floor.

5. Power Connection

Plug the power cord into a dedicated, grounded electrical outlet. Do not use extension cords or adapters. Ensure the voltage and frequency match the specifications listed on the machine's rating label.



Figure 3: Rear view of the washing machine, showing the water inlet and drain hose connections. The image displays the back panel of the machine and the two hoses required for water supply and drainage.

OPERATING INSTRUCTIONS

Control Panel Overview

The control panel allows you to select wash programs, adjust settings, and start/stop the washing cycle. Familiarize yourself with the buttons and indicators:



Figure 4: Detailed view of the control panel and the inside of the washing tub. The control panel features various buttons and indicators for program selection and operation.

- **Power Button:** Turns the machine on/off.
- **Start/Pause Button:** Starts or pauses the selected wash cycle.
- **Program Selector:** Dials or buttons to choose wash programs (e.g., Standard, Delicate, Quick).
- **Water Level:** Adjusts the water level according to the load size.
- **Course/Cycle Display:** Shows the current stage of the wash cycle.

Basic Washing Cycle

1. **Load Laundry:** Open the lid and place laundry loosely into the washing tub. Do not overload the machine.
2. **Add Detergent:** Add the appropriate amount of detergent and fabric softener to their respective dispensers.
3. **Close Lid:** Ensure the lid is securely closed.
4. **Power On:** Press the Power button.
5. **Select Program:** Choose the desired wash program using the program selector.
6. **Adjust Settings (Optional):** Adjust water level or other settings if necessary.
7. **Start Cycle:** Press the Start/Pause button to begin the wash cycle.
8. **Unload Laundry:** Once the cycle is complete, the machine will signal. Open the lid and remove your clean laundry.

Selecting Wash Programs

Your washing machine offers several wash programs tailored for different fabric types and soil levels. Refer to the control panel for specific program names and their recommended uses. Common programs include:

- **Standard:** For daily laundry with normal soil.
- **Delicate:** For fragile items requiring gentle washing.
- **Quick Wash:** For lightly soiled items or small loads that need a fast cycle.
- **Heavy Duty:** For heavily soiled items or sturdy fabrics.

MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your washing machine. Always unplug the machine before performing any cleaning or maintenance tasks.

1. Cleaning the Lint Filter

The lint filter collects lint and debris during washing. Clean it after every few washes to maintain drainage efficiency and prevent lint transfer to clothes.

1. Locate the lint filter (usually inside the tub or on the agitator).
2. Remove the filter by pulling it out or unlatching it.
3. Remove accumulated lint and rinse the filter under running water.
4. Reinsert the clean filter securely.

2. Cleaning the Detergent Dispenser

Residue from detergent and softener can build up. Clean the dispenser regularly to ensure proper dispensing.

1. Pull out the detergent dispenser drawer.
2. Rinse it thoroughly under warm water to remove any residue.

3. Use a small brush if necessary to clean stubborn buildup.
4. Wipe the dispenser housing clean and reinsert the drawer.

3. Cleaning the Washing Tub

To prevent odors and mold buildup, run a tub cleaning cycle periodically or clean manually.

- Use a washing machine cleaner or a mixture of vinegar and baking soda.
- Run an empty hot water cycle with the cleaning agent.
- Wipe down the inside of the tub and lid with a damp cloth after the cycle.

4. Exterior Cleaning

Wipe the exterior surfaces of the washing machine with a soft, damp cloth. Avoid abrasive cleaners or solvents that could damage the finish.

TROUBLESHOOTING

Before contacting customer service, please refer to the following table for common issues and their solutions:

| Problem | Possible Cause | Solution |
|------------------------------|--|--|
| Machine does not start | Power cord not plugged in; Lid not closed properly; Power outage. | Ensure power cord is securely plugged in; Close the lid completely; Check household circuit breaker. |
| No water supply | Water tap is closed; Water inlet hose is kinked or blocked; Water pressure is too low. | Open the water tap; Straighten the hose; Check household water pressure. |
| Machine vibrates excessively | Machine is not level; Laundry is unevenly distributed; Transit bolts not removed. | Adjust leveling feet; Redistribute laundry evenly; Ensure all transit bolts are removed during installation. |
| Water not draining | Drain hose is kinked or blocked; Drain filter is clogged. | Straighten the drain hose; Clean the drain filter. |
| Unpleasant odor from tub | Mold or detergent residue buildup. | Perform a tub cleaning cycle with a washing machine cleaner. Leave lid open after use to air dry. |

SPECIFICATIONS

- **Brand:** Sanyo Electric
- **Model:** ASW-P70D-W
- **Capacity:** 7.0 kg
- **Access Location:** Top
- **Human Interface Input:** Button
- **Batteries Used:** No
- **Batteries Included:** No
- **ASIN:** B0049Z8AFE

- **Date First Available on Amazon.co.jp:** 2010/10/30
-

WARRANTY AND SUPPORT

This Sanyo washing machine comes with a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, including warranty period and coverage details. For technical support, service, or to inquire about replacement parts, please contact Sanyo customer service through their official website or the contact information provided in your product documentation. Always have your model number (ASW-P70D-W) and purchase date ready when contacting support.
