

Pentel Z2-1N

Pentel Mechanical Pencil Eraser Refills Instruction Manual

Model: Z2-1N

Brand: Pentel

INTRODUCTION

This manual provides instructions for the proper use and maintenance of Pentel Z2-1N Mechanical Pencil Eraser Refills. These refills are designed to provide clean and efficient erasing for compatible Pentel mechanical pencils. Each box contains 12 tubes, with 4 erasers per tube, totaling 48 erasers.





Image: A green and white box containing Pentel Z2-1N Mechanical Pencil Eraser Refills. The box indicates "REFILL ERASERS Per tube 1 doz. tub. 4/tub. #Z2-1N".

SETUP AND INSTALLATION

To replace an old eraser or install a new one in your Pentel mechanical pencil, follow these steps:

1. **Remove the old eraser:** Gently pull the existing eraser out of the pencil's top cap. If the eraser is worn down, it may be very short.
2. **Access the refill tube:** Open one of the Pentel Z2-1N refill tubes. Each tube contains four individual erasers.
3. **Insert the new eraser:** Take a new eraser from the tube. Insert the new eraser firmly into the opening at the top of your mechanical pencil. Ensure it is seated securely.
4. **Test the fit:** Lightly press the eraser to ensure it does not fall out and is ready for use.



Image: A clear plastic tube containing four small, white Pentel Z2-1N eraser refills, ready for installation.

OPERATING INSTRUCTIONS

Using the Pentel Z2-1N eraser refills is straightforward:

- **Erase gently:** Apply light to moderate pressure when erasing to avoid damaging paper.
- **Cleanly remove marks:** The polyvinyl chloride material is designed to lift graphite cleanly without smudging or tearing the paper.
- **Rotate eraser:** As the eraser wears down, rotate the pencil to use different sections of the eraser for even wear and extended life.

MAINTENANCE

To ensure the longevity and effectiveness of your Pentel Z2-1N eraser refills:

- **Storage:** Store unused eraser refills in their original tubes and box in a cool, dry place away from direct sunlight. This prevents them from hardening or deteriorating.
- **Keep clean:** If the eraser surface becomes dirty with graphite residue, gently rub it on a clean piece of scrap paper to remove the buildup.

TROUBLESHOOTING

Here are some common issues and their solutions:

Problem	Solution
Eraser does not fit in pencil.	Ensure your mechanical pencil is compatible with Pentel Z2-1N refills. These are standard size for many Pentel pencils. Do not force the eraser.
Eraser leaves smudges.	Ensure the eraser surface is clean. Rub it on scrap paper to remove graphite buildup. Avoid excessive pressure.
Eraser wears down too quickly.	Apply lighter pressure when erasing. Rotate the eraser regularly to utilize all surfaces evenly.

SPECIFICATIONS

Attribute	Detail
Model Number	Z2-1N
Material Type	Polyvinyl Chloride (PVC)
Quantity per Tube	4 Erasers
Quantity per Box	12 Tubes (48 Total Erasers)
Item Weight	1.44 ounces
Product Dimensions	3.03 x 1.61 x 1.06 inches

WARRANTY AND SUPPORT

For information regarding product warranty or to seek further support, please visit the official Pentel website or contact their customer service. Specific warranty details are not provided in this manual. You can find more information and contact details on the [Pentel Store on Amazon](#).

© 2025 Pentel. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question