

## Monster 121713

# Monster Universal Learning Remote

Model: 121713 (Evolution 50)

### INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Monster Universal Learning Remote, Model 121713. This remote is designed to simplify your home entertainment experience by consolidating multiple remote controls into one easy-to-use device.



Figure 1: Monster Universal Learning Remote (Evolution 50) in its retail packaging. The image displays the remote's layout with various control buttons for media playback, channel, volume, and device selection.

### What's in the Box





# EVOLUTION™ 50

## CONTENTS



- Evolution 50 Remote
- User Guide
- 4 AAA Batteries

## CONTENU



- Télécommande Évolution 50
- Guide de l'utilisateur
- 4 piles AAA



Monster Green Packaging  
and Product Design

Emballage et design écologique  
du produit Monster

Empaque verde y diseño  
del producto de Monster

This package can be recycled. Recycling programs  
for this package may not exist in your area.

L'emballage est recyclable. Des programmes de recyclage pour cet  
emballage pourraient ne pas être disponibles dans votre région.

Este embalaje es reciclable. En su zona geográfica podría no  
haber programas de reciclado de este tipo de embalajes.



Figure 2: Side view of the product packaging, detailing the contents included with the Monster Universal Learning Remote.

- Monster Evolution 50 Universal Learning Remote
- User Guide (this document)
- 4 AAA Batteries

## SETUP

### Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards and lift to open.
3. Insert four (4) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery cover by sliding it back into place until it clicks securely.

### Initial Programming and Learning

The Monster Universal Learning Remote features both built-in codes for common devices and a learning function for less common or new devices. It uses infrared technology to communicate with your devices.





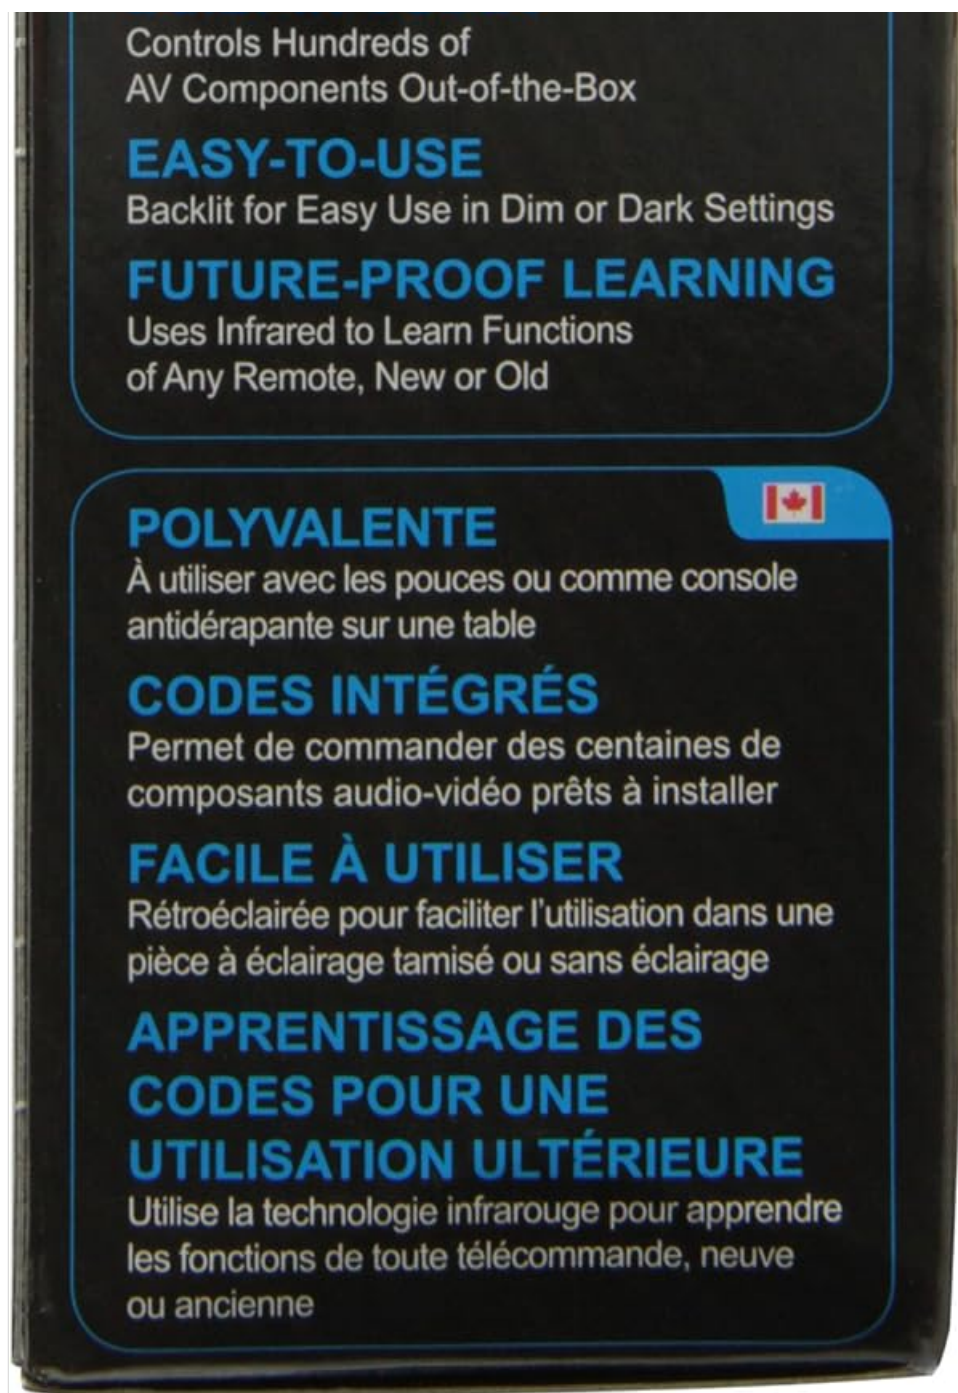


Figure 3: Side view of the product packaging, detailing key features such as built-in codes and future-proof learning capabilities.

### Using Built-in Codes

The remote comes pre-programmed with codes for hundreds of AV components. To use a built-in code:

1. Turn on the device you wish to control (e.g., Television).
2. Press and hold the corresponding device button on the remote (e.g., **TV**, **DVD**, **STB**, **AVR**).
3. While holding the device button, enter the 3-digit code for your device brand (refer to the separate code list provided with your remote or available online).
4. Release the device button. Test the remote's functions. If the device does not respond, try the next code for your brand.

### Using the Learning Function

The learning function allows the Monster remote to mimic signals from your original remote control.

1. Place the Monster remote and your original remote control on a flat surface, facing each other, with their

infrared emitters aligned and approximately 1-2 inches apart.

2. Press and hold the **SHIFT** button on the Monster remote until the indicator light blinks.
3. Press the device button on the Monster remote that corresponds to the device you want to program (e.g., **TV**).
4. Press the button on the Monster remote that you wish to teach a function (e.g., **POWER**). The indicator light will illuminate steadily.
5. Press and hold the corresponding button on your original remote (e.g., original remote's **POWER** button) until the indicator light on the Monster remote blinks rapidly, indicating successful learning.
6. Repeat step 4 and 5 for all other buttons you wish to program.
7. To exit learning mode, press the **SHIFT** button again.

## OPERATING THE REMOTE

The Monster Universal Learning Remote is designed for intuitive control of your entertainment system. Its ergonomic design and backlit buttons enhance usability in various lighting conditions.



Figure 4: Back view of the product packaging, illustrating the ergonomic design and highlighting the ease of use and button layout.

## Basic Controls

- **ON/OFF:** Powers your selected device on or off.
- **INPUT:** Cycles through input sources on your TV or receiver.
- **VOL +/-:** Adjusts the volume of the selected audio device.
- **CH +/-:** Changes channels on your TV or set-top box.
- **MUTE:** Mutes the audio.

- **Number Pad (0-9):** Direct channel entry or menu navigation.
- **Navigation Pad (Up, Down, Left, Right, ENTER):** Navigates menus and confirms selections.
- **PLAY, PAUSE, STOP, REW, FF, REC:** Media playback controls for DVD/Blu-ray players, DVRs, etc.

Advanced Features

- **Backlit Buttons:** The remote features backlighting for easy use in dim or dark settings. This feature activates automatically when buttons are pressed.
- **SHIFT Button:** The SHIFT button allows access to secondary functions of certain buttons, indicated by smaller icons or text. Press SHIFT once to activate, then press the desired function button.
- **Special Functions (Colored Buttons):** The red, green, yellow, and blue buttons typically correspond to specific functions within device menus or interactive services. Their function varies by device.

MAINTENANCE

Cleaning

To clean your remote, gently wipe the surface with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the remote's finish or internal components.

Battery Replacement

When the remote's performance degrades or the indicator light no longer illuminates, it is time to replace the batteries. Follow the battery installation steps outlined in the **Setup** section. Always replace all four AAA batteries at the same time with new ones.

TROUBLESHOOTING

If you encounter issues with your Monster Universal Learning Remote, refer to the following common problems and solutions:

| Problem                                    | Possible Cause  | Solution   |
|--|---|--|
| Remote not responding.                     | Dead batteries; remote out of range; IR sensor blocked; incorrect device selected.              | Replace batteries; ensure remote is within 10 meters of device; clear line of sight to device's IR sensor; press correct device button (TV, DVD, etc.).      |
| Learning function not working.             | Original remote batteries low; remotes not aligned; interference; incorrect learning procedure. | Ensure original remote has fresh batteries; align IR emitters precisely (1-2 inches apart); minimize ambient light; re-attempt learning procedure carefully. |
| Some buttons don't work after programming. | Button not learned correctly; device-specific function.   | Re-learn the specific button; some functions may not be supported by all devices or require specific device modes.   |

| Problem                     | Possible Cause   | Solution  |
|-----------------------------|--|---|
| Backlight not illuminating. | Low batteries; feature disabled (not applicable for this model). | Replace batteries. Backlight should activate automatically with button press. |

## SPECIFICATIONS

| Feature                     | Detail   |
|-----------------------------|--|
| Model Name                  | Evolution 50 (121713)  |
| Type                        | Universal Learning Remote  |
| Connectivity Technology     | Infrared (IR)  |
| Compatible Devices          | Television (and other AV components via learning/built-in codes)         |
| Max Supported Devices       | 1 (controls one device at a time, but can learn functions from multiple) |
| Battery Type                | 4 x AAA Batteries  |
| Maximum Range               | 10 meters (33 feet)  |
| Special Features            | Learning Function, Built-in Codes, Backlit Buttons, Ergonomic Design     |
| Item Dimensions (L x W x H) | 28.7 x 18.03 x 6.86 cm (approximate parcel dimensions)                   |
| Item Weight                 | 544.31 g (approximate parcel weight)                                     |


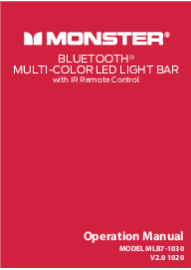


## WARRANTY AND SUPPORT

For specific warranty information regarding your Monster Universal Learning Remote, please refer to the documentation included with your purchase or visit the official Monster website. Warranty terms and conditions may vary by region and retailer.

Should you require technical assistance or have questions not covered in this manual, please visit the [Monster Brand Store](#) or the manufacturer's official support website for contact information and additional resources.

## Related Documents



|  |   |
|--|---|
|    | <p><a href="#">Monster Vision VR Action Camera - Record and Relive Your Adventures</a></p> <p>Discover the Monster Vision VR action camera, designed to capture and share your adventures in immersive 360° video. Compatible with YouTube 360 and Facebook 360, this camera offers high-definition video and photo capabilities, along with automatic stitching and Wi-Fi control. The bundle includes essential accessories like a remote control and a 16GB memory card.</p> |
|   | <p><a href="#">Monster Bluetooth Multi-Color LED Light Bar Operation Manual (MLB7-1030)</a></p> <p>This operation manual provides detailed instructions for the Monster Bluetooth Multi-Color LED Light Bar (Model MLB7-1030), covering installation, features, safety, remote control operation, app control, and customer service.</p>  |
|   | <p><a href="#">Monster DNA ONE Portable Bluetooth Speaker User Manual and Features</a></p> <p>Comprehensive user manual for the Monster DNA ONE portable Bluetooth speaker, detailing features, operation, charging, and safety information. Learn about its IP67 rating, Monster Share™ technology, and Pure Monster Sound.</p>  |
|  | <p><a href="#">FCC RF Exposure Report for Shenzhen Monster Creative Technology Co., Ltd. Monster Bluetooth Speaker MS31901</a></p> <p>This FCC RF Exposure Report details the compliance testing for the Shenzhen Monster Creative Technology Co., Ltd. Monster Bluetooth speaker, model MS31901, ensuring adherence to radio frequency exposure guidelines.</p>  |

Documents - Monster – 121713



[\[pdf\] User Manual](#)

GET READY FOR CHRISTMAS A powerful concentrated neutral detergent. Primarily used as a manual washing up liquid in commercial kitchens it can also be at high

BRA2391 Nov2020 Promos brakes

bigcontent io v1 static

NOVEMBER 2020 Offers available for delivery between 26th Oct 21st Nov 2020 GET READY FOR CHRISTMAS W ... 121711 6 x 80 5.59 47P /ea 13.99 2P /ea 29.99 3P /ea 13.99 3P /ea Typhoo 2 Pint Teabags A **121713** 4 x 150 Nescaf Azera Americano Instant Coffee Tin A 107248 1 x 500g Nescaf Gold Blend Deca e...

lang:en score:14 filesize: 12.01 M page\_count: 35 document date: 2020-10-21



