

Nikon D40 Digital SLR Camera Instruction Manual

Your comprehensive guide to operating and maintaining your Nikon D40 camera.

[Setup](#) [Operating](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

INTRODUCTION TO THE NIKON D40

This manual provides detailed instructions for the safe and effective use of your Nikon D40 Digital SLR camera. Please read this manual thoroughly before using the camera to ensure proper operation and to maximize its performance. Keep this manual accessible for future reference.

1. SETUP

1.1 Unpacking and Initial Inspection

Carefully remove all items from the packaging. Verify that all components listed in the packing list are present. If any items are missing or damaged, contact your retailer.

1.2 Attaching the Camera Strap

Thread the camera strap through the strap lugs on both sides of the camera body. Ensure the strap is securely fastened to prevent accidental drops.

1.3 Inserting the Battery

1. Open the battery chamber cover located at the bottom of the camera.
2. Insert the EN-EL9 rechargeable Li-ion battery with the contacts facing inward, as indicated by the diagram inside the chamber.
3. Close the battery chamber cover until it clicks securely.

1.4 Charging the Battery

Use the supplied MH-23 Quick Charger to charge the EN-EL9 battery. Connect the charger to a power outlet and insert the battery. The charging indicator light will show the charging status. A full charge typically takes approximately 90 minutes.

1.5 Inserting a Memory Card

The Nikon D40 uses SD (Secure Digital) memory cards. Open the memory card slot cover. Insert the SD card with the label facing the back of the camera until it clicks into place. Close the cover.

1.6 Attaching a Lens

Align the mounting mark on the lens with the lens mount index on the camera body. Rotate the lens counter-clockwise until it clicks into place. Remove the body cap and rear lens cap before attachment.

2. OPERATING THE CAMERA

2.1 Powering On/Off

Rotate the power switch around the shutter-release button to the "ON" position to power on the camera. To power off, rotate it to the "OFF" position.

2.2 Basic Shooting Modes

The mode dial on the top of the camera allows selection of various shooting modes:

- **Auto Mode:** Camera automatically sets optimal exposure and other settings.
- **Programmed Auto (P):** Camera sets shutter speed and aperture for optimal exposure; user can shift program.
- **Shutter-Priority Auto (S):** User selects shutter speed; camera selects aperture.
- **Aperture-Priority Auto (A):** User selects aperture; camera selects shutter speed.
- **Manual (M):** User controls both shutter speed and aperture.
- **Scene Modes:** Optimized settings for specific scenes (e.g., Portrait, Landscape, Child, Sports, Close Up, Night Portrait).

2.3 Focusing

The D40 uses autofocus (AF). Half-press the shutter-release button to activate autofocus. The camera will focus on the subject in the selected focus area. Manual focus is also available by rotating the focus ring on the lens.

2.4 Taking Pictures

1. Turn the camera on.
2. Select a shooting mode using the mode dial.
3. Compose your shot through the viewfinder.
4. Half-press the shutter-release button to focus.
5. Fully press the shutter-release button to take the picture.

2.5 Reviewing Images

Press the **Playback** button (usually marked with a play icon) to view captured images on the LCD monitor. Use the multi-selector to scroll through images.

3. MAINTENANCE

3.1 Cleaning the Camera Body

Wipe the camera body with a soft, dry cloth. For stubborn dirt, use a cloth lightly dampened with water or a mild cleaning solution specifically designed for electronics. Avoid using harsh chemicals.

3.2 Cleaning the Lens

Use a blower brush to remove dust from the lens surface. For smudges or fingerprints, use a lens cleaning solution and a microfiber lens cloth. Apply the solution to the cloth, not directly to the lens.

3.3 Sensor Cleaning

The D40 features an integrated dust reduction system. If dust spots appear on images, manual sensor cleaning may be required. This is a delicate procedure and should only be performed by experienced users or a professional service center. Refer to the camera's menu for the "Clean image sensor" option.

3.4 Battery Care

Store batteries in a cool, dry place. Do not expose them to extreme temperatures. If the camera will not be used for an extended period, remove the battery.

4. TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera does not turn on.	Battery is depleted or incorrectly inserted.	Charge the battery or reinsert it correctly.
Images are blurry.	Incorrect focus, camera shake, or dirty lens.	Ensure proper focus, use a faster shutter speed or tripod, clean the lens.
"CHA" or "FOR" error on display.	Memory card error or card needs formatting.	Try reinserting the card. If the error persists, format the card (<i>all data will be lost</i>) or try a different card.
Flash does not fire.	Flash mode is off, or subject is too far.	Check flash settings. Ensure subject is within flash range.

5. SPECIFICATIONS

- Model:** Nikon D40
- Type:** Digital single-lens reflex camera
- Lens Mount:** Nikon F mount (with AF coupling and AF contacts)
- Image Sensor:** 23.7 x 15.6 mm CCD sensor
- Effective Pixels:** 6.1 million
- Storage Media:** SD memory cards
- Monitor:** 2.5-in., 230,000-dot, low-temperature polysilicon TFT LCD
- Power Source:** One rechargeable Nikon EN-EL9 Li-ion battery
- Dimensions (W x H x D):** Approx. 126 x 94 x 64 mm (5.0 x 3.7 x 2.5 in.)
- Weight:** Approx. 475 g (1 lb. 0.8 oz.) without battery, memory card, or body cap

Specifications are subject to change without notice.

6. WARRANTY & SUPPORT

6.1 Limited Warranty

Nikon provides a limited warranty for the D40 camera against defects in materials and workmanship for a specified period from the date of purchase. Please refer to the warranty card included with your product for specific terms and conditions, including warranty duration and coverage details. Keep your proof of purchase for warranty claims.

6.2 Customer Support

For technical assistance, service, or further information, please visit the official Nikon support website or contact your regional Nikon customer service center. Contact details can typically be found on the Nikon website or in the warranty documentation.

- **Online Support:** www.nikonusa.com/support (Example link, verify official site)
- **Service Centers:** Refer to your local Nikon distributor's website for a list of authorized service centers.

© 2026 Nikon Corporation. All rights reserved. Reproduction in whole or in part without permission is prohibited.