

[Manuals.plus](#) /

> [Indesit](#) /

> Indesit BAAN 33 NF P Fridge Freezer User Manual

Indesit BAAN 33 NF P

Indesit BAAN 33 NF P Fridge Freezer User Manual

Model: BAAN 33 NF P | Brand: Indesit

1. INTRODUCTION

Thank you for choosing an Indesit appliance. This user manual provides essential information for the safe and efficient operation, installation, and maintenance of your Indesit BAAN 33 NF P Freestanding Fridge Freezer. Please read this manual thoroughly before using the appliance and keep it for future reference.

2. SAFETY INFORMATION

It is crucial to follow all safety instructions to prevent personal injury or damage to the appliance. Keep this manual in a safe place for future reference.

General Safety

- Ensure the appliance is unplugged before performing any cleaning or maintenance.
- Do not damage the refrigerant circuit.
- Do not use electrical appliances inside the food storage compartments, unless they are of the type recommended by the manufacturer.
- This appliance is intended for household use only.
- Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.

Electrical Safety

- The appliance must be earthed.
- Do not use adapter plugs or extension cords.
- Ensure the voltage and frequency indicated on the rating plate match your household supply.

3. PRODUCT OVERVIEW

The Indesit BAAN 33 NF P is a freestanding fridge freezer designed for efficient food storage. It features separate compartments for refrigeration and freezing.



Figure 3.1: Front view of the Indesit BAAN 33 NF P Freestanding Fridge Freezer. This image shows the appliance's overall white finish and its two main compartments: the larger refrigerator section at the top and the smaller freezer section at the bottom, separated by a horizontal handle.

Key Components

- **Refrigerator Compartment:** Located at the top, with glass shelves for organized storage.
- **Freezer Compartment:** Located at the bottom, with drawers for frozen items.
- **Temperature Control:** Dial or electronic control for adjusting internal temperatures.
- **Ice Cube Tray:** Included accessory for making ice.
- **Door Shelves:** For bottles and smaller items.

4. SETUP AND INSTALLATION

Proper installation is essential for the appliance's performance and longevity.

Unpacking

1. Remove all packaging materials, including protective films and adhesive tapes.
2. Check the appliance for any transport damage. Report any damage to your retailer immediately.

Location

- Place the appliance on a firm, level floor.
- Avoid direct sunlight and heat sources (e.g., radiators, cookers).
- Ensure adequate ventilation around the appliance. Maintain a minimum clearance of 5 cm from walls and furniture.
- The appliance is designed to operate in ambient temperatures corresponding to its climate class (SN, N, ST, T).

Electrical Connection

1. Before plugging in, ensure the voltage and frequency match the rating plate.
2. Connect the appliance to a properly earthed socket.
3. Do not switch on the appliance immediately after transport. Allow it to stand upright for at least 2-4 hours before plugging it in to allow the refrigerant fluid to settle.

5. OPERATING INSTRUCTIONS

Initial Start-up

1. Plug in the appliance.
2. Set the temperature control to a medium setting (e.g., '3' or '4' if it's a dial).
3. Allow the appliance to cool down for several hours (at least 4-6 hours) before placing food inside.

Temperature Control

The temperature inside the appliance is controlled by a thermostat. Higher numbers or colder settings typically mean lower temperatures. Adjust the setting based on ambient temperature and how often the door is opened.

Storing Food

- **Refrigerator:** Store fresh foods, dairy, fruits, and vegetables. Do not place hot food directly into the refrigerator.
- **Freezer:** Suitable for freezing fresh food and storing pre-frozen food for long periods. Ensure food is properly wrapped to prevent freezer burn.
- Utilize the provided Ice Cube Tray for making ice.

6. MAINTENANCE AND CLEANING

Regular maintenance ensures optimal performance and hygiene.

Cleaning the Interior

1. Unplug the appliance before cleaning.
2. Clean the interior with a solution of lukewarm water and a mild, non-abrasive detergent.
3. Wipe dry thoroughly. Do not use harsh chemicals or abrasive cleaners.
4. Clean removable parts (shelves, drawers) separately.

Cleaning the Exterior

Wipe the exterior surfaces with a soft cloth dampened with water and a mild detergent. Dry thoroughly.

Defrosting

This model features No Frost (NF) technology, which automatically prevents ice build-up in the freezer compartment, eliminating the need for manual defrosting of the freezer. The refrigerator compartment also typically defrosts automatically, with condensation running into a drip tray at the back.

Power Failure

In case of a power failure, keep the doors closed to maintain the internal temperature for as long as possible. The appliance can maintain food temperature for a limited time.

7. TROUBLESHOOTING

Before contacting service, check the following common issues and solutions:

Problem	Possible Cause	Solution
Appliance does not operate.	No power supply; plug not inserted correctly; fuse blown.	Check power connection; check fuse/circuit breaker.

Problem	Possible Cause	Solution
Temperature is not cold enough.	Door not closed properly; frequent door opening; high ambient temperature; thermostat setting too high.	Ensure door is sealed; reduce door opening frequency; adjust thermostat to a colder setting.
Excessive noise.	Appliance not level; contact with wall/furniture.	Adjust leveling feet; ensure clearance around the appliance.
Water on the floor.	Drain hole blocked (refrigerator).	Clear the drain hole with a small tool.

8. SPECIFICATIONS

Technical specifications for the Indesit BAAN 33 NF P Fridge Freezer:

- **Model Name:** BAAN 33 NF P
- **Model Number:** 51060
- **Brand:** Indesit
- **Type:** Freestanding Fridge Freezer
- **Total Capacity:** 290 litres
- **Freezer Capacity:** 85 litres
- **Colour:** White
- **Special Feature:** Ice Cube Tray
- **Shelf Type:** Glass
- **Finish Type:** Glossy
- **Climate Class:** SN, N, ST, T
- **Voltage:** 220-230 V
- **Frequency:** 50/60 Hz
- **ASIN:** B004ASNGOK

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card provided with your appliance or visit the official Indesit website. Keep your proof of purchase for any warranty claims.

For technical assistance or spare parts, please contact Indesit customer service. Ensure you have your model number (BAAN 33 NF P) and serial number ready when contacting support.

Note: Warranty terms and conditions may vary by region.

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B004ASNGOK>

More documents and user manuals: <https://manuals.plus/>