

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Indesit](#) /
- › [Indesit Freestanding No Frost Refrigerator User Manual](#)

Indesit TAAN 6 FNF S

Indesit Freestanding No Frost Refrigerator User Manual

Model: TAAN 6 FNF S

1. INTRODUCTION

Thank you for choosing the Indesit Freestanding No Frost Refrigerator. This manual provides essential information for the safe and efficient operation, installation, and maintenance of your appliance. Please read this manual thoroughly before using the refrigerator and keep it for future reference.

This refrigerator features a 335-liter capacity, a No Frost system to prevent ice build-up, and adjustable shelves for flexible storage. It is designed for household use and offers reliable performance for preserving your food.

2. SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury.

- Ensure the power supply voltage matches the rating label on the appliance.
- Do not damage the refrigerant circuit. If the refrigerant circuit is damaged, avoid open flames and sources of ignition, and ventilate the room thoroughly.
- Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- Before cleaning or maintenance, always unplug the appliance from the power outlet.

3. SETUP AND INSTALLATION

3.1 Unpacking

Carefully remove all packaging materials, including tape and protective films. Dispose of packaging materials responsibly. Keep packaging out of reach of children.

3.2 Placement

Place the refrigerator on a flat, stable surface away from direct sunlight, heat sources (such as stoves, radiators), and extreme cold. Ensure adequate air circulation around the appliance. Maintain a minimum distance of 10 cm from walls and other furniture for proper ventilation.





Figure 3.2.1: Refrigerator dimensions and recommended clearances. Height: 190.5 cm, Width: 71.5 cm, Depth: 70 cm.

3.3 Leveling

Adjust the leveling feet at the bottom front of the refrigerator to ensure it is perfectly level. This prevents vibrations and ensures proper door sealing.

3.4 Initial Cleaning

Before first use, clean the interior and exterior of the refrigerator with a soft cloth and a mild detergent. Rinse with clean water and dry thoroughly.

3.5 Power Connection

Plug the refrigerator into a dedicated, grounded power outlet. Do not use extension cords or adapters. Allow the refrigerator to stand for at least 2-4 hours before plugging it in to allow the refrigerant to settle.

4. OPERATING INSTRUCTIONS

4.1 Temperature Control

The refrigerator's temperature is controlled by a thermostat dial, usually located inside the fresh food compartment. Turn the dial to adjust the cooling intensity. A higher number typically indicates colder temperatures. Start with a medium setting and adjust as needed based on ambient temperature and food load.

4.2 No Frost System

This refrigerator is equipped with a No Frost system, which prevents ice build-up in both the freezer and refrigerator compartments. This eliminates the need for manual defrosting, ensuring consistent cooling and easier maintenance.

4.3 Storage Features

The refrigerator offers various storage options:

- **Adjustable Shelves:** The glass shelves can be repositioned to accommodate items of different heights.
- **Crisper Drawer:** Located at the bottom, ideal for storing fruits and vegetables to maintain their freshness.
- **Door Bins:** Provide convenient storage for bottles, jars, and smaller items.
- **Top Freezer Compartment:** For long-term storage of frozen foods.



Figure 4.3.1: Interior layout of the refrigerator, highlighting storage flexibility.

5. MAINTENANCE AND CARE

5.1 Cleaning the Interior

Regularly clean the interior of the refrigerator to prevent odors and maintain hygiene. Unplug the appliance before cleaning. Use a solution of mild detergent and warm water. Wipe down all surfaces, shelves, and drawers. Dry thoroughly before plugging the appliance back in.

5.2 Cleaning the Exterior

Clean the exterior surfaces with a soft cloth and a mild, non-abrasive cleaner. For the silver finish, use a stainless steel cleaner if necessary, following the product instructions. Keep the door seals clean to ensure a tight seal.

5.3 Condenser Coil Cleaning

Periodically clean the condenser coils located at the back or bottom of the refrigerator. Dust and debris on the coils can reduce efficiency. Unplug the appliance and use a vacuum cleaner or a soft brush to remove accumulated dust.

5.4 Power Outages

In case of a power outage, keep the refrigerator doors closed to maintain the internal temperature for as long as possible. Food will remain frozen for several hours depending on the ambient temperature and how full the freezer is.

6. TROUBLESHOOTING

Before contacting service, check the following common issues and solutions:

Problem	Possible Cause	Solution
Refrigerator does not operate.	No power supply; power cord unplugged; circuit breaker tripped.	Check power outlet; ensure cord is securely plugged in; reset circuit breaker.
Refrigerator is not cold enough.	Temperature setting too high; door left open; excessive food load; poor ventilation.	Adjust thermostat to a colder setting; ensure door is closed properly; do not overload; check clearances.
Unusual noises.	Appliance not level; objects vibrating against the unit; normal operating sounds.	Level the refrigerator; remove any objects touching the unit. Some sounds (e.g., gurgling, humming) are normal.
Water on the floor.	Drain tube clogged; drip tray overflowing.	Clear the drain tube; empty and clean the drip tray.

7. SPECIFICATIONS

Feature	Detail
Brand Name	Indesit
Model Information	TAAN-6FNFS-IP
Product Dimensions (WxDxH)	71 x 70 x 190 cm
Item Weight	74 Kilograms
Efficiency	A+, B, 85%
Total Capacity	378 Liters
Annual Energy Consumption	335 kWh/annum (as per energy label)
Fresh Food Capacity	50 Liters
Freezer Capacity	40 Liters

Feature	Detail
Noise Level	45 dB
Installation Type	Freestanding
Special Features	Frost Free
Color	Silver
Voltage	240 Volts
Vegetable Drawers	1
Defrost System Type	Frost Free
Door Hinges	Left
Door Material Type	Stainless Steel
Shelf Type	Wire
Number of Shelves	4
Certification	CE
Material Type	Metal
Included Components	Freestanding Refrigerator
BEE Star Rating	5 Stars
Configuration	Top Freezer



Figure 7.1: Energy efficiency label.

8. WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your purchase or contact your local Indesit service center. Keep your proof of purchase for warranty claims.

If you experience any issues not covered in the troubleshooting section, or require professional assistance, please contact Indesit customer support or an authorized service technician. Do not attempt to repair the appliance yourself.

You can find contact details for Indesit customer service on the official Indesit website or through your retailer.

© 2024 Indesit. All rights reserved.
This manual is subject to change without notice.