

Rowenta DR5015

Rowenta DR5015 Ultra Steam Brush Instruction Manual

Model: DR5015 | Brand: Rowenta

INTRODUCTION

The Rowenta DR5015 Ultra Steam Brush is an 800-watt handheld garment steamer designed for quick and efficient wrinkle removal. This device features an electronic pump for continuous, on-demand steam and a transparent, removable water tank. It is suitable for light duty needs and quick touch-ups on various fabrics.

Please read this instruction manual thoroughly before using your Rowenta DR5015 Ultra Steam Brush to ensure safe and optimal performance. Keep this manual for future reference.

PRODUCT OVERVIEW AND COMPONENTS

Familiarize yourself with the main components of your Rowenta DR5015 Ultra Steam Brush:

- **Steam Head:** Wide design for maximum steam distribution.
- **Water Tank:** Removable, transparent tank with a 1.7-ounce capacity.
- **Steam Trigger:** Activates continuous, on-demand steam.
- **Variable Steam Control:** Adjusts steam output.
- **Power Cord:** For electrical connection.
- **Accessories:** Includes a removable fabric brush and a removable lint pad.
- **Hanging Hook:** For convenient storage.
- **Travel Pouch:** For portability.



Figure 1: The Rowenta DR5015 Ultra Steam Brush, showcasing its design and steam output.

SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Fill Water Tank:** Remove the transparent water tank from the handle. Fill it with distilled water up to the maximum fill line. Tap water can be used but may lead to mineral buildup over time. Securely reattach the water tank to the steamer. No pumping or priming is required.
3. **Attach Accessories (Optional):** For specific fabric types or to remove lint, attach the fabric brush or lint pad to the steam head as needed. Ensure it clicks securely into place.
4. **Power Connection:** Plug the power cord into a standard electrical outlet.

OPERATING INSTRUCTIONS

Follow these steps for effective garment steaming:

1. **Pre-heating:** Once plugged in, the steamer will begin to heat up. Allow approximately 30 seconds for the unit to reach operating temperature.
2. **Steam Activation:** Press and hold the steam trigger to release continuous steam. Release the trigger to stop steaming.
3. **Variable Steam Control:** Use the variable steam dial to adjust the intensity of the steam output according to the fabric type. Lower settings for delicate fabrics, higher settings for heavier materials.
4. **Steaming Technique:** Hold the garment taut with one hand and move the steam head slowly over the fabric in a vertical motion. For best results, steam from top to bottom. The fabric brush can help open fabric weaves for deeper steam penetration.
5. **Finishing:** Once wrinkles are removed, allow the garment to cool and dry completely before wearing or storing to prevent new wrinkles.



Figure 2: Demonstrating the Rowenta DR5015 Ultra Steam Brush in use on a hanging garment.



Figure 3: A detailed view of the steamer head, highlighting the steam output.

Proper maintenance ensures the longevity and performance of your steamer:

- **Empty Water Tank:** After each use, unplug the steamer and allow it to cool. Remove and empty any remaining water from the tank.
- **Cleaning Exterior:** Wipe the exterior of the steamer with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Cleaning Accessories:** Remove the fabric brush and lint pad. Clean them as needed with a damp cloth or by hand-washing if heavily soiled, then allow to air dry completely before reattaching or storing.
- **Descaling (if using tap water):** If you notice reduced steam output or mineral residue, descale the unit. Consult the full product manual for detailed descaling instructions, typically involving a vinegar solution.
- **Storage:** Store the steamer in a cool, dry place. Utilize the hanging hook for convenient storage and the travel pouch for protection when traveling.

TROUBLESHOOTING

If you encounter issues, refer to the following common problems and solutions:

- **No Steam Output:**
 - Ensure the water tank is filled and correctly seated.
 - Check if the steamer is properly plugged into a working electrical outlet.
 - Allow sufficient time for pre-heating (approx. 30 seconds).
 - Confirm the steam trigger is pressed and held.
- **Water Spitting/Leaking:**
 - This can occur if the steamer has not fully heated up. Wait until it is ready before steaming.
 - Ensure the water tank cap is securely closed.
 - Excessive mineral buildup can cause spitting; consider descaling.
- **Reduced Steam Output:**
 - The water tank may be low or empty.
 - Mineral buildup might be obstructing steam vents; descale the unit.
 - Check the variable steam control setting.

If problems persist, contact customer support.

SPECIFICATIONS

- **Brand:** Rowenta
- **Model:** DR5015
- **Wattage:** 800 watts
- **Voltage:** 120 Volts
- **Water Tank Capacity:** 1.7 ounces (approximately 50 milliliters)
- **Product Dimensions:** 11.5 x 4.38 x 6 inches
- **Color:** White
- **Manufacturer:** Groupe SEB




WARRANTY



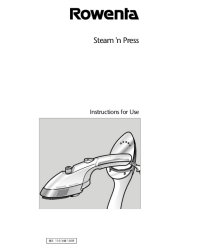
The Rowenta DR5015 Ultra Steam Brush comes with a **1-year limited warranty**. Please retain your proof of purchase for warranty claims. For detailed terms and conditions, refer to the warranty information provided with your product packaging or contact Rowenta customer service.

SUPPORT

For further assistance, product registration, or to purchase replacement parts and accessories, please visit the official Rowenta website or contact their customer support line. Always refer to the complete product manual for comprehensive safety guidelines and operational details.

Related Documents - DR5015

 <p>Rowenta® DR81xx E13 E14 E15</p> <p>INSTRUCTIONS D'UTILISATION Beim Gebrauch dieses Dampfbürstengeräts sind die Bedienungsanleitung und die Sicherheitsanweisungen sorgfältig zu lesen und zu verstehen. Diese sind Teil des Produkts und sind in der Verpackung enthalten. Die Bedienungsanleitung ist auch auf der Website www.rowenta.com verfügbar.</p> <p>Capacité maximale Réservoir d'eau: 1,8 l (4,75 gal) Câble: 2,5 m (8,2 ft) Poids: 1,2 kg (2,6 lb) Dimensions: 28 x 17 x 17 cm (11 x 6,7 x 6,7 in) Modèle: DR81xx E13, E14, E15 www.rowenta.com www.fal.com</p> <p>DR81xx</p>	<p>Rowenta DR81xx Steam Brush User Manual and Instructions</p> <p>Comprehensive user manual and safety instructions for the Rowenta DR81xx Steam Brush, covering operation, accessories, cleaning, and troubleshooting. Learn how to use your garment steamer effectively.</p>
 <p>Rowenta® DR81xx E13 E14 E15</p> <p>INSTRUCTIONS D'UTILISATION Beim Gebrauch dieses Dampfbürstengeräts sind die Bedienungsanleitung und die Sicherheitsanweisungen sorgfältig zu lesen und zu verstehen. Diese sind Teil des Produkts und sind in der Verpackung enthalten. Die Bedienungsanleitung ist auch auf der Website www.rowenta.com verfügbar.</p> <p>Capacité maximale Réservoir d'eau: 1,8 l (4,75 gal) Câble: 2,5 m (8,2 ft) Poids: 1,2 kg (2,6 lb) Dimensions: 28 x 17 x 17 cm (11 x 6,7 x 6,7 in) Modèle: DR81xx E13, E14, E15 www.rowenta.com www.fal.com</p> <p>DR81xx</p>	<p>Rowenta X-Cel Steam Plus Garment Steamer User Manual and Instructions</p> <p>Comprehensive user manual, safety instructions, and operating guide for the Rowenta X-Cel Steam Plus garment steamer (models DR81xx, DT81xx, DR82xx, DT82xx). Learn how to use, clean, descale, and troubleshoot your Rowenta steamer.</p>
 <p>Rowenta® DR61XX E13 E14 E15</p> <p>INSTRUCTIONS D'UTILISATION Beim Gebrauch dieses Dampfbürstengeräts sind die Bedienungsanleitung und die Sicherheitsanweisungen sorgfältig zu lesen und zu verstehen. Diese sind Teil des Produkts und sind in der Verpackung enthalten. Die Bedienungsanleitung ist auch auf der Website www.rowenta.com verfügbar.</p> <p>Capacité maximale Réservoir d'eau: 1,8 l (4,75 gal) Câble: 2,5 m (8,2 ft) Poids: 1,2 kg (2,6 lb) Dimensions: 28 x 17 x 17 cm (11 x 6,7 x 6,7 in) Modèle: DR61XX E13, E14, E15 www.rowenta.com www.fal.com</p> <p>DR61XX</p>	<p>Rowenta DR61XX Garment Steamer User Manual and Safety Instructions</p> <p>Comprehensive user manual and safety instructions for the Rowenta DR61XX garment steamer, covering operation, maintenance, and troubleshooting. Learn how to use your Rowenta steamer safely and effectively.</p>

 <p>The image shows the cover of the Rowenta DR81xx Handheld Garment Steamer User Manual. It features the Rowenta logo at the top left, a photograph of the handheld steamer in the center, and a list of key features on the right side. The model number DR81xx is printed at the bottom.</p>	<p>Rowenta DR81xx Handheld Garment Steamer User Manual</p> <p>Comprehensive user manual for the Rowenta DR81xx handheld garment steamer. This guide provides detailed instructions on setup, operation, safety precautions, accessory usage, cleaning, descaling, and troubleshooting for optimal performance and longevity of your appliance.</p>
 <p>The image shows the cover of the Rowenta DR61XX Handheld Steamer User Manual. It features the Rowenta logo at the top left, a photograph of the handheld steamer in the center, and the model number DR61XX printed at the bottom.</p>	<p>Rowenta DR61XX Handheld Steamer User Manual</p> <p>Comprehensive guide to using and maintaining the Rowenta DR61XX handheld steamer, including safety instructions, operating procedures, and troubleshooting tips.</p>
 <p>The image shows the cover of the Rowenta Steam 'n Press: Instructions for Use, Safety, and Troubleshooting manual. It features the Rowenta logo at the top left, the title 'Steam 'n Press' below it, and a photograph of the steam iron in the center. The text 'Instructions for Use' is also visible.</p>	<p>Rowenta Steam 'n Press: Instructions for Use, Safety, and Troubleshooting</p> <p>Detailed instructions for the Rowenta Steam 'n Press garment steamer, covering safety guidelines, operational procedures for ironing and steaming, water usage, cleaning, maintenance, troubleshooting common issues, and warranty information.</p>