

[Manuals.plus](#) /

› [Fiskars](#) /

› Fiskars QuikFit Handle S Instruction Manual

Fiskars 136012

Fiskars QuikFit Handle S Instruction Manual

Model: 1000663 (24 cm)

1. OVERVIEW

The Fiskars QuikFit Handle S is an original Fiskars accessory designed to seamlessly attach to all Fiskars QuikFit hand tools. This sturdy and comfortable handle, crafted from hardened aluminum, ensures an ergonomic and comfortable working position during various gardening tasks. Its compact 24 cm length makes it ideal for close-up work or for users who prefer a shorter reach. The handle features a convenient hole for easy hanging, facilitating space-saving storage. Its Finnish design emphasizes high durability and reliability.



Figure 1: The Fiskars QuikFit Handle S, showcasing its compact design and connection point.

2. SETUP AND ASSEMBLY

The Fiskars QuikFit system is designed for quick and secure attachment of various tool heads. Follow these steps to attach a QuikFit hand tool to your handle:

- 1. Prepare the Tool Head:** Ensure the QuikFit tool head you intend to use is clean and free of debris.
- 2. Align the Handle:** Hold the QuikFit Handle S firmly. Align the connection mechanism of the handle with the corresponding slot on the QuikFit tool head.
- 3. Click into Place:** Push the tool head onto the handle until you hear an audible 'click'. This indicates that the locking mechanism has engaged securely.
- 4. Verify Connection:** Gently pull on the tool head to ensure it is firmly attached and does not wobble. A secure connection is crucial for safe operation.

To detach a tool head, locate the release button or lever on the handle's connection mechanism, press it, and pull the tool head away from the handle.



Figure 2: The QuikFit Handle S shown with examples of compatible tool heads, illustrating the system's versatility.

3. OPERATING INSTRUCTIONS

The Fiskars QuikFit Handle S is designed for comfortable and efficient use with a variety of hand tools. Its ambidextrous design makes it suitable for both right-handed and left-handed users.

- **Ergonomic Grip:** The handle's design and aluminum material provide a sturdy yet comfortable grip, reducing hand fatigue during prolonged use.
- **Versatile Use:** Once a QuikFit tool head is attached, the handle transforms into a functional hand tool for tasks such as weeding, cultivating, planting, and raking.
- **Optimal Working Position:** The 24 cm length is ideal for tasks requiring precision and close proximity to the ground or plants, allowing for a comfortable working position without excessive bending for certain tasks.
- **Tool Head Compatibility:** This handle is part of the broader Fiskars QuikFit system, which includes various handle lengths and tool heads to suit different gardening needs. While this manual focuses on the 'S' handle, other lengths are available for tasks requiring longer reach.

FISKARS®



Figure 3: The QuikFit Handle S (24 cm) in context with other available QuikFit handle lengths, demonstrating the system's adaptability.

4. MAINTENANCE

Proper maintenance will extend the life and performance of your Fiskars QuikFit Handle S.

- **Cleaning:** After each use, wipe down the handle with a damp cloth to remove any dirt, soil, or debris. For stubborn grime, a mild soap solution can be used. Ensure the handle is thoroughly dried before storage to prevent corrosion.
- **Lubrication:** Periodically, apply a light coat of silicone spray or a similar lubricant to the connection mechanism to ensure smooth attachment and detachment of tool heads.
- **Storage:** Store the handle in a dry place, away from direct sunlight and extreme temperatures. The integrated hanging hole allows for convenient and space-saving storage on a hook or pegboard.
- **Inspection:** Regularly inspect the handle for any signs of wear, damage, or loose components. If any damage is found, discontinue use and consider replacement.

5. TROUBLESHOOTING

If you encounter issues with your Fiskars QuikFit Handle S, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Tool head difficult to attach or detach.	Dirt or debris in the connection mechanism; lack of lubrication; misalignment.	Clean the connection points on both the handle and the tool head. Apply a small amount of lubricant. Ensure proper alignment before pushing/pulling.
Tool head feels loose or wobbly after attachment.	Connection not fully engaged; damaged locking mechanism.	Ensure you hear a distinct 'click' when attaching. If the issue persists, inspect the locking mechanism for damage. If damaged, the handle or tool head may need replacement.
Handle appears scratched or damaged upon unboxing.	Packaging issues; manufacturing defect.	Contact the retailer or Fiskars customer support with proof of purchase for assistance or replacement.

6. SPECIFICATIONS

Detailed specifications for the Fiskars QuikFit Handle S (Model 1000663):

Model Number: 136012 (Fiskars 1000663 Quikfit Small Handle)

Material: Hardened Aluminum

Color: Black/Orange

Length: 24 cm (9.45 inches)

Product Dimensions: Approximately 1.26"L x 1.26"W (3.2 cm x 3.2 cm)

Item Weight: 95 g (0.11 Kilograms / 3.8 ounces)

Lock Type: Sliding lock mechanism for QuikFit tools

Hand Orientation: Ambidextrous

Included Components: 1 x Fiskars 1000663 Quikfit Small Handle

Usage: Outdoor, for use with Fiskars QuikFit hand tools



23,4 cm

3,2 cm

Figure 4: Detailed dimensions of the Fiskars QuikFit Handle S.

7. WARRANTY AND SUPPORT

Fiskars products are known for their quality and durability. For specific warranty information regarding your Fiskars QuikFit Handle S, please refer to the warranty documentation included with your purchase or visit the official Fiskars website. For customer support, product inquiries, or to report any issues, please contact Fiskars directly through their official channels. You can often find contact information and FAQs on the [Fiskars Brand Store on Amazon](#) or their corporate website.

© 2025 Fiskars. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question