

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Coby](#) /
- › [Coby CRA54 Digital AM/FM Alarm Clock Radio User Manual](#)

## Coby CRA54

# Coby CRA54 Digital AM/FM Alarm Clock Radio

## USER MANUAL

### Introduction

---

This manual provides detailed instructions for the setup, operation, maintenance, and troubleshooting of your Coby CRA54 Digital AM/FM Alarm Clock Radio. Please read this manual thoroughly before using the device to ensure proper function and longevity.



Figure 1: Front view of the Coby CRA54 Digital AM/FM Alarm Clock Radio, showing the digital display and control buttons.

## Setup

1. **Unpacking:** Carefully remove the alarm clock radio from its packaging. Retain the packaging materials for future transport or storage.
2. **Power Connection:** Connect the AC power cord to the 110V power outlet. The unit is designed for wired operation.
3. **Battery Backup (Optional):** While the unit operates on AC power, it may have a compartment for backup batteries (not included) to maintain time settings during power outages. Refer to the battery compartment cover for the correct battery type and polarity. *Note: Batteries are not included with this product.*
4. **Antenna Adjustment:** Extend the FM wire antenna fully for optimal FM reception. For AM reception, rotate the unit for the best signal.

## Operating Instructions

### Setting the Time

1. Press and hold the **TIME SET** button (location may vary, typically on the front or top panel) until the

display flashes.

2. Use the **HOUR** and **MINUTE** buttons to adjust the time. Observe the AM/PM indicator if present.
3. Press **TIME SET** again to confirm and exit the time setting mode.

## Setting the Alarm

1. Press and hold the **ALARM SET** button until the alarm time display flashes.
2. Use the **HOUR** and **MINUTE** buttons to set your desired alarm time.
3. Press **ALARM SET** again to confirm. You may then be prompted to select the alarm source (radio or buzzer) using the **ALARM MODE** button.
4. Ensure the alarm is activated by checking for an alarm indicator icon on the display.

## Radio Operation

- **Power On/Off:** Press the **POWER** button to turn the radio on or off.
- **Band Selection:** Press the **AM/FM** button to switch between AM and FM bands.
- **Tuning:** Use the **TUNING** dial or **TUNE +/-** buttons to find your desired station. Some models may feature auto-scan functionality.
- **Volume Control:** Adjust the volume using the **VOLUME** dial or **VOL +/-** buttons.

## Snooze Function

When the alarm sounds, press the large **SNOOZE** button (usually located on the top of the unit) to temporarily silence the alarm. The alarm will sound again after a few minutes (typically 9 minutes).

## Maintenance

- **Cleaning:** Disconnect the power before cleaning. Use a soft, dry cloth to wipe the exterior of the unit. Do not use abrasive cleaners or solvents.
- **Placement:** Place the unit on a stable, flat surface. Avoid placing it in direct sunlight, near heat sources, or in areas with high humidity.
- **Ventilation:** Ensure adequate ventilation around the unit to prevent overheating. Do not block ventilation openings.

## Troubleshooting

Problem	Possible Cause	Solution
Unit does not power on.	Power cord not properly connected.	Ensure the power cord is securely plugged into both the unit and a working 110V outlet.
Poor radio reception.	Antenna not extended or unit position.	Extend the FM wire antenna fully. For AM, rotate the unit to improve signal. Avoid interference from other electronic devices.
Alarm does not sound.	Alarm not set or activated.	Verify that the alarm time is correctly set and the alarm function is activated (check for alarm icon on display). Ensure volume is not at minimum.

Problem	Possible Cause	Solution
Time display is incorrect or runs fast/slow.	Internal clock deviation or power interruption.	Reset the time. If the issue persists, ensure stable power supply and consider using fresh backup batteries if applicable.

## Specifications

---

**Brand:** Coby

**Model Number:** CRA54

**Product Dimensions:** 17.78 x 10.16 x 8.89 cm

**Product Weight:** 522 g

**Voltage:** 110 Volts

**Display Type:** Digital

**Mounting Type:** Tabletop

**Alarm Clock:** Yes

**Operation Mode:** Electric

**Built-in Speakers:** Yes

**Connectivity Technology:** Wired

## Warranty and Support

---

For information regarding warranty coverage and customer support, please refer to the warranty card included with your product or contact Coby customer service directly. Keep your purchase receipt as proof of purchase.