

[Manuals.plus](#) /

> [Saeco](#) /

> Saeco SM7685 Xelsis Super-Automatic Espresso Coffee Machine User Manual

Saeco SM7685 Xelsis

Saeco Super-Automatic Espresso Coffee Machine

MODEL: SM7685 XELSIS USER MANUAL

1. Introduction and Overview

Welcome to the user manual for your Saeco SM7685 Xelsis Super-Automatic Espresso Coffee Machine. This machine is designed to provide a convenient and high-quality coffee experience, allowing you to brew a variety of beverages including espresso, cappuccino, latte, and flat white with ease. It features an integrated adjustable grinder, a double boiler system, and an intuitive touch screen for personalized coffee creation.

Please read this manual thoroughly before operating your machine to ensure proper use, optimal performance, and longevity of the appliance.



Image: The Saeco SM7685 Xelsis machine, showcasing its sleek design and ability to prepare two milk-based coffee drinks simultaneously.

2. Setup

Before first use, ensure the machine is placed on a stable, level surface. Allow adequate space around the machine for ventilation and access to components.

- Unpacking:** Carefully remove all packaging materials. Retain packaging for future transport or service.
- Placement:** Position the machine away from heat sources and direct sunlight. Ensure the power cord is not pinched or damaged.
- Power Connection:** Connect the power cord to the machine and then to a suitable electrical outlet. Note that a power adapter (8.2x6.5x3.8 inches) is included for operation in the United States due to the machine's original voltage/frequency (220-240V~50/60Hz).
- Water Tank:** Remove the removable water reservoir (60 oz capacity) and fill it with fresh, cold water up to the MAX level. Reinsert the tank securely.
- Bean Hopper:** Open the bean hopper lid and fill with fresh whole coffee beans. The hopper holds approximately half a pound of beans.

6. **Initial Rinse Cycle:** Follow the on-screen prompts for the initial rinse cycle. This primes the system and cleans internal components. Place a container under the coffee spout during this process.



Image: The Saeco SM7685 Xelsis machine with its approximate dimensions (11 inches wide, 20 inches deep, 15 inches high), useful for planning placement.

3. Operating Instructions

The Saeco SM7685 Xelsis features a 3.5-inch TFT color display for intuitive control.

3.1. Basic Operation

- **Power On/Off:** Press the power button to turn the machine on or off.
- **Selecting a Drink:** Use the touch screen to navigate through the available drink options (Espresso, Cappuccino, Latte, Flat White, etc.).
- **Adjusting Settings:** For most drinks, you can customize strength, coffee volume, and milk volume directly on the screen. The integrated coffee grinder has 12 adjustable grinding settings.



Image: A hand adjusting settings on the machine's touchscreen, demonstrating the user-friendly interface for customizing beverages like cappuccino.

3.2. Brewing Coffee and Espresso

1. Place one or two cups under the coffee spout.
2. Select your desired coffee drink from the menu.
3. Adjust settings if desired (e.g., strength, volume).
4. Press the start button to begin brewing. The machine can brew two cups simultaneously.

3.3. Using the Automatic Milk System

1. Fill the thermal milk jug with fresh milk.
2. Connect the milk jug to the machine's milk frother system.
3. Place a cup under the coffee and milk spouts.
4. Select a milk-based drink (e.g., Cappuccino, Latte).
5. The machine will automatically froth and dispense milk, followed by coffee.

3.4. Using Pre-Ground Coffee

The machine features a bypass doser for pre-ground coffee. This is useful for decaf or different coffee types without changing beans in the hopper.

1. Select the pre-ground coffee option on the display.
2. Open the pre-ground coffee compartment and add one scoop of pre-ground coffee. Do not overfill.
3. Proceed with brewing as usual.



Image: A couple enjoying freshly brewed coffee from the Saeco Xelsis machine, highlighting its ease of use in a home setting.



Image: A visual guide to different coffee types, such as single/double espresso, Americano, Cappuccino, Latte, Ristretto, Milk, Espresso Macchiato, Latte Macchiato, and Tea, all preparable with the Saeco machine.

4. Maintenance

Regular cleaning and maintenance are crucial for the longevity and optimal performance of your Saeco espresso machine. The machine provides on-screen alerts and reminders for necessary cleaning steps.

- **Drip Tray and Coffee Grounds Container:** Empty and clean the removable drip tray and coffee grounds container daily or when prompted by the machine. All removable components are dishwasher safe.
- **Milk System Cleaning:** After each milk-based drink, perform a quick rinse of the milk system. The machine has an automatic milk system cleaning indicator. Regular deep cleaning of the milk jug and frother components is also recommended.
- **Removable Brewing Unit:** The brewing unit should be removed and rinsed under lukewarm water weekly. Allow it to air dry before reinserting.
- **Water Filter:** Replace the water filter as indicated by the machine or approximately every two months, depending on water hardness and usage.
- **Descaling:** The machine has an automatic decalcification program. Follow the on-screen instructions when the descaling alert appears. Use only Saeco-approved descaling solutions.

5. Troubleshooting

This section addresses common issues you might encounter. For more detailed troubleshooting, refer to the full digital manual or contact customer support.

Problem	Possible Cause	Solution
No coffee dispensed	Water tank empty; coffee beans empty; brewing unit clogged.	Refill water tank; refill bean hopper; clean brewing unit.
Weak coffee	Grind setting too coarse; insufficient coffee dose.	Adjust grinder to a finer setting; increase coffee strength setting.
Milk not frothing properly	Milk system clogged; milk jug not properly connected; milk type.	Clean milk system thoroughly; ensure jug is connected; use fresh, cold milk (dairy or plant-based suitable for frothing).
Machine displays 'Empty water/bean container'	Water tank or bean hopper is low/empty.	Refill the respective container.

6. Specifications

Detailed technical specifications for the Saeco SM7685 Xelsis Super-Automatic Espresso Coffee Machine.

Feature	Detail
Brand	Saeco

Feature	Detail
Model Number	SM7685 Xelsis
Dimensions (L x W x H)	0.39 x 0.39 x 0.39 inches (Product dimensions provided are unusually small, typically larger for a coffee machine. Refer to image for practical dimensions.)
Item Weight	40.3 pounds
Color	Silver
Coffee Maker Type	Espresso Machine (Super-Automatic)
Special Features	Integrated Coffee Grinder, Water Filter, Milk Frother, Thermal Milk Jug, Programmable
Filter Type	Reusable
Specific Uses	Espresso, Cappuccino, Latte, Flat White
Included Components	Thermal Milk Jug, Milk Frother, Cappuccino Device
Operation Mode	Fully Automatic
Pump Pressure	Up to 15 bars
Grind Settings	12 adjustable settings
Water Reservoir Capacity	60 Oz (approx. 1.77 Liters)
Bean Container Capacity	Approx. 0.5 lbs (227g)
Display	3.5" TFT Color Display
Voltage/Frequency	220-240V~50/60Hz (Power adapter included for US use)



Image: A detailed chart outlining the general specifications of the Saeco Xelsis machine, including dimensions, weight, power, and various features.

7. Warranty and Support

Your Saeco super-automatic coffee machine is backed by a 12-month warranty. This warranty covers manufacturing defects and ensures your peace of mind.

If you encounter any issues or require assistance, please contact Saeco customer support. Our world-class customer support is available to help you with any questions or concerns regarding your machine.

For service or warranty claims, please have your model number (SM7685 Xelsis) and proof of purchase ready.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B004BNMU3C>

More documents and user manuals: <https://manuals.plus/>