



Manuals.plus /

› **Massive Audio** /

› Massive Audio M8S 8-inch Shallow Mount Mid-Range Speaker Instruction Manual

Massive Audio M8S

Massive Audio M8S 8-inch Shallow Mount Mid-Range Speaker Instruction Manual

INTRODUCTION

This manual provides essential information for the proper installation, operation, and maintenance of your Massive Audio M8S 8-inch Shallow Mount Mid-Range Speaker. Please read these instructions thoroughly before attempting installation or use to ensure optimal performance and product longevity.



Figure 1: Front view of the Massive Audio M8S speaker, showcasing the cone and surround.



Figure 2: Rear view of the Massive Audio M8S speaker, showing the magnet structure and terminals.

SAFETY INFORMATION

Always observe the following safety precautions:

- Disconnect the vehicle's battery before any electrical installation to prevent short circuits.
- Ensure all wiring is properly insulated and secured to prevent damage and electrical hazards.
- Do not operate the speaker beyond its rated power handling capabilities to avoid damage.
- Consult a professional installer if you are unsure about any part of the installation process.
- Prolonged exposure to high volume levels can cause permanent hearing damage.

PACKAGE CONTENTS

Verify that your package contains the following items:

- 1 x Massive Audio M8S 8-inch Shallow Mount Mid-Range Speaker
- Mounting hardware (screws, clips)
- Instruction Manual (this document)

INSTALLATION AND SETUP

The Massive Audio M8S speaker is designed for shallow mounting applications, making it suitable for various vehicle installations.

1. Mounting Location

Select a suitable mounting location that provides adequate clearance for the speaker's shallow depth (approximately 2.95 inches). Common locations include door panels, rear decks, or custom enclosures.



Figure 3: Side view illustrating the shallow mounting depth of the M8S speaker.

2. Preparing the Mounting Surface

1. Carefully mark the speaker cutout and screw hole positions using a template (if provided) or by tracing the speaker frame.
2. Cut the opening for the speaker using appropriate tools. Ensure the opening is clean and free of debris.
3. Drill pilot holes for the mounting screws.

3. Wiring

The M8S speaker has a 4 Ohm impedance. Ensure your amplifier is compatible with this impedance and can provide sufficient power within the speaker's RMS rating (150W RMS).

- Connect the positive (+) terminal of the speaker to the positive (+) output of your amplifier.

- Connect the negative (-) terminal of the speaker to the negative (-) output of your amplifier.
- Use high-quality speaker wire of appropriate gauge for your power levels and wire run length.

4. Securing the Speaker

Place the speaker into the cutout and align the screw holes. Secure the speaker using the provided mounting screws. Do not overtighten the screws, as this can damage the speaker frame.

OPERATING INSTRUCTIONS

Once installed, follow these guidelines for optimal operation:

- **Amplifier Settings:** Properly set the gain, crossover, and equalization settings on your amplifier to match the speaker's characteristics and your audio system's requirements. The M8S is a mid-range speaker, so it should be crossed over to prevent it from playing very low bass frequencies.
- **Volume Control:** Gradually increase the volume to avoid sudden bursts of sound that could damage the speaker or your hearing.
- **Break-in Period:** Allow a break-in period of approximately 10-20 hours of moderate listening before operating the speakers at high volumes. This allows the speaker's suspension components to loosen and perform optimally.

MAINTENANCE

Regular maintenance ensures the longevity and performance of your speaker:

- **Cleaning:** Use a soft, dry cloth to gently wipe the speaker cone and surround. Avoid using harsh chemicals or abrasive cleaners.
- **Inspection:** Periodically check the speaker for any signs of damage, such as tears in the cone or surround, or loose connections.
- **Environmental Factors:** Protect the speaker from extreme temperatures, direct sunlight, and moisture.

TROUBLESHOOTING

If you encounter issues with your M8S speaker, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No Sound	Loose wiring connection, amplifier off, incorrect source selection.	Check all wiring connections, ensure amplifier is powered on, verify correct audio source.
Distorted Sound	Over-driving amplifier, incorrect gain settings, damaged speaker.	Reduce amplifier gain, check crossover settings, inspect speaker for physical damage.
Intermittent Sound	Loose wiring, faulty amplifier, damaged speaker wire.	Inspect and secure all wiring, test with a different amplifier if possible, replace damaged speaker wire.

SPECIFICATIONS

Key technical specifications for the Massive Audio M8S 8-inch Shallow Mount Mid-Range Speaker:

Feature	Specification
Model Name	M8S
Speaker Size	8 Inches
Speaker Type	Mid-Range
Speaker Maximum Output Power	300 Watts
RMS Power Handling	150 Watts
Impedance	4 Ohms
Frequency Response	7000 Hz (Note: This appears to be a high-pass point or a specific frequency, not the full range. Refer to manufacturer's full specifications for complete range.)
Sensitivity	97 dB
Product Dimensions	2.95"D x 8"W x 9.6"H
Mounting Type	Bracket Mount
Material	Cast Aluminum
Item Weight	3.04 pounds
UPC	623169660078

WARRANTY AND SUPPORT

The Massive Audio M8S speaker comes with a Limited Warranty. For specific details regarding warranty coverage, duration, and claims, please refer to the documentation included with your purchase or contact Massive Audio directly.

For technical support, product inquiries, or warranty service, please visit the official Massive Audio website or contact their customer service department.

PRODUCT OVERVIEW VIDEO

Video: An overview of Massive Audio products, including the M8S speaker, highlighting features and applications. This video is provided by the seller, Massive Audio Direct.