

Nespresso 3194-US-BK

Nespresso Aeroccino 3194-US-BK Milk Frother User Manual

Model: 3194-US-BK

1. PRODUCT OVERVIEW

The Nespresso Aeroccino 3194-US-BK is an automatic system designed for preparing light and creamy hot or cold milk froth. It also heats milk for lattes and other coffee recipes. Its simple operation allows for perfect milk preparation in seconds.

Key Features:

- Prepares hot and cold milk froth for cappuccinos and other beverages.
- Heats milk for lattes.
- Achieves milk temperature of 160-170°F (71-77°C) for hot preparations.
- Integrated whisk storage in the base for convenience.
- Green LED light indicates readiness.
- Simple power on/off switch.
- Maximum capacity: 130 ml for milk froth, 240 ml for hot milk.

2. SAFETY INSTRUCTIONS

Please read all instructions before using the Nespresso Aeroccino to prevent injury or damage. Keep this manual for future reference.

- Do not immerse the appliance, power base, or power cord in water or any other liquid.
- Ensure the appliance is placed on a stable, flat, heat-resistant surface, away from water splashes.
- Do not operate the appliance with a damaged cord or plug. Contact Nespresso customer service for repair.
- This appliance is for household use only. Do not use outdoors.

- Always ensure the whisk is correctly inserted before operation.
- Do not fill above the maximum level indicators to avoid overflow.
- The exterior of the appliance may become hot during operation. Handle with care.
- Unplug the appliance from the outlet when not in use and before cleaning.
- Keep out of reach of children.

3. PACKAGE CONTENTS

Verify that all components are present in the package:

- Nespresso Aeroccino Milk Frother (Jug and Base)
- Power Cable
- Milk Frothing Whisk (for hot and cold froth)
- Hot Milk Whisk (for hot milk without froth)
- User Manual (this document)

4. SETUP

Follow these steps for initial setup before first use:



Image: The Nespresso Aeroccino 3194-US-BK Milk Frother, ready for use.

1. **Unpack:** Carefully remove all components from the packaging.
2. **Clean:** Before first use, wash the inside of the Aeroccino jug and the whisks with warm water and a mild detergent. Rinse thoroughly and dry. Do not immerse the exterior of the jug or the power base in water.
3. **Place:** Position the Aeroccino base on a clean, dry, and stable surface.
4. **Connect:** Plug the power cable into a grounded electrical outlet.
5. **Whisk Selection:** Choose the appropriate whisk for your desired preparation (frothing whisk for froth, hot milk whisk for hot milk without froth). Ensure it is securely placed on the pin at the bottom of the jug.

5. OPERATING INSTRUCTIONS

The Aeroccino offers simple one-button operation for various milk preparations.



Image: Nespresso Aeroccino preparing frothed milk for coffee beverages.

5.1 Preparing Hot Milk Froth (Cappuccino, Latte Macchiato)

1. Insert the **milk frothing whisk** (the one with the coil) into the jug.
2. Pour cold, fresh milk into the jug, ensuring it does not exceed the lower 'MAX FROTH' level indicator (130 ml). For best results, use whole or semi-skimmed milk at refrigerated temperature (4-6°C).
3. Place the lid on the jug.
4. Press the button once. The button will illuminate red.
5. The Aeroccino will automatically stop when the milk froth is ready (approximately 60-90 seconds). The button light will turn off.
6. Pour the hot milk froth directly into your cup.

5.2 Preparing Cold Milk Froth (Iced Cappuccino)

1. Insert the **milk frothing whisk** (the one with the coil) into the jug.
2. Pour cold, fresh milk into the jug, ensuring it does not exceed the lower 'MAX FROTH' level indicator (130 ml).
3. Place the lid on the jug.
4. Press and hold the button for approximately 2 seconds until the button illuminates blue.
5. The Aeroccino will automatically stop when the cold milk froth is ready (approximately 60 seconds). The button light will turn off.
6. Pour the cold milk froth directly into your cup.

5.3 Preparing Hot Milk (Latte, Hot Chocolate)

1. Insert the **hot milk whisk** (the one without the coil) into the jug.
2. Pour cold, fresh milk into the jug, ensuring it does not exceed the upper 'MAX MILK' level indicator (240 ml).
3. Place the lid on the jug.
4. Press the button once. The button will illuminate red.
5. The Aeroccino will automatically stop when the hot milk is ready (approximately 90-120 seconds). The button light will turn off.
6. Pour the hot milk directly into your cup.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your Aeroccino. The product care instructions specify **Hand Wash Only**.

6.1 Daily Cleaning

1. **Unplug:** Always unplug the Aeroccino from the power outlet before cleaning.
2. **Cool Down:** Allow the appliance to cool down completely after use.
3. **Rinse:** Immediately after each use, remove the whisk and rinse the inside of the jug and the whisk with cold water to prevent milk residue from drying.
4. **Wash:** Wash the inside of the jug and the whisk with warm water and a non-abrasive sponge or cloth using a mild detergent.
5. **Dry:** Dry all parts thoroughly with a soft cloth.
6. **Exterior:** Wipe the exterior of the jug and the power base with a damp cloth. Do not use abrasive materials or immerse the base in water.

6.2 Important Cleaning Notes

- Do not use harsh chemicals, abrasive pads, or sharp objects to clean the Aeroccino, as this can damage the non-stick coating.
- Ensure the bottom of the jug and the power base are dry before placing the jug back on the base.
- Store the spare whisk in its designated storage area under the base.

7. TROUBLESHOOTING

Refer to the following table for common issues and their solutions:



III

Aeroccino does not start.

- Be sure to position the jug correctly on a clean base.
- Be sure to attach the whisk to the jug correctly.

III

Quality of milk froth not up to standard.

- Be sure to use whole or semi-skimmed milk at refrigerated temperature (about 4-6°C)
- Be sure to use the appropriate whisk and the jug is clean.



Red Button blinking.

- The appliance is too hot. Rinse it under cool water.
- Whisk is missing.
- Not enough milk. Fill milk frother up to one of the two "max" level.



Milk Overflows.

- Be sure to use the appropriate whisk and check the corresponding indicator level.

Image: Troubleshooting chart for common Aeroccino issues.

Problem	Possible Cause	Solution
Aeroccino does not start.	Jug not positioned correctly on the base. Whisk not attached correctly.	Ensure the jug is correctly placed on a clean base. Verify the whisk is securely attached to the jug's pin.
Quality of milk froth not up to standard.	Incorrect milk type or temperature. Incorrect whisk used. Jug or whisk is not clean.	Use whole or semi-skimmed milk at refrigerated temperature (4-6°C). Ensure the appropriate frothing whisk is used. Clean the jug and whisk thoroughly.
Red button blinking.	Appliance is too hot.	Rinse the jug under cool water to cool it down. Allow a few minutes before next use.
Milk overflows.	Overfilled jug. Incorrect whisk for milk volume.	Do not fill above the 'MAX FROTH' (130 ml) or 'MAX MILK' (240 ml) indicator levels. Ensure the correct whisk is used for the desired preparation.
Whisk is missing.	Whisk not in place.	Ensure the whisk is properly inserted onto the pin at the bottom of the jug.

8. SPECIFICATIONS

Detailed technical specifications for the Nespresso Aeroccino 3194-US-BK:

DESIGN INTUITIF

INTUITIVE DESIGN



Image: Dimensions of the Nespresso Aeroccino 3194-US-BK.

Specification	Detail
Brand	Nespresso
Model Number	3194-US-BK
Color	Black
Material	Stainless Steel
Product Dimensions (W x H)	4.8" x 7.56" (12.2 cm x 19.2 cm)
Item Weight	1.9 pounds (862 grams)
Capacity (Milk Froth)	130 Milliliters
Capacity (Hot Milk)	240 Milliliters

Specification	Detail
Power Source	Corded Electric
Wattage	550 Watts
Recommended Uses	Cappuccinos, Lattes, Hot Milk
Product Care Instructions	Hand Wash Only

9. WARRANTY AND SUPPORT

Nespresso products are manufactured to the highest quality standards. For specific warranty information, please refer to the warranty card included with your purchase or visit the official Nespresso website.

For customer support, troubleshooting assistance, or to order accessories, please contact Nespresso customer service or visit the official Nespresso store online:

[Visit the Nespresso Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

Can the Nespresso Aeroccino 3194-US-BK Milk Frother be used to prepare cocoa?

The Nespresso Aeroccino 3194-US-BK Milk Frother is designed to prepare hot or cold milk froth and to heat milk for lattes and other coffee recipes. The manual specifically mentions its use for "Hot Chocolate"...

[Read full answer](#)