



Manuals.plus /

› Sony /

› Sony ICFCS10iP AM/FM Clock Radio with iPod/iPhone Speaker Dock User Manual

## Sony ICFCS10iP

# Sony ICFCS10iP AM/FM Clock Radio with iPod/iPhone Speaker Dock User Manual

## INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Sony ICFCS10iP AM/FM Clock Radio with iPod/iPhone Speaker Dock. Please read this manual thoroughly before using the unit and retain it for future reference.

## WHAT'S IN THE BOX

- Sony ICFCS10iP AM/FM Clock Radio
- AC Power Adapter
- Wireless Remote Commander Remote



Image: The Sony ICFCS10iP clock radio, its AC power adapter, and the remote control, as typically found in the product packaging.

## SETUP

### 1. Power Connection

Connect the supplied AC power adapter to the DC IN 9V jack on the rear of the unit and then plug the adapter into a standard wall outlet. The unit will power on and the clock display will flash.



Image: The Sony ICFCS10iP clock radio shown with its power adapter, illustrating the connection point.

## 2. Setting the Clock

1. Press and hold the **CLOCK/TIME ZONE** button located on the top panel until the hour digits flash.
2. Press the **TIME SET +** or **-** buttons to adjust the hour.
3. Press the **CLOCK/TIME ZONE** button again. The minute digits will flash.
4. Press the **TIME SET +** or **-** buttons to adjust the minutes.
5. Press the **CLOCK/TIME ZONE** button to confirm the time setting.

## 3. Adjusting the Time Zone

To adjust the time zone, press the **CLOCK/TIME ZONE** button repeatedly until the desired time zone appears on the display. The clock will automatically adjust.

## 4. FM/AM Antenna Connection

For optimal FM reception, extend the supplied FM wire antenna fully. For AM reception, rotate the unit for best signal. The AM antenna is built-in.



Image: The back panel of the Sony ICFCS10iP, highlighting the audio input jack and the FM antenna terminal.

## OPERATING INSTRUCTIONS



Image: An overhead view of the Sony ICFCS10iP, detailing the layout of its control buttons and the digital display.

### 1. Radio Operation

1. Press the **RADIO ON/OFF** button to turn on the radio.
2. Press the **RADIO BAND** button to select FM or AM.
3. Use the **TUNING +** or **-** buttons to tune to the desired station. Press and hold for automatic scanning.
4. To preset a station: Tune to the desired station, then press and hold one of the **PRESET (1-5)** buttons until the preset number flashes on the display.

5. To recall a preset station: Press the corresponding **PRESET (1-5)** button.

## 2. iPod/iPhone Dock Operation



Image: The front of the Sony ICFC10iP, showing the integrated dock connector designed for iPod and iPhone devices.

1. Open the dock cover and carefully place your compatible iPod or iPhone onto the connector.
2. Press the **iPod/iPhone** button to switch to iPod/iPhone playback mode.
3. Use the playback controls on your device or the remote control to play, pause, skip tracks, and adjust volume.
4. The docked device will charge automatically when the unit is powered on and the device is properly seated.

## 3. Alarm Settings

The unit features dual alarms (Alarm A and Alarm B) and flexible alarm settings.

### 1. Setting Alarm A or B:

- Press and hold the **ALARM SET A** or **ALARM SET B** button until the alarm time flashes.
- Use the **TIME SET +** or **-** buttons to adjust the hour, then press the **ALARM SET** button to confirm.
- Adjust the minutes similarly, then press **ALARM SET** to confirm.
- Select the wake source (iPod, Radio, or Buzzer) using the **ALARM MODE** button.
- Select the alarm duration (2, 5, or 7 days) using the **ALARM MODE** button.
- Press the **ALARM ON/OFF A** or **B** button to activate the alarm. The alarm indicator will light up.

2. **Snooze Function:** When the alarm sounds, press the **SNOOZE/DATE/SLEEP OFF** button to temporarily stop the alarm. The alarm will sound again after approximately 10 minutes.

3. **Stopping the Alarm:** To stop the alarm completely, press the **ALARM ON/OFF A** or **B** button.

## 4. Sleep Timer

The sleep timer allows you to fall asleep to music, and the unit will automatically turn off after a set period.

1. Press the **SLEEP** button repeatedly to cycle through the available sleep times (e.g., 90, 60, 30, 15 minutes, OFF).
2. The unit will turn off automatically after the selected time.

## 5. Sound Settings

- **Volume:** Use the **VOLUME +** or **-** buttons to adjust the listening volume.
- **MEGA BASS:** Press the **MEGA BASS** button to enhance bass frequencies. Press again to deactivate.
- **MEGA XPAND:** Press the **MEGA XPAND** button to create a wider stereo sound field. Press again to deactivate.

## 6. Remote Control

The supplied wireless remote commander allows control of various functions from a distance, including power, volume, radio tuning, and iPod/iPhone playback.

## MAINTENANCE

- **Cleaning the Unit:** Wipe the exterior of the unit with a soft, dry cloth. Do not use abrasive pads, scouring powders, or solvents such as alcohol or benzene.
- **Cleaning the Dock Connector:** Periodically inspect the dock connector for dust or debris. Use a soft, dry brush to gently clean the pins if necessary.
- **Battery Replacement (Remote Control):** If the remote control's range decreases, replace its battery with a new one of the same type. Refer to the remote control's compartment for battery specifications.

## TROUBLESHOOTING

Symptom	Possible Cause	Solution
No power.	AC power adapter not connected properly.	Ensure the AC power adapter is securely plugged into the unit and a working wall outlet.
No sound from iPod/iPhone.	iPod/iPhone not properly docked or volume too low.	Ensure the device is correctly seated in the dock. Increase the volume on both the unit and the iPod/iPhone.
Poor radio reception.	Antenna not positioned correctly or interference.	Extend and reposition the FM wire antenna. Rotate the unit for better AM reception. Move away from other electronic devices.
Alarm does not sound.	Alarm not activated or set incorrectly.	Verify that the alarm is set and activated (alarm indicator lit). Check the alarm time and wake source.
iPod/iPhone not charging.	Device not compatible or not properly docked.	Ensure your device is compatible with the dock. Re-seat the device firmly.

## SPECIFICATIONS

- **Model:** ICFC10iP
- **Brand:** Sony
- **Radio Frequency Range:** FM: 87.5 - 108 MHz; AM: 530 - 1710 kHz
- **Power Requirements:** AC 120V, 60Hz (via supplied AC adapter)
- **Dimensions (W x H x D):** Approximately 14 x 8 x 7 inches (35.56 x 20.32 x 17.78 cm)
- **Weight:** Approximately 5.54 pounds (2.51 kg)
- **Compatible Devices:** iPod, iPhone 3G (and other compatible models)
- **Included Components:** Wireless Remote Commander Remote

## WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the warranty card included with your product or visit the official Sony support website. Keep your purchase receipt for warranty service.

**Online Support:** [www.sony.com/electronics/support](http://www.sony.com/electronics/support)