

Cadillac Allante

1991-1992 Cadillac Allante Service and Repair Manual Set

Comprehensive Guide for Maintenance, Service, and Troubleshooting

[Introduction](#) [Safety](#) [Maintenance](#) [Systems Overview](#) [Troubleshooting](#) [Specifications](#) [Support](#)

1. INTRODUCTION TO THE SERVICE MANUAL SET

This comprehensive service and repair manual set is specifically designed for the 1991 and 1992 Cadillac Allante models. It includes the primary Service Information Manual and a dedicated Service Manual Supplement, providing detailed instructions and information essential for proper vehicle maintenance and repair.

The manuals contain step-by-step procedures, exploded illustrations, diagrams, and troubleshooting guides, mirroring the resources used by GM mechanics and technicians at dealerships. This set is an invaluable resource for owners and service professionals alike, aiming to facilitate accurate diagnostics and effective repairs, ultimately helping to maintain the vehicle's performance and longevity.

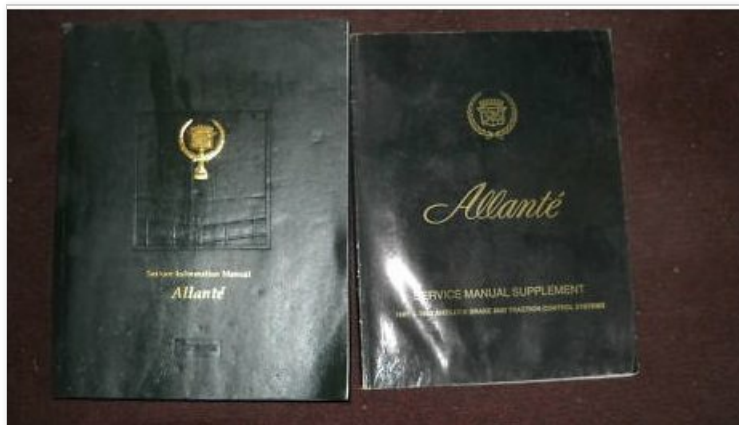


Figure 1: The 1991-1992 Cadillac Allante Service Information Manual (left) and Service Manual Supplement (right). These manuals provide detailed instructions and diagrams for vehicle maintenance and repair.

2. SAFETY PRECAUTIONS AND PREPARATION

Before commencing any service or repair work on your Cadillac Allante, it is crucial to observe all safety precautions. Always wear appropriate personal protective equipment, such as safety glasses and gloves. Ensure the vehicle is securely supported on jack stands if lifted, and disconnect the battery's negative terminal to prevent accidental electrical discharge.

Familiarize yourself with the vehicle's systems and the specific procedures outlined in this manual. Improper procedures can lead to injury or damage to the vehicle. Always work in a well-ventilated area, especially when dealing with fluids or fumes.

3. GENERAL MAINTENANCE PROCEDURES

Regular maintenance is vital for the longevity and optimal performance of your Cadillac Allante. This section covers routine checks and service intervals.

3.1. Fluid Level Checks

- **Engine Oil:** Check oil level regularly and change according to the recommended schedule using the specified oil type.
- **Coolant:** Inspect coolant level and condition. Ensure the cooling system is free of leaks.
- **Brake Fluid:** Verify brake fluid level and condition. Low fluid can indicate worn pads or a leak.
- **Power Steering Fluid:** Check fluid level and ensure no leaks are present in the power steering system.
- **Transmission Fluid:** For automatic transmissions, check fluid level with the engine running and at operating temperature.

3.2. Tire Care and Inspection

Proper tire inflation and regular inspection are critical for safety and fuel efficiency.

- **Tire Pressure:** Maintain recommended tire pressure as specified in the owner's manual or on the vehicle's door jamb sticker.
- **Tread Depth:** Inspect tire tread for wear and replace tires when tread depth is below safety limits.
- **Rotation:** Rotate tires periodically to ensure even wear and extend tire life.

4. VEHICLE SYSTEMS OVERVIEW AND SERVICE

This section provides an overview of the major vehicle systems and detailed service procedures, including assembly and disassembly instructions.

4.1. Engine and Drivetrain

Detailed procedures for engine component removal, installation, and overhaul. Includes specifications for torque settings and clearances.

- Cylinder head removal and installation
- Timing chain/belt service
- Fuel system diagnostics and repair
- Transmission service and component replacement

4.2. Electrical Systems

Comprehensive wiring diagrams and diagnostic charts for all electrical components, including lighting, charging, starting, and accessory systems.

- Battery and charging system testing
- Fuse box layouts and circuit identification
- Sensor testing and replacement

4.3. Chassis, Suspension, and Steering

Instructions for inspecting, repairing, and replacing components of the suspension, steering, and chassis.

- Shock absorber and strut replacement
- Wheel bearing service
- Steering gear and pump procedures

4.4. Brake and Traction Control Systems

This section, heavily detailed in the Service Manual Supplement, covers the anti-lock brake system (ABS) and traction control system (TCS).

- Brake pad and rotor replacement
- Brake fluid bleeding procedures
- ABS sensor testing and replacement
- TCS component diagnostics

5. TROUBLESHOOTING GUIDE

This guide assists in diagnosing common issues based on symptoms. Refer to the detailed sections for specific repair procedures.

Symptom	Possible Cause	Action/Reference
Engine Cranks but Won't Start	Fuel delivery issue, ignition system fault, sensor malfunction	Check fuel pressure, spark, and engine sensor readings (Section 4.1, 4.2)
Brake Pedal Feels Spongy	Air in brake lines, low brake fluid, worn master cylinder	Bleed brake system, check fluid level, inspect master cylinder (Section 4.4)
Unusual Noises from Suspension	Worn bushings, faulty shock absorbers, loose components	Inspect suspension components for wear or damage (Section 4.3)

6. TECHNICAL SPECIFICATIONS

This section provides key technical specifications for the 1991-1992 Cadillac Allante, including engine data, fluid capacities, and torque specifications. Refer to the specific manual chapters for detailed component specifications.

- **Engine Type:** 4.5L V8 (1991), 4.6L Northstar V8 (1992)
- **Horsepower:** Varies by year and engine type
- **Transmission:** 4-speed automatic
- **Brake Type:** Four-wheel disc with ABS
- **Tire Pressure:** Refer to vehicle's door jamb sticker
- **Oil Capacity:** Refer to specific engine section in manual

7. OBTAINING FURTHER SUPPORT


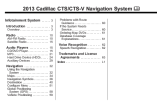
 



For additional assistance or if you encounter issues not covered in detail within this manual set, it is recommended to consult with a certified Cadillac service center or a qualified automotive technician. These professionals have access to specialized tools, diagnostic equipment, and the latest service bulletins.

While this manual provides comprehensive information, complex repairs may require professional expertise. Always

prioritize safety and proper repair techniques.

© 1991-1992 General Motors. All rights reserved. This manual is for informational purposes only.

Related Documents - Allante

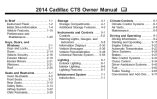	<p>2002-2006 Cadillac Escalade Coolant Replacement Guide iFixit</p> <p>Detailed guide for replacing the engine coolant in 2002-2006 Cadillac Escalade models. Learn the necessary tools, parts, and steps from iFixit.</p>
	<p>2013 Cadillac CTS/CTS-V Navigation System: User Manual</p> <p>A detailed user manual for the 2013 Cadillac CTS and CTS-V navigation and infotainment system. Covers radio, audio playback (CD, DVD, MP3, HDD), voice recognition, GPS navigation, map features, and system settings.</p>
	<p>2002 Cadillac Escalade Air Bag Restraint System Service Information</p> <p>Comprehensive service information for the 2002 Cadillac Escalade's Supplemental Inflatable Restraint (SIR) system. Covers system description, operation, safety precautions, component locations, disabling/activating procedures, disposal, adjustments, and detailed diagnostics including DTCs and troubleshooting.</p>
	<p>2013 Cadillac Escalade/Escalade ESV Owner's Manual: Comprehensive Guide</p> <p>Official owner's manual for the 2013 Cadillac Escalade and Escalade ESV. Covers vehicle features, operation, safety, maintenance, and controls for an optimal driving experience.</p>
	<p>2018 Cadillac User Experience Guide</p> <p>Comprehensive guide to the 2018 Cadillac User Experience infotainment system, covering navigation, audio, phone, OnStar, settings, and more. Learn to use your vehicle's advanced features.</p>
	<p>2014 Cadillac CTS Owner Manual</p> <p>Comprehensive owner's manual for the 2014 Cadillac CTS, detailing vehicle features, operation, maintenance, safety guidelines, and controls for an informed ownership experience.</p>