### Manuals+

Q & A | Deep Search | Upload

### manuals.plus /

- Logitech /
- Logitech C270 HD Webcam Instruction Manual

# Logitech 960-000694

# **Logitech C270 HD Webcam Instruction Manual**

Model: 960-000694 Brand: Logitech

# 1. PRODUCT OVERVIEW

The Logitech C270 HD Webcam provides crisp HD 720p video calls and recording. It features automatic light correction and an integrated noise-reducing microphone, making it suitable for various communication needs. The webcam is designed for easy attachment to laptops or monitors.



Image: Logitech C270 HD Webcam, showcasing its compact design and integrated lens.

# 2. SETUP GUIDE

Follow these steps to set up your Logitech C270 HD Webcam:

- 1. **Unpack the Webcam:** Carefully remove the webcam and its cable from the packaging.
- 2. **Attach to Device:** The webcam features an adjustable universal clip. Securely attach the webcam to the top of your laptop screen or LCD monitor. The clip can also be folded to allow the webcam to sit on a flat surface.



Image: The Logitech C270 webcam demonstrating its universal clip for attachment to various screens or surfaces.

- 3. **Connect to Computer:** Plug the USB-A connector of the webcam's 5-foot cable into an available USB port on your computer (USB 2.0 port recommended for optimal performance).
- 4. **Driver Installation:** The webcam is typically plug-and-play. Your operating system (Windows XP SP2 or higher, Windows Vista, Windows 7 (32-bit or 64-bit), Mac OS X 10.5 or higher) should automatically detect and install the necessary drivers. For additional software features, such as photo capture and face tracking, you may visit the official Logitech support website.



Image: Visual representation of Logitech C270 compatibility with Windows and Mac operating systems.

For detailed setup instructions and software downloads, refer to the official user manual available as a PDF:User Manual (PDF).

# 3. OPERATING THE WEBCAM

The Logitech C270 HD Webcam is designed for simple and effective video communication.

• **HD Video Calling:** Enjoy crisp HD 720p/30 fps video calls with a diagonal 55° field of view. The webcam is compatible with popular platforms such as Skype and Zoom.



Image: A user engaged in an easy HD video call using the Logitech C270 webcam, demonstrating its clear video quality.

• **Noise-Reducing Microphone:** The built-in noise-reducing mic ensures your voice is heard clearly up to 1.5 meters away, even in busy environments.



Image: Close-up of the Logitech C270 webcam highlighting its noise-reducing microphone feature.

• Automatic Light Correction: C270's RightLight 2 feature automatically adjusts to lighting conditions, producing brighter, more contrasted images to ensure you look your best, even in dim lighting.

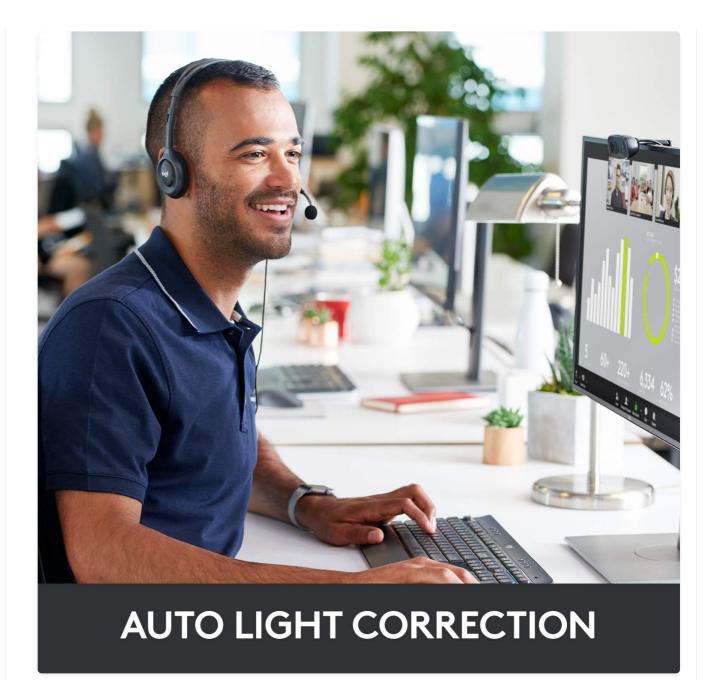


Image: A user benefiting from the auto light correction feature of the Logitech C270 webcam during a video call.

# 4. MAINTENANCE

To ensure the longevity and optimal performance of your Logitech C270 HD Webcam, follow these simple maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to gently wipe the camera lens and body. Avoid using abrasive cleaners or solvents, as they may damage the surface.
- Storage: When not in use, store the webcam in a clean, dry place away from extreme temperatures and direct sunlight.
- Cable Care: Avoid sharp bends or kinks in the USB cable to prevent internal damage.

### 5. TROUBLESHOOTING

If you encounter issues with your Logitech C270 HD Webcam, try the following troubleshooting steps:

#### • Webcam Not Detected:

- Ensure the USB cable is securely plugged into a working USB port on your computer.
- Try plugging the webcam into a different USB port.
- Restart your computer.
- Check your computer's Device Manager (Windows) or System Information (Mac) to see if the webcam is listed and recognized.

#### • Poor Video Quality:

- Ensure you have adequate lighting in your environment. The RightLight 2 feature works best with some ambient light.
- o Clean the camera lens with a soft, dry cloth.
- Verify your internet connection is stable and has sufficient bandwidth for HD video.
- Update your webcam drivers from the Logitech support website.

#### • Microphone Issues:

- Check your computer's sound settings to ensure the Logitech C270 microphone is selected as the default input device.
- Ensure the microphone is not muted in your operating system or video conferencing application.
- Test the microphone in a different application to isolate the issue.

If problems persist, consult the full user manual or Logitech's online support resources.

# 6. SPECIFICATIONS

Product Dimensions	6 x 4 x 8 inches
Item Weight	2.56 ounces
Manufacturer	Logitech
ASIN	B004FHO5Y6
Country of Origin	Vietnam
Item Model Number	960-000694
Photo Sensor Technology	CCD
Video Capture Resolution	720p
Maximum Focal Length	0.01 Millimeters
Maximum Aperture	1.8 f
Video Capture Format	MJPEG

Supported Audio Format	PCM
Connectivity Technology	USB-A
Color	Black

# 7. What's in the Box

The Logitech C270 HD Webcam package includes:

- Webcam with 5-foot cable
- User documentation



Image: The retail packaging of the Logitech C270 HD Webcam, indicating contents.

#### 8. WARRANTY AND SUPPORT

Logitech provides support and warranty for the C270 HD Webcam:

- Warranty: This product comes with a 2-year limited hardware warranty.
- User Manual: A comprehensive user manual is available for download: User Manual (PDF).
- Online Support: For further assistance, drivers, and software, visit the official Logitech support website.

### 9. OFFICIAL PRODUCT VIDEOS

There are no official product videos from the seller available for embedding in this manual.

© 2025 Logitech. All rights reserved.

#### Related Documents - 960-000694

