

[Manuals.plus](#) /

› [Whitmor](#) /

› Whitmor 3-Tier Expandable Wood and Chrome Shoe Rack Instruction Manual (Model 6026-2516)

Whitmor 6026-2516

Whitmor 3-Tier Expandable Wood and Chrome Shoe Rack Instruction Manual

Model: 6026-2516

INTRODUCTION

Thank you for choosing the Whitmor 3-Tier Expandable Wood and Chrome Shoe Rack. This manual provides detailed instructions for assembly, operation, maintenance, and troubleshooting to ensure optimal use and longevity of your product. This shoe rack is designed to organize your footwear efficiently, featuring an expandable and stackable design to adapt to your storage needs.



Image: The Whitmor 3-Tier Expandable Wood and Chrome Shoe Rack, shown fully assembled and filled with various types of shoes, demonstrating its storage capacity.

SETUP AND ASSEMBLY

Assembly of the Whitmor 3-Tier Expandable Shoe Rack is designed to be straightforward and requires no tools. Follow these steps for quick and easy setup:

1. **Unpack Components:** Carefully remove all parts from the packaging. Verify that all components are present according to the included parts list.

2. **Connect Side Frames:** The rack consists of natural wood side frames and chrome metal bars. Insert the chrome metal bars into the designated holes on the wood side frames. Ensure they are securely fitted.
3. **Expand to Desired Width:** The metal bars are expandable. Gently pull the side frames apart to extend the rack from 25 inches up to 46 inches, depending on your space requirements.
4. **Stacking (Optional):** If you have multiple units, align the top of one assembled rack with the bottom of another. Use the patented assembly connectors to securely stack them. **Important: Do not stack more than 3 tiers.**

Caution: The cross-braces are stamped steel and may have sharp edges. Exercise caution during assembly to prevent injury.



Image: An empty Whitmor 3-Tier Expandable Wood and Chrome Shoe Rack, illustrating the design of its expandable metal bars and natural wood frames.

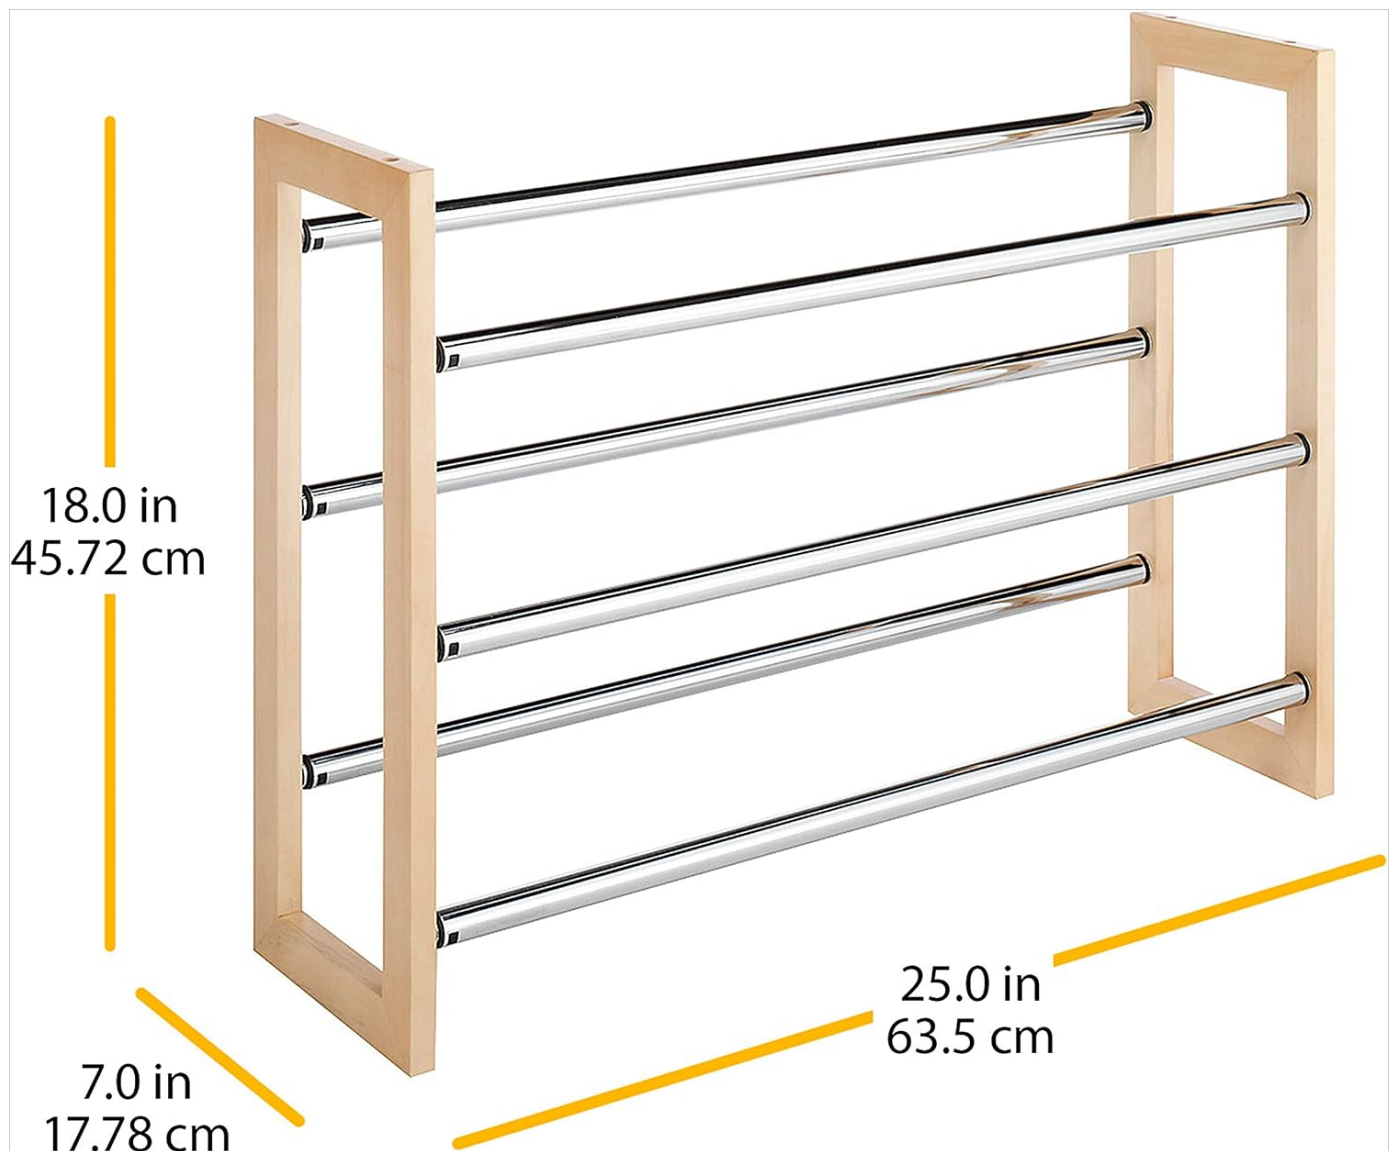


Image: A diagram showing the dimensions of the shoe rack: 18.0 inches (45.72 cm) in height, 7.0 inches (17.78 cm) in depth, and 25.0 inches (63.5 cm) in width, indicating its expandable nature.

OPERATING INSTRUCTIONS

Once assembled, the Whitmor 3-Tier Expandable Shoe Rack is ready for use. Its design allows for versatile storage:

- **Placing Shoes:** Arrange shoes on the chrome bars. The expandable design accommodates various shoe sizes and types, from sneakers to heels.
- **Maximizing Space:** Utilize the expandable feature to fit the rack into different spaces, such as closets, entryways, or bedrooms. The stackable design allows for vertical expansion to maximize floor space.
- **Weight Capacity:** Each tier has a maximum weight capacity of 5 kg (approximately 11 lbs). Distribute weight evenly to maintain stability.

Your browser does not support the video tag.

Video: An official Whitmor video demonstrating the features and use of a 3-tier shoe rack, including how it can be used for organizing various footwear.

MAINTENANCE

To keep your Whitmor shoe rack in excellent condition, follow these simple maintenance guidelines:

- **Cleaning:** Wipe down the wood frames with a soft, damp cloth. For the chrome bars, use a mild cleaner and a soft cloth to prevent tarnishing or rust. Avoid abrasive cleaners.
- **Dusting:** Regularly dust the rack to prevent buildup, especially on the chrome surfaces.
- **Inspection:** Periodically check all connections to ensure they remain secure, especially if the rack is frequently expanded or moved.
- **Environment:** Avoid placing the rack in excessively humid environments to protect the wood and chrome finish.

TROUBLESHOOTING

If you encounter any issues with your Whitmor 3-Tier Expandable Shoe Rack, refer to the following common solutions:

Problem	Possible Cause	Solution
Rack is unstable or wobbly.	Uneven assembly; overloaded tier; uneven floor surface.	Ensure all bars are fully inserted and secure. Redistribute weight evenly across tiers. Place the rack on a level surface.
Difficulty expanding/contracting.	Friction between metal bars; debris in channels.	Clean the metal bars and channels. Apply a small amount of silicone lubricant if necessary.
Stacked units are unstable.	Exceeded maximum stacking height; improper connection.	Do not stack more than 3 tiers. Ensure patented connectors are fully engaged and units are aligned.
Damage to wood or chrome.	Impact; exposure to harsh chemicals or moisture.	Avoid impacts. Clean with mild products. For significant damage, contact customer support.

If the problem persists after attempting these solutions, please contact Whitmor Customer Care for further assistance.

SPECIFICATIONS

- **Model Name:** 3 Tier Expandable Shoe Rack - Stackable - Natural Wood and Chrome
- **Model Number:** 6026-2516
- **Brand:** Whitmor
- **Material:** Natural Wood, Chrome
- **Color:** Wood & Chrome
- **Number of Tiers:** 3
- **Product Dimensions (Assembled):** 7.0" D x 25.0" W x 18.0" H (17.78 cm D x 63.5 cm W x 45.72 cm H)
- **Expandable Width:** 25 inches to 46 inches
- **Maximum Weight Capacity per Tier:** 5 kg (approximately 11 lbs)
- **Assembly Required:** Yes (tool-free)
- **Special Feature:** Expandable, Stackable (up to 3 tiers)
- **Item Weight:** 3.32 pounds (1.51 Kilograms)
- **UPC:** 038861085539

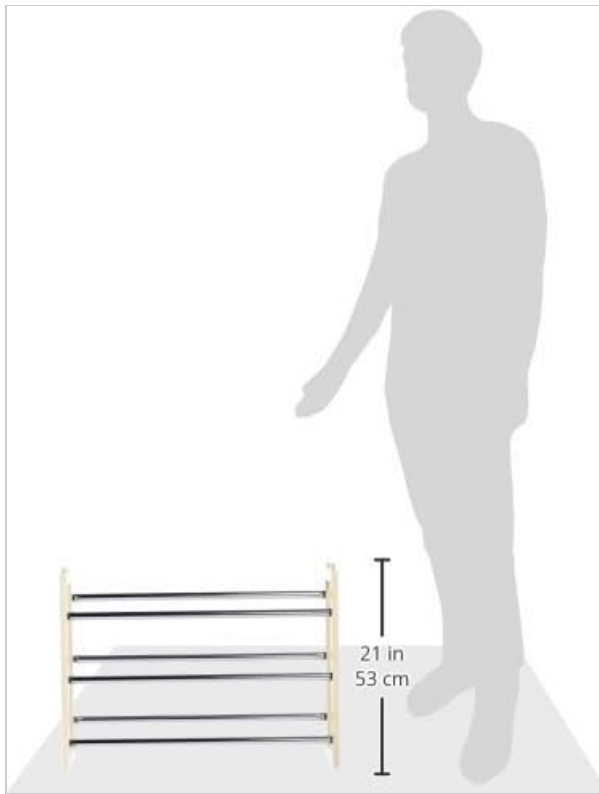


Image: A person standing next to the assembled shoe rack, providing a visual reference for its size and height.

WARRANTY AND SUPPORT

Whitmor products are manufactured with quality and durability in mind. For replacement parts or any assembly questions, please contact Whitmor Customer Care.

- **Customer Care Phone:** 1-888-WHITMOR (1-888-944-8667)
- **Online Support:** Visit the official Whitmor website for additional support resources and FAQs.

Please have your model number (6026-2516) available when contacting customer support to ensure efficient service.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question