

Electrolux EL8602A

Electrolux Nimble Upright Bagless Vacuum EL8602A Instruction Manual

Model: EL8602A

1. INTRODUCTION

This manual provides detailed instructions for the safe and effective use, assembly, operation, and maintenance of your Electrolux Nimble Upright Bagless Vacuum, model EL8602A. Please read all instructions carefully before using the appliance and retain this manual for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed, including the following:

- Read all instructions before using this vacuum cleaner.
- Do not leave appliance when plugged in. Unplug from outlet when not in use and before servicing.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not use without dust cup and/or filters in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.

3. PRODUCT OVERVIEW

The Electrolux Nimble EL8602A is an upright bagless vacuum designed for effective cleaning across various floor types. It features a multi-cyclonic system, sealed HEPA filtration, and a swivel steering system for enhanced maneuverability.





Figure 1: Front view of the Electrolux Nimble Upright Bagless Vacuum EL8602A.

4. ASSEMBLY INSTRUCTIONS

Your Electrolux Nimble vacuum requires minimal assembly. Follow these steps to prepare your vacuum for use:

1. Carefully remove all components from the packaging.
2. Insert the handle into the main vacuum body until it clicks securely into place.
3. Attach the hose to the designated port on the vacuum. Ensure it is firmly connected.
4. Store the included accessories (Quick-Release Telescopic Wand, 3-in-1 Versatool) on the vacuum's onboard storage clips.



Figure 2: Attaching the quick-release wand to the vacuum.

5. OPERATING YOUR VACUUM

5.1 Powering On/Off

To turn the vacuum on or off, press the power button located on the main body of the unit.

5.2 Swivel Steering

The Nimble features a swivel steering system that allows for easy maneuverability around furniture and into hard-to-reach areas. Gently twist the handle to guide the vacuum in the desired direction.

5.3 Carpet and Bare Floor Selection

The vacuum is equipped with a carpet/bare floor selector, allowing you to optimize cleaning performance for different surfaces. Press the appropriate button to switch between carpet mode (for brushroll activation) and bare floor mode (for brushroll deactivation).



Figure 3: Vacuum head demonstrating transition between carpet and hard floor cleaning.

5.4 Using the Quick-Release Wand and Hose

For extended reach cleaning, such as stairs, ceilings, or high shelves, press the quick-release button to detach the telescopic wand and hose. This combination provides up to 14 feet of reach.



Figure 4: Utilizing the extended wand for cleaning high areas.

5.5 Using the 3-in-1 Versatool

The innovative 3-in-1 Versatool is designed for versatile cleaning in hard-to-reach places. It can be configured to:

- **Crevice Tool:** For narrow spaces and corners.
- **Upholstery Tool:** For cleaning fabric surfaces.
- **Brush Tool:** For dusting and delicate surfaces.

5.6 LED Headlight

The integrated LED headlight illuminates the cleaning path, making dust and debris visible in dimly lit areas or under furniture.

5.7 Product Feature Demonstration Video

Watch this video for a visual demonstration of the Electrolux Nimble Upright Bagless Vacuum's key features and operation.

Your browser does not support the video tag.

Video: Demonstration of Electrolux Nimble Upright Bagless Vacuum features, including swivel steering, cyclonic system, washable HEPA filter, carpet/bare floor selector, quick-release wand, and 3-in-1 Versatool.

6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your vacuum cleaner. Always unplug the vacuum before performing any maintenance.

6.1 Emptying the Dust Cup

The Nimble features a large capacity, bagless dust cup. Empty the dust cup when debris reaches the 'Max Fill' line or after each use. Press the release button to detach the dust cup, then open the bottom flap over a waste bin to dispose of contents.

6.2 Cleaning the Washable HEPA Filter

The sealed HEPA filtration system captures 99.97% of dust and allergens. The HEPA filter is washable and should be cleaned periodically to maintain suction performance. Remove the filter from the dust cup assembly and rinse it under cool running water until the water runs clear. Allow the filter to air dry completely for at least 24 hours before reinserting it into the vacuum. Do not use a dryer or other heating methods to dry the filter.

6.3 Belt Inspection

The vacuum is equipped with a lifetime belt. Periodically inspect the belt for any signs of wear or damage. If the brushroll is not spinning, check for obstructions or contact customer support if the belt appears broken.

7. TROUBLESHOOTING

If your vacuum cleaner is not performing as expected, consult the following common issues and solutions:

- **No Power:** Check if the power cord is securely plugged into a working outlet. Ensure the power button is pressed.
- **Loss of Suction:** Empty the dust cup. Clean or replace the HEPA filter. Check the hose and nozzles for blockages.
- **Brushroll Not Spinning:** Ensure the vacuum is in carpet mode. Check for hair or debris wrapped around the brushroll. Inspect the drive belt for damage.
- **Unusual Noise:** Turn off and unplug the vacuum. Check for any foreign objects in the brushroll, hose, or dust cup.

For issues not resolved by these steps, please contact Electrolux customer support.

8. TECHNICAL SPECIFICATIONS

Feature	Specification
Brand	Electrolux
Model Number	EL8602A
Special Features	Bagless, HEPA filtration, Corded, Cyclonic
Included Components	HEPA Filter
Capacity	1.2 Liters
Form Factor	Upright
Color	Gray

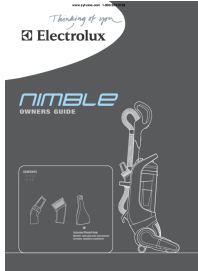

Noise Level	80 Decibels
Manufacturer	Electrolux
Controller Type	Push Button
Control Method	Touch
Product Dimensions	18 x 13.25 x 45.25 inches
Item Weight	16.98 pounds
UPC	023169130692
Specific Instructions for Use	Carpet
Batteries Required	No

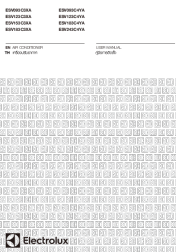



9. WARRANTY AND CUSTOMER SUPPORT

The Electrolux Nimble Upright Bagless Vacuum EL8602A comes with a **5-year limited warranty**. Please retain your proof of purchase for warranty claims.

For warranty service, technical assistance, or to purchase replacement parts, please visit the official Electrolux website or contact their customer support line. You can find more information and products from Electrolux by visiting the [Electrolux Store](#).

Related Documents - EL8602A

	<p>Electrolux Nimble Vacuum Cleaner Owner's Guide</p> <p>Comprehensive owner's guide for the Electrolux Nimble vacuum cleaner (Model EL8602A), covering setup, operation, maintenance, troubleshooting, and warranty information.</p>
	<p>Electrolux Bagless Cleaner Repair Manual: Models 300, 500, 3000, 5000</p> <p>Detailed repair manual for Electrolux 300, 500, 3000, and 5000 Bagless Cleaner series, covering disassembly, troubleshooting, parts, and diagrams.</p>

 <p>Electrolux ESV093C3XA ESV123C4YA ESV153C5XA ESV183C6XA ESV213C7XA ESV243C8XA ESV273C9XA ESV303C10XA ESV333C11XA ESV363C12XA ESV393C13XA ESV423C14XA ESV453C15XA ESV483C16XA ESV513C17XA ESV543C18XA ESV573C19XA ESV603C20XA ESV633C21XA ESV663C22XA ESV693C23XA ESV723C24XA ESV753C25XA ESV783C26XA ESV813C27XA ESV843C28XA ESV873C29XA ESV903C30XA ESV933C31XA ESV963C32XA ESV993C33XA ESV1023C34XA ESV1053C35XA ESV1083C36XA ESV1113C37XA ESV1143C38XA ESV1173C39XA ESV1203C40XA ESV1233C41XA ESV1263C42XA ESV1293C43XA ESV1323C44XA ESV1353C45XA ESV1383C46XA ESV1413C47XA ESV1443C48XA ESV1473C49XA ESV1503C50XA ESV1533C51XA ESV1563C52XA ESV1593C53XA ESV1623C54XA ESV1653C55XA ESV1683C56XA ESV1713C57XA ESV1743C58XA ESV1773C59XA ESV1803C60XA ESV1833C61XA ESV1863C62XA ESV1893C63XA ESV1923C64XA ESV1953C65XA ESV1983C66XA ESV2013C67XA ESV2043C68XA ESV2073C69XA ESV2103C70XA ESV2133C71XA ESV2163C72XA ESV2193C73XA ESV2223C74XA ESV2253C75XA ESV2283C76XA ESV2313C77XA ESV2343C78XA ESV2373C79XA ESV2403C80XA ESV2433C81XA ESV2463C82XA ESV2493C83XA ESV2523C84XA ESV2553C85XA ESV2583C86XA ESV2613C87XA ESV2643C88XA ESV2673C89XA ESV2703C90XA ESV2733C91XA ESV2763C92XA ESV2793C93XA ESV2823C94XA ESV2853C95XA ESV2883C96XA ESV2913C97XA ESV2943C98XA ESV2973C99XA ESV3003C100XA</p>	<p>Electrolux Air Conditioner User Manual - ESV Series</p> <p>Comprehensive user manual for Electrolux ESV series air conditioners. Includes installation, operation, maintenance, safety instructions, and troubleshooting for models like ESV093C3XA, ESV123C4YA, and more.</p>
 <p>Electrolux Instruction Book/说明书/説明手冊/ 사용설명서/Buku Petunjuk/ คู่มือการใช้/Sách hướng dẫn Pure C9 Bagless canister vacuum cleaner/ 无尘袋式吸尘器/ 无尘袋式吸尘器/ Pembersih debu tanpa kantong penampung/ Infenipeleran tanpa kantung Máy hút bụi dạng hộp không túi</p>	<p>Electrolux Pure C9 Bagless Canister Vacuum Cleaner Instruction Manual</p> <p>This official instruction book provides comprehensive guidance for the Electrolux Pure C9 bagless canister vacuum cleaner, covering setup, operation, maintenance, safety precautions, and troubleshooting. Available in multiple languages.</p>
 <p>Electrolux Instruction Book/说明书/説明手冊/ 사용설명서/Buku Petunjuk/ คู่มือการใช้/Sách hướng dẫn Pure C9 Bagless canister vacuum cleaner/ 无尘袋式吸尘器/ 无尘袋式吸尘器/ Pembersih debu tanpa kantong penampung/ Infenipeleran tanpa kantung Máy hút bụi dạng hộp không túi</p>	<p>Electrolux Pure C9 Bagless Canister Vacuum Cleaner: User Manual and Guide</p> <p>Comprehensive user manual for the Electrolux Pure C9 bagless canister vacuum cleaner. Includes setup, operation, maintenance, troubleshooting, and safety precautions.</p>
 <p>Electrolux CONSUMER REPAIR MANUAL 600 Bagless Cleaner ELECTROLUX ELECTROLUX</p>	<p>Electrolux 600 Bagless Cleaner Consumer Repair Manual</p> <p>Official consumer repair manual for the Electrolux 600 Bagless Cleaner (models EL61C2GRN, EL61H4SW). Contains safety warnings, part lists, exploded views, wiring diagrams, disassembly, reassembly, and troubleshooting steps.</p>