

Cricut 2000930

Cricut Pack Your Bags Cartridge Instruction Manual

Model: 2000930

1. INTRODUCTION

The Cricut Pack Your Bags Cartridge (Model 2000930) is designed to enhance your crafting projects with a variety of vacation-themed images and phrases. This cartridge is compatible with all Cricut machines and offers versatile design options for scrapbooking, card making, home decor, and other creative endeavors. This manual provides essential information for setup, operation, and maintenance to ensure optimal use of your cartridge.

2. SETUP AND COMPATIBILITY

2.1 Compatibility

This cartridge is designed for use with all Cricut machines. Ensure your machine's firmware is up to date for the best performance.

2.2 Inserting the Cartridge

1. Power on your Cricut machine.
2. Locate the cartridge slot on your Cricut machine. The location may vary depending on your specific model.
3. Gently insert the Pack Your Bags cartridge into the slot until it clicks into place. Do not force the cartridge.
4. Your Cricut machine should recognize the cartridge. Follow any on-screen prompts if applicable.

3. OPERATING INSTRUCTIONS

The Pack Your Bags cartridge offers a wide array of vacation-themed designs and six creative features to customize your cuts.

3.1 Creative Features

This cartridge includes six distinct creative features, allowing for layered designs, phrases, and shadows:

- **Layer 1:** The primary cut of an image.
- **Layer 2:** An additional layer that complements Layer 1, often used for color variation or added detail.
- **Silhouette:** A solid outline or shape of the image.

- **Phrase:** Pre-designed text elements related to the vacation theme.
- **Shape Phrase:** Phrases integrated within a specific shape.
- **Shadow:** A slightly larger, offset cut of an image or phrase, used to create a dimensional effect.

3.2 Image and Phrase Selection

The cartridge features a variety of vacation-themed images and coordinating phrases. Examples include:

- **Images:** Cruise ships, sea life (crabs, turtles), tropical flowers, beach balls, sunglasses, sandals, swimsuits, luggage, cars with luggage, sandcastles, sunscreen bottles, and people figures.
- **Phrases:** "Road Trip," "Cruise Ship," "Feelin' Crabby," "Beach Bum," "Bikini Babe," "Sunburn," "Family Vacation," "Pack Your Bags," "Pool Baby," "Long Flight," "Snorkeling," and "Deep Sea Diving."

These elements can be combined to create unique designs for various projects.





Figure 1: A visual representation of the images and creative features available on the Pack Your Bags cartridge. This includes examples of Layer 1, Layer 2, Phrase, Card, Stamp, and Shadow cuts, alongside numerous vacation-related icons and text.

3.3 Project Applications

Utilize the cartridge for:

- Creating personalized greeting cards for travel occasions.
- Designing scrapbook layouts to commemorate vacations.
- Making decorative elements for party invitations or event decor.
- Crafting unique gifts or personalized items.

4. MAINTENANCE

The Cricut Pack Your Bags Cartridge requires minimal maintenance to ensure its longevity and proper function.

- **Storage:** Store the cartridge in its original case or a protective container to prevent dust accumulation and physical damage. Keep it in a cool, dry place away from direct sunlight.
- **Cleaning:** If necessary, gently wipe the exterior of the cartridge with a soft, dry cloth. Avoid using liquids or abrasive cleaners, as these can damage the electronic components.
- **Handling:** Handle the cartridge by its edges to avoid touching the metal contacts, which could transfer oils or dirt.

5. TROUBLESHOOTING

If you encounter issues with your Cricut Pack Your Bags Cartridge, consider the following troubleshooting steps:

- **Cartridge Not Recognized:**
 - Ensure the cartridge is fully and correctly inserted into the machine's slot.
 - Clean the metal contacts on the cartridge and within the machine's slot using a dry, lint-free cloth.
 - Restart your Cricut machine and try inserting the cartridge again.
 - Verify your Cricut machine's firmware is updated to the latest version.
- **Incorrect Cuts or Missing Features:**
 - Confirm that you have selected the correct creative feature (e.g., Layer 1, Shadow) on your Cricut machine's interface.
 - Refer to your Cricut machine's user manual for specific instructions on selecting cartridge features.
- **General Machine Issues:** For issues not directly related to the cartridge (e.g., cutting mat problems, blade issues), consult your Cricut machine's specific instruction manual or the Cricut support website.

6. SPECIFICATIONS

Product Name	Cricut Pack Your Bags Cartridge
Model Number	2000930
ASIN	B004GXACBO
UPC	0093573074288
Product Dimensions	9 x 4.5 x 1.55 inches
Item Weight	0.01 ounces
Manufacturer	Provo Craft & Novelty
Date First Available	December 20, 2010

7. WARRANTY AND SUPPORT

For information regarding product warranty, please refer to the documentation provided with your Cricut machine or visit the official Cricut website. For additional support or inquiries, please contact Provo Craft & Novelty customer service.
Manufacturer Website: www.provocraft.com

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for

conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question