

Little Tikes 620270

Little Tikes Rock Climber and Slide Instruction Manual

Model: 620270

Brand: Little Tikes

INTRODUCTION

This manual provides important information for the safe assembly, operation, and maintenance of your Little Tikes Rock Climber and Slide. Please read thoroughly before use and retain for future reference. This product is designed for outdoor domestic use only.

Safety Warnings

- **Adult Supervision Required:** Always ensure children are supervised by a responsible adult while using the Rock Climber and Slide.
- **Age and Weight Limits:** This product is recommended for children aged 0-2 years, with a maximum weight capacity of 27 kg (60 lbs). Ensure all users are within these limits.
- **Proper Placement:** Place the product on a level surface, at least 2 meters (6.5 feet) away from any structures or obstructions such as fences, garages, houses, overhanging branches, laundry lines, or electrical wires.
- **Inspect Before Use:** Before each use, check all parts for tightness, wear, or damage. Do not allow children to use the product if any parts are loose, worn, or damaged.
- **No Modifications:** Do not modify the product in any way, as this may compromise its safety and void the warranty.

SETUP AND ASSEMBLY

Assembly of the Little Tikes Rock Climber and Slide is required and must be performed by a competent adult. Please follow the detailed instructions provided in the separate assembly guide included with your product. Ensure all components are present before beginning assembly.

Assembly Steps Overview:

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out. Verify all parts are accounted for against the parts list in your assembly guide.
2. **Assemble Main Structure:** Begin by connecting the primary castle-like structure panels. Ensure all connections

are secure and fasteners are tightened as per the assembly guide.

3. **Attach Climbing Walls:** Securely attach the two large climbing walls to the main structure. Confirm that all climbing holds are firmly in place.
4. **Install Ladder and Platform:** Assemble and attach the easy-climb ladder and the 24-inch tall platform. Ensure the high rail on the platform is securely fastened for safety.
5. **Mount Slide:** Attach the slide to the platform. The slide height can be adjusted during assembly to accommodate younger or older children. Refer to the assembly guide for specific adjustment options.
6. **Connect Tunnels:** Integrate the three crawl-through tunnels into the structure as indicated in the assembly guide.
7. **Final Inspection:** Once assembled, thoroughly inspect the entire structure to ensure all parts are correctly installed, all fasteners are tight, and there are no sharp edges or protruding parts.



Image: View of the Little Tikes Rock Climber and Slide, highlighting the castle-like structure and green climbing wall.

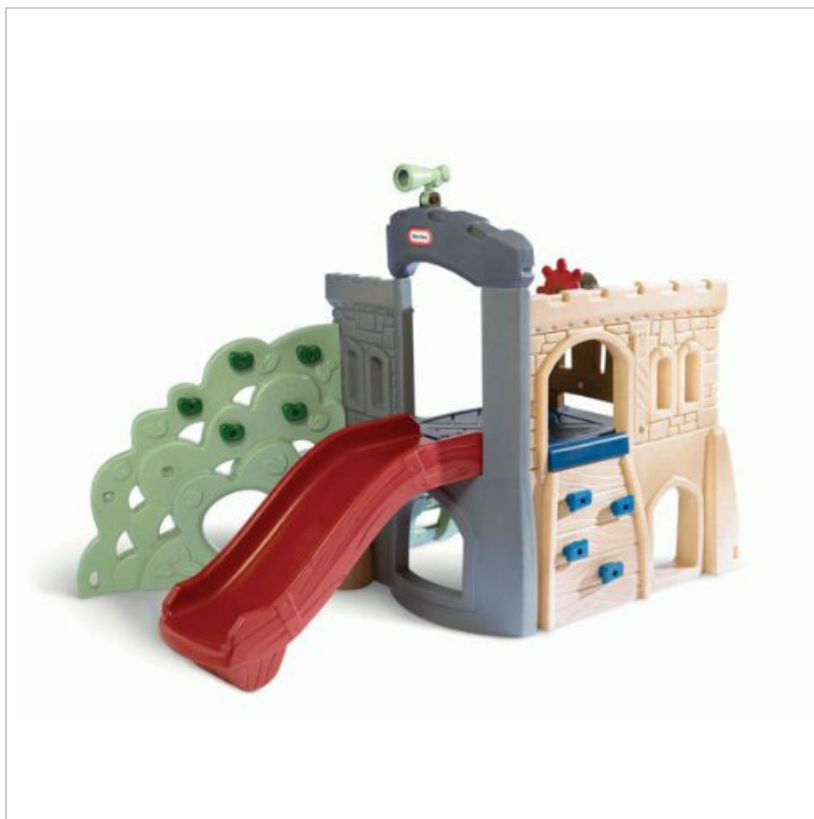


Image: Another view of the Little Tikes Rock Climber and Slide, showing the red slide attached to the main structure.

OPERATING INSTRUCTIONS

The Little Tikes Rock Climber and Slide offers multiple play features designed for active children. Always ensure children are supervised during play.

Key Features and Usage:

- **Climbing Walls:** The two large climbing walls feature separate climbing holds. One wall is designed for easy climbing for younger children, while the other offers a more challenging climb for older children. Encourage children to use both hands and feet while climbing.
- **Easy-Climb Ladder:** A dedicated ladder provides easy access to the platform for younger children. Ensure children use the ladder one at a time.
- **Elevated Platform:** The 24-inch tall platform features a high rail for enhanced safety. Children should remain seated or standing safely on the platform before using the slide.
- **Adjustable Slide:** The slide's height can be adjusted during assembly to suit the age and ability of the children using it. Ensure children slide feet-first and one at a time.
- **Crawl-Through Tunnels:** Three crawl-through tunnels provide additional play opportunities. Ensure children can move freely and safely through the tunnels.



Image: Children actively playing on the Little Tikes Rock Climber and Slide, demonstrating use of the climbing walls, slide, and platform.



Image: A wider view of children enjoying the Little Tikes Rock Climber and Slide in an outdoor backyard setting.

MAINTENANCE

Regular maintenance is crucial to ensure the longevity and safety of your Little Tikes Rock Climber and Slide.

Inspection Schedule:

- **Before Each Use:** Visually inspect for any loose parts, cracks, sharp edges, or excessive wear.
- **Monthly:** Check all nuts, bolts, and other fasteners for tightness. Re-tighten as necessary. Inspect plastic components for signs of UV degradation, cracks, or fading.
- **Seasonally:** Perform a thorough inspection at the beginning and end of each play season. Clean the entire unit.

Cleaning Instructions:

- Clean plastic surfaces with a mild soap and water solution.
- Rinse thoroughly with clean water to remove any soap residue.
- Do not use abrasive cleaners, bleach, or harsh chemicals, as these can damage the plastic.

Storage:

While designed for outdoor use, storing the product indoors during extreme weather conditions (e.g., heavy snow, prolonged freezing temperatures) can help extend its lifespan.

TROUBLESHOOTING

If you encounter any issues with your Little Tikes Rock Climber and Slide, refer to the following common troubleshooting tips:

- **Instability:** If the unit feels wobbly, check that it is placed on a completely level surface. Re-check all assembly fasteners and tighten any that are loose.
- **Loose Parts:** If any bolts, nuts, or climbing holds become loose, re-tighten them immediately. Do not allow children to use the product until all parts are secure.
- **Damaged Components:** If any plastic parts are cracked or broken, discontinue use immediately. Contact Little Tikes customer support for replacement parts. Do not attempt to repair damaged parts with adhesives or other makeshift solutions.

SPECIFICATIONS

Model Number	620270
Brand	Little Tikes
Material	Plastic
Product Dimensions (L x W x H)	223.82 cm x 147.32 cm x 156.67 cm (88.12 in x 58.00 in x 61.68 in)
Product Weight	38.33 kg (84.5 lbs)
Recommended Age	0 - 2 years (Manufacturer's indication)
Maximum Weight Capacity	27 kg (60 lbs)
Assembly Required	Yes

WARRANTY AND SUPPORT

Manufacturer's Warranty:

This Little Tikes Rock Climber and Slide (Model 620270) is covered by a**90-day warranty against manufacturer defects** from the date of purchase. This warranty covers defects in materials and workmanship under normal use and service. It does not cover damage caused by misuse, abuse, accidents, unauthorized modifications, or normal wear and tear.

Please retain your proof of purchase for warranty claims.

Customer Support:

For warranty claims, replacement parts, or any questions regarding the assembly or operation of your product, please contact Little Tikes customer service. Contact information can typically be found on the Little Tikes official website or on the product packaging.

You can also visit the official Little Tikes store for more information:[Little Tikes Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question