

[Manuals.plus](#) /

› [SUNPAK](#) /

› Sunpak Platinum Plus 11.5-inch Mini-D Tripod Instruction Manual

SUNPAK Platinum Plus 120BB

Sunpak Platinum Plus 11.5-inch Mini-D Tripod Instruction Manual

Brand: SUNPAK | Model: Platinum Plus 120BB

[Setup](#)

[Operating](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty & Support](#)

PRODUCT OVERVIEW

The Sunpak Platinum Plus 11.5-inch Mini-D Tripod is a compact and lightweight tabletop tripod designed for use with compact digital cameras and camcorders. Its portable design and adjustable features make it ideal for capturing stable photos and videos in various settings.



Figure 1: Sunpak Platinum Plus Mini-D Tripod in its compact, folded state.

1. SETUP

Follow these steps to set up your Sunpak Platinum Plus Mini-D Tripod for optimal use.

1.1 Unfolding the Tripod Legs

1. Gently spread the three tripod legs outwards until they are fully extended and stable.
2. Extend each leg section by releasing the leg locks and pulling the sections outwards. Securely fasten the leg locks once the desired height is reached. The tripod can extend up to 11.5 inches.





Figure 2: Detail of the leg extension mechanism. Release the clip to extend or retract the leg sections.



Figure 3: The leg lock mechanism ensures the extended leg sections remain securely in place.

1.2 Attaching Your Device

The tripod features a mini ball head with a quick-release plate for easy attachment of cameras or camcorders. A phone/tablet holder is also included for mobile devices.

1. For Cameras/Camcorders:

- Locate the quick-release plate on top of the ball head.
- Press the release lever to detach the quick-release plate.
- Screw the quick-release plate securely into the tripod mount thread on the bottom of your camera or camcorder.
- Slide the plate with your device back into the ball head until it clicks into place. Ensure it is firmly seated.

2. For Smartphones/Tablets:

- Attach the included phone/tablet holder to the quick-release plate. The holder can be oriented vertically or horizontally.
- Securely place your smartphone or tablet into the holder.

- Attach the quick-release plate with the holder and device to the ball head as described above.



Figure 4: The mini ball head with its quick-release plate, ready for device attachment.



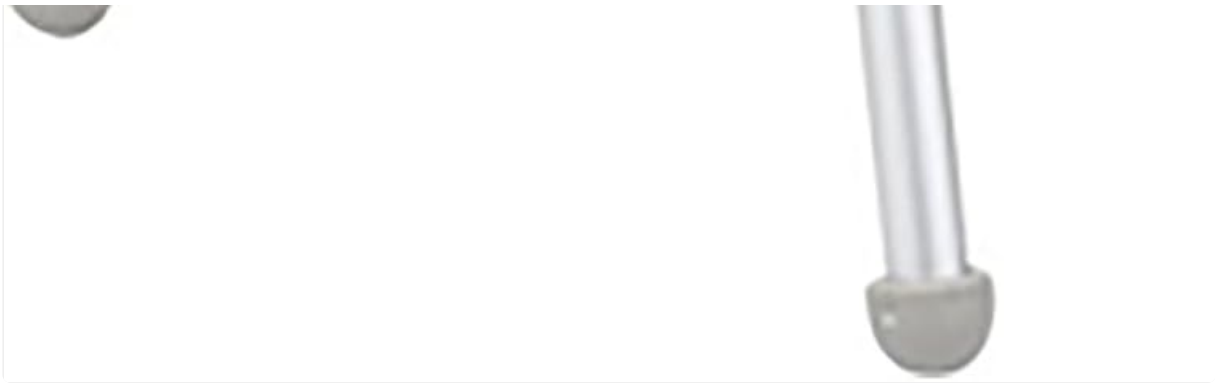


Figure 5: The tripod fully set up with a phone mount, demonstrating its versatility for mobile devices.

2. OPERATING INSTRUCTIONS

Maximize your tripod's potential with these operating tips.

2.1 Adjusting Height and Angle

- **Leg Height:** Adjust the length of each leg section individually using the quick-release leg locks to achieve the desired height and stability on uneven surfaces.
- **Ball Head Adjustment:** The mini ball head allows for flexible positioning of your camera. Loosen the locking knob on the ball head to tilt, pan, or rotate your device to any angle. Tighten the knob firmly to secure the position.



Figure 6: The locking knob on the ball head allows for precise adjustment of your device's angle.

2.2 Portability

The Sunpak Mini-D Tripod is designed for easy transport.

- To collapse the tripod, release all leg locks and retract the leg sections. Fold the legs inward.
- Store the tripod in the included pouch for convenient and protected transport. Its super compact design allows it to fit easily into a camera bag or pocket.



Figure 7: The tripod shown in its compact form, alongside its protective carrying pouch.

3. MAINTENANCE

Proper maintenance ensures the longevity and performance of your tripod.

- **Cleaning:** Wipe down the tripod with a soft, dry cloth after each use to remove dust and debris. For stubborn dirt, use a slightly damp cloth and mild soap, then dry thoroughly. Avoid harsh chemicals.
- **Storage:** Store the tripod in its protective pouch in a cool, dry place away from direct sunlight and extreme temperatures.
- **Inspection:** Periodically check all screws, locks, and moving parts for tightness and proper function. Tighten any loose screws as needed.

4. TROUBLESHOOTING

Common issues and their solutions.

- **Tripod is unstable:**
 - Ensure all leg sections are fully extended and their locks are securely fastened.

- Verify that the tripod is placed on a flat, stable surface. Adjust individual leg lengths if on uneven terrain.
- **Camera/Device is loose on the ball head:**
 - Confirm that the quick-release plate is tightly screwed into your device's tripod mount.
 - Ensure the quick-release plate is fully inserted and locked into the ball head.
 - Tighten the ball head's locking knob firmly after positioning your device.

5. SPECIFICATIONS

| Feature | Detail |
|------------------------|-------------------------------|
| Product Dimensions | 2.25 x 2.25 x 9 inches |
| Item Weight | 7.9 ounces |
| ASIN | B004H1P620 |
| Item model number | Platinum Plus by Sunpak 120BB |
| Brand | SUNPAK |
| Color | Silver |
| Compatible Devices | Camcorder, Camera |
| Special Feature | Portable, Lightweight |
| Material | Aluminum |
| Weight Limit | 2 Pounds |
| Model Name | Platinum Plus |
| Maximum Height | 11 Inches |
| Tripod Head Type | Ball Heads |
| Number of leg sections | 3 |

6. WARRANTY & SUPPORT

The Sunpak Platinum Plus Mini-D Tripod comes with **alimited lifetime warranty**, ensuring peace of mind regarding manufacturing defects and material issues.

For further support, please refer to the contact information provided with your product packaging or visit the official SUNPAK website.

