

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

- › [KODAK](#) /
- › Kodak Slice 14MP Digital Camera User Manual

KODAK SLICE

Kodak Slice 14MP Digital Camera User Manual

Model: SLICE R502

INTRODUCTION

This manual provides essential instructions for the setup, operation, and maintenance of your Kodak Slice 14MP Digital Camera. Please read this manual thoroughly before using your camera to ensure optimal performance and longevity.



Figure 1: Front view of the Kodak Slice 14MP Digital Camera, showing the lens, flash, and the 'SL/CE' branding.

1. SETUP

1.1 Charging the Battery

The Kodak Slice camera uses a rechargeable Li-ion battery. To charge the battery:

1. Insert the battery into the camera or a compatible battery charger.
2. Connect the camera or charger to a power source using a USB cable.
3. The charging indicator will illuminate. Charging is complete when the indicator turns off or changes color (refer to camera display for specific status).

Note: This camera does not include a US power adapter. The battery can be charged via USB either directly in the camera or in the battery charger.

1.2 Inserting a Memory Card

The camera supports microSD/SDHC memory cards. To insert a memory card:

1. Locate the memory card slot on the camera.
2. Gently insert the microSD/SDHC card with the metal contacts facing down until it clicks into place.
3. To remove, press the card gently inward until it springs out.

2. OPERATING THE CAMERA

2.1 Powering On/Off

Press and hold the power button to turn the camera on or off.

2.2 Using the Touchscreen Display

The camera features a 3.5-inch 16:9 capacitive touchscreen display. Navigate menus, view photos, and adjust settings by lightly touching the screen with your fingertip.

2.3 Capturing Photos

The Kodak Slice captures 14-megapixel still images. Key features for photography include:

- **Optical Zoom:** Utilize the 5x SCHNEIDER-KREUZNACH optical zoom lens for detailed faraway shots.
- **Digital Zoom:** An additional 5x digital zoom is available.
- **Image Stabilization:** Optical image stabilization automatically helps ensure sharp images.
- **Aspect Ratio:** Capture images in 16:9 format.
- **Flash:** The built-in flash offers Automatic, Fill Flash, and Suppressed Flash modes.

2.4 Recording Videos

The camera can record HD-quality video at 720p resolution at 30 frames per second, with sound. On-camera editing features are available.

2.5 Viewing and Organizing Images

Explore your captured photos and videos using the touchscreen display. The SLICE search feature allows you to sort content by person, place, event, location, or custom manual tags.

3. MAINTENANCE

To maintain your Kodak Slice camera in optimal condition:

- Keep the lens and touchscreen clean using a soft, lint-free cloth. Avoid abrasive materials.
- Store the camera in a dry, cool place away from direct sunlight and extreme temperatures.
- Ensure the battery contacts are clean.
- Avoid exposing the camera to water or excessive moisture, as it is not water-resistant.

4. TROUBLESHOOTING

If you encounter issues with your Kodak Slice camera, consider the following common solutions:

- **Camera does not power on:** Ensure the battery is fully charged and correctly inserted.
- **Images are blurry:** Check for smudges on the lens. Ensure optical image stabilization is active. Hold the camera steady during capture.
- **Memory card error:** Reinsert the memory card. Try a different compatible memory card. Ensure the card is not full.
- **Touchscreen unresponsive:** Power off and restart the camera. Ensure the screen is clean and dry.

For persistent issues, contact Kodak customer support.

5. SPECIFICATIONS

Feature	Specification
Model Name	SLICE R502
Photo Sensor Resolution	14 MP
Photo Sensor Technology	CCD
Optical Zoom	5x
Digital Zoom	5x
Image Stabilization	Digital, Optical
Screen Size	3.5 Inches (Touchscreen LCD)
Video Resolution	720p at 30 fps
Supported File Format	JPEG, RAW (Stills), MP4 (Video)
Flash Memory Type	Micro SD, SDHC
Connectivity Technology	USB
Battery Type	Lithium Ion
Color	Black

6. WARRANTY AND SUPPORT

For information regarding product warranty, please refer to the documentation included with your purchase or visit the official Kodak support website. For technical assistance or customer service, please contact Kodak customer support through their official channels.