



[Manuals.plus](#) /

- › [Hasbro](#) /
- › Hasbro Transformers Generation Thundercracker (Model 28594) Instruction Manual

Hasbro 28594

Transformers Generation Thundercracker Instruction Manual

Brand: Hasbro | Model: 28594

INTRODUCTION

The Transformers Generation Thundercracker action figure is a robot fighter designed to convert between a fierce robot mode and a speedy vehicle mode. This manual provides instructions for operation, maintenance, and specifications to ensure proper use and enjoyment of your figure.

FEATURES

- Converts from robot mode to vehicle mode and back again.
- Figure comes with 2 launching missiles.
- Designed for battle-ready action and dynamic posing.

SAFETY INFORMATION

Recommended for ages 5 and up. Small parts may be a choking hazard for younger children. Adult supervision is advised.

SETUP

Carefully remove the Transformers Generation Thundercracker figure from its packaging. Ensure all accessories, including the 2 launching missiles, are present. No assembly is required beyond initial transformation.



Figure in original packaging, showing the product as it appears before unboxing.

OPERATING INSTRUCTIONS: TRANSFORMATION

Robot Mode to Vehicle Mode

1. Detach any accessories (launching missiles) from the figure.
2. Fold the robot's legs and arms into the designated positions to form the main body of the jet.
3. Rotate and collapse the chest and head sections to conceal the robot's head and torso.
4. Adjust the wings and tail fins to align with the jet's aerodynamic shape.
5. Secure all panels and tabs to ensure the vehicle mode is compact and stable.
6. Reattach launching missiles to the designated ports on the jet's wings or underside.



Thundercracker figure fully transformed into its speedy jet mode.

Vehicle Mode to Robot Mode

1. Detach any accessories (launching missiles) from the jet.
2. Carefully unclip and unfold the jet's panels to reveal the robot's limbs.
3. Extend the robot's legs and arms, locking them into place.
4. Rotate the head and extend the torso to complete the robot form.
5. Adjust the wings and other vehicle parts to sit securely on the robot's back or shoulders.
6. Reattach launching missiles to the robot's arms or other designated ports.



Thundercracker figure in jet mode, showcasing its sleek design and weapon ports.

Product Overview Video

A general product overview video demonstrating features of a Transformers figure. This video provides a visual guide to the figure's capabilities and design.

MAINTENANCE

To maintain the quality and longevity of your Transformers figure, keep it clean with a dry, soft cloth. Avoid using harsh chemicals or abrasive materials. Store the figure away from direct sunlight and extreme temperatures to prevent discoloration or damage to the plastic.

TROUBLESHOOTING

If parts become loose during play or transformation, gently reattach them by aligning the pegs and holes. If transformation is difficult, ensure all joints and panels are correctly aligned before applying force. Refer to the operating instructions for detailed steps.

SPECIFICATIONS

- Product Dimensions: 2.76 x 7.52 x 12.01 inches
- Item Weight: 7.2 ounces
- Item Model Number: 28594
- Manufacturer Recommended Age: 5 years and up
- Manufacturer: Hasbro

WARRANTY & SUPPORT

For warranty information or product support, please contact Hasbro customer service directly. Refer to the product packaging for specific contact details or visit the official Hasbro website.