

Peg Perego IMPDICNA49PSA29

Peg Perego Prima Pappa Diner High Chair

Model: IMPDICNA49PSA29

INTRODUCTION

The Peg Perego Prima Pappa Diner High Chair is designed for convenience and comfort, suitable for newborns through toddler years. This high chair features adjustable heights, multiple recline positions, and a practical design for easy cleaning and mobility.

It is engineered to be largely ready for use upon arrival, simplifying the initial setup process for parents.

IMPORTANT SAFETY INFORMATION

Always prioritize your child's safety. Read and understand all instructions before using the high chair. Failure to follow these instructions could result in serious injury.

- **Weight Limits:** This high chair is designed for children weighing between 5 pounds (2.27 kg) and 50 pounds (22.68 kg). Do not exceed the maximum weight recommendation.
- **Harness System:** Always secure your child with the 5-point safety harness. Ensure all straps are properly fastened and adjusted snugly to prevent your child from slipping out or climbing.
- **Supervision:** Never leave your child unattended in the high chair. Constant adult supervision is required.
- **Stability:** Ensure the high chair is placed on a flat, stable surface. Always engage the rear brakes on the wheels when the high chair is stationary to prevent accidental movement.
- **Tray Safety:** The high chair features a passive restraint system attached to the seat, not the tray, to prevent your child from sliding down even when the tray is removed. However, always ensure the tray is securely attached when in use.
- **Moving the High Chair:** Before moving the high chair, ensure your child is safely secured and that the path is clear. Disengage the brakes before rolling.
- **Avoid Hazards:** Keep the high chair away from open flames, heaters, and other heat sources. Do not place the high chair near windows where cords from blinds or curtains could pose a strangulation hazard.

SETUP AND INITIAL USE

The Peg Perego Prima Pappa Diner High Chair is designed to be largely pre-assembled for your convenience. Upon unboxing, perform the following initial checks:

1. **Unfolding:** If the high chair is folded for packaging, gently unfold it until it locks into its upright position. Ensure all locking mechanisms are engaged.
2. **Inspect Components:** Visually inspect all parts for any signs of damage, loose components, or

missing pieces. Do not use the high chair if any part is damaged.

3. **Wheel Brakes:** Familiarize yourself with the non-scratching rubber wheels and their rear brakes. Engage and disengage them to ensure proper function.
4. **Harness System:** Check the 5-point safety harness for proper function. Ensure buckles click securely and straps adjust smoothly.



Image: The Prima Pappa Diner High Chair in Savana Rose, showcasing its design and ready-to-use state.

OPERATING INSTRUCTIONS

The Prima Pappa Diner High Chair offers several adjustable features to adapt to your child's needs and your convenience.

- **Height Adjustment:** The high chair features seven different height positions. Locate the height adjustment mechanism, typically on the side or rear legs, and follow the manufacturer's instructions to raise or lower the seat to your desired level. This allows the high chair to be positioned at various table heights or for standalone use.
- **Recline Positions:** The seat offers four unique tilt-in-space reclining positions, suitable for infants through toddlers. Adjust the recline by locating the recline lever, usually on the back of the seat, and tilting the seat to the desired angle. The most reclined position is ideal for newborns or for napping.
- **Tray Attachment and Removal:** The double tray is designed for easy attachment and removal, often

with a one-hand operation. To attach, align the tray with the armrests and slide it into place until it clicks. To remove, locate the release mechanism (usually a button or lever underneath the tray or on the side) and pull the tray away. The tray is dishwasher-safe for convenient cleaning.

- **Mobility and Braking:** The high chair is equipped with non-scratching rubber wheels for easy movement around your home. To move the chair, ensure the rear brakes are disengaged. To lock the chair in place, press down on the brake levers located on the rear wheels until they are engaged. Always engage the brakes when the high chair is stationary and in use.
- **Folding for Storage:** For compact storage, the high chair can be folded. Refer to the specific folding mechanism instructions, typically involving levers or buttons on the frame, to collapse the chair. Ensure all parts are securely folded before storing.



Image: The high chair in use, highlighting the spacious and functional tray.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance will extend the life of your high chair and ensure a hygienic environment for your child.

- **Tray Cleaning:** The double tray is dishwasher-safe. For daily cleaning, wipe down with a damp cloth

and mild soap. For thorough cleaning, remove the tray and place it in the dishwasher.

- **Seat Pad Cleaning:** The seat cushion is designed to be removable for easy cleaning. Unsnap the cushion from around the armrests and pull it off. It can be rinsed thoroughly, for example, in a shower, to remove crumbs and spills. Allow it to air dry completely before reattaching.
- **Harness Strap Cleaning:** The shoulder straps can be easily removed. They can be hand-washed or machine-washed on a gentle cycle with mild detergent. Air dry completely. Do not bleach or tumble dry.
- **Frame Cleaning:** Wipe down the metal and plastic frame components with a damp cloth and mild soap. Avoid abrasive cleaners or solvents.
- **Addressing Crevices:** Due to the design with moving parts, food particles may accumulate in small crevices. Use a soft brush or a vacuum cleaner with a narrow attachment to clean these areas regularly.
- **Regular Inspection:** Periodically check all screws, bolts, and fasteners to ensure they are tight. Inspect the fabric for any tears or excessive wear.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Tray is difficult to slide in or out.	Misalignment of guides or food debris in the tracks.	Ensure the tray is aligned correctly with both armrest guides. Clean any food debris from the tracks on the armrests and the tray mechanism. Apply a small amount of food-grade lubricant if necessary.
High chair feels shaky or unstable.	Not fully unfolded and locked, or loose fasteners.	Ensure the high chair is fully unfolded and all locking mechanisms are securely engaged. Check and tighten any loose screws or bolts on the frame. Ensure it is on a flat, level surface.
Seat cover shows signs of wear or tearing prematurely.	Normal wear and tear, or material stress.	While the seat cover is designed for durability, continuous use and cleaning methods can affect its lifespan. For replacement covers, contact Peg Perego customer service. Refer to the Warranty section.

SPECIFICATIONS

- **Model Number:** IMPDICNA49PSA29
- **Product Dimensions (L x W x H):** 30 x 23.33 x 42.17 inches (76.2 x 59.26 x 107.11 cm)
- **Item Weight:** 23.1 pounds (10.48 kg)
- **Minimum Weight Recommendation:** 5 pounds (2.27 kg)
- **Maximum Weight Recommendation:** 50 pounds (22.68 kg)
- **Materials:** Aluminum, Foam, Plastic, Metal
- **Color:** Savana Rose
- **Age Range:** Baby (suitable for newborns through toddler years with adjustable recline)
- **Portability:** Yes, designed to be portable and foldable.

WARRANTY AND SUPPORT

The Peg Perego Prima Pappa Diner High Chair typically comes with **atwo-year limited warranty** from the date of purchase. This warranty covers manufacturing defects in materials and workmanship under normal use.

For warranty claims, replacement parts (such as seat covers), or technical support, please contact Peg Perego Customer Service directly. It is recommended to have your product model number (IMPDICNA49PSA29) and proof of purchase readily available when contacting support.

For the most current contact information and detailed warranty terms, please visit the official Peg Perego website or refer to the documentation included with your product.

© 2024 Peg Perego. All rights reserved.

This manual is for informational purposes only. Product specifications and features are subject to change without notice.

Related Documents

 <p>prima pappa follow me</p>	<p>Peg Perego Prima Pappa Follow Me: Manuale d'Uso Completo e Sicurezza</p> <p>Scopri il seggiolone evolutivo Peg Perego Prima Pappa Follow Me, ideale dalla nascita fino ai 3 anni. Guida completa all'uso, alle funzioni sdraiata e seggiolone, e alle norme di sicurezza.</p>
 <p>prima pappa follow me</p>	<p>Peg Perego Prima Pappa Follow Me High Chair Instructions</p> <p>Comprehensive instructions for the Peg Perego Prima Pappa Follow Me high chair, covering assembly, usage, safety, and maintenance in multiple languages.</p>
 <p>prima pappa follow me</p>	<p>Peg Perego Prima Pappa Follow Me User Manual</p> <p>Comprehensive instructions for the Peg Perego Prima Pappa Follow Me high chair and recliner, covering assembly, usage, safety, cleaning, and maintenance.</p>
 <p>PEG Prima Pappa Follow Me</p>	<p>Peg Perego Prima Pappa Follow Me High Chair User Manual</p> <p>Comprehensive instructions for the Peg Perego Prima Pappa Follow Me high chair, covering assembly, safety, usage modes (recliner and high chair), cleaning, maintenance, and disposal.</p>