

[Manuals.plus](#) /

› [Lorell](#) /

› Lorell Dry-Erase Board LLR55651 Instruction Manual

Lorell LLR55651

Lorell Dry-Erase Board LLR55651 Instruction Manual

Model: LLR55651 | Brand: Lorell

[Overview](#)

[Setup](#)

[Operation](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty](#)

[Support](#)

1. PRODUCT OVERVIEW

The Lorell Dry-Erase Board, model LLR55651, is designed for various indoor applications, including office, classroom, and home use. It features a durable laminated styrene surface and a sturdy aluminum frame, ensuring longevity and resistance to daily wear.



Image: Front view of the Lorell Dry-Erase Board, 36"W x 24"H, with an aluminum frame and black corner protectors.

Key Features:

- Laminated styrene surface for smooth writing and easy erasing.
- Sturdy aluminum frame designed for durability.
- Resistant to scratching and ghosting for a clear writing surface over time.
- Equipped with a four-corner mounting system for secure installation.
- Includes a marker tray for convenient storage of writing tools.

2. SETUP AND INSTALLATION

This dry-erase board is designed for wall mounting. The package includes all necessary mounting hardware and a marker tray for attachment.

2.1 Unpacking

Carefully remove the dry-erase board and all components from its packaging. Inspect for any damage during transit. Retain packaging materials until installation is complete.



Image: The Lorell Dry-Erase Board unboxed, showing the board, mounting hardware in a plastic bag, and the marker tray.

2.2 Mounting the Dry-Erase Board

1. **Select Location:** Choose a suitable wall location, ensuring it is level and free from obstructions.
2. **Mark Mounting Points:** Use a pencil to mark the desired positions for the four-corner mounting system. Ensure the marks are level and correspond to the board's dimensions.
3. **Install Mounting Hardware:** Drill pilot holes at the marked points. Insert wall anchors if mounting into drywall. Secure the mounting brackets or screws provided into the wall.
4. **Hang the Board:** Carefully align the board with the installed mounting hardware and secure it in place. Ensure the board is stable and flush against the wall.

2.3 Attaching the Marker Tray

The marker tray is designed to be attached to the bottom frame of the dry-erase board.

1. **Position Tray:** Align the marker tray with the bottom edge of the board's aluminum frame.
2. **Secure Tray:** Use the provided screws to attach the marker tray to the pre-drilled holes on the underside of the board's frame. A Phillips head screwdriver is typically required.

3. OPERATION

Using your Lorell Dry-Erase Board is straightforward. Follow these guidelines for optimal performance.

3.1 Writing on the Board

- Use only dry-erase markers specifically designed for whiteboards.
- Avoid using permanent markers, oil-based markers, or other non-dry-erase writing instruments, as these may permanently stain the surface.

3.2 Erasing the Board

- Use a dedicated dry-erase eraser or a soft, clean cloth to remove markings.
- Erase promptly after writing to prevent ghosting or residue buildup.

4. CARE AND MAINTENANCE

Proper care ensures the longevity and pristine condition of your dry-erase board.

4.1 Regular Cleaning

- For daily cleaning, use a dry-erase eraser or a soft, lint-free cloth.
- If residue or ghosting appears, use a dry-erase board cleaner spray or a damp cloth with mild soap and water. Wipe the surface thoroughly and dry immediately with a clean cloth.
- Avoid abrasive cleaners or scouring pads, as these can damage the board's surface.

4.2 Stain Removal

- For stubborn marks or accidental permanent marker use, apply a small amount of rubbing alcohol to a soft cloth and gently wipe the affected area. Immediately clean with a dry-erase board cleaner or damp cloth afterward.

5. TROUBLESHOOTING

Problem	Possible Cause	Solution
Marks are difficult to erase or leave residue (ghosting).	Using non-dry-erase markers. Marks left on the board for extended periods. Dirty eraser or cloth.	Ensure only dry-erase markers are used. Erase marks regularly. Clean the board with a dry-erase cleaner or rubbing alcohol. Use a clean dry-erase eraser or a fresh, soft cloth.

Problem	Possible Cause	Solution
Board surface appears dull or stained.	Accumulation of marker residue. Improper cleaning agents used.	Clean the entire surface with a dry-erase board cleaner. Avoid abrasive cleaners; use only recommended cleaning solutions.

6. PRODUCT SPECIFICATIONS

Feature	Detail
Brand	Lorell
Model Number	LLR55651
Dimensions (W x H)	36"W x 24"H
Material	Laminated Styrene Surface, Aluminum Frame
Color	White (surface), Aluminum (frame)
Mounting Type	Wall Mount (four-corner system)
Included Components	Dry-Erase Board, Marker Tray, Mounting Hardware
Item Weight	4.32 Pounds
UPC	035255556514

7. WARRANTY INFORMATION

The Lorell Dry-Erase Board, model LLR55651, comes with a **5-Year Warranty**. This warranty covers defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims.

For specific terms and conditions, please refer to the warranty documentation included with your product or contact Lorell customer service.

8. CUSTOMER SUPPORT

If you encounter any issues or have questions regarding your Lorell Dry-Erase Board that are not addressed in this manual, please contact Lorell customer support.

Please have your model number (LLR55651) and purchase information ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question