

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Dynex](#) /
- › [Dynex LCD Televisions User Manual \(Models DX-15L150A11, DX-19L150A11, DX-22L150A11\)](#)

Dynex DX-15L150A11, DX-19L150A11, DX-22L150A11

Dynex LCD Televisions User Manual

MODELS: DX-15L150A11, DX-19L150A11, DX-22L150A11

DYNEX  TM ● ● ●

Televisores LCD de 15, 19 y 22 pulg.

DX-15L150A11

DX-19L150A11

DX-22L150A11

GUÍA DEL USUARIO

This image displays the front cover of the user manual for Dynex LCD Televisions, highlighting the brand name "DYNEX" and the specific models covered: DX-15L150A11, DX-19L150A11, and DX-22L150A11. The text "GUÍA DEL USUARIO" (User Guide) is visible at the bottom.



1. Introduction

This user manual provides essential information for the safe and efficient operation of your Dynex LCD Television. It covers models DX-15L150A11 (15-inch), DX-19L150A11 (19-inch), and DX-22L150A11 (22-inch). Please read this manual thoroughly before using your television and retain it for future reference.

2. Safety Information

To ensure safe operation and prevent damage, observe the following precautions:

- **Power Source:** Connect the TV only to the specified power supply.
- **Ventilation:** Do not block ventilation openings. Ensure adequate space around the TV for airflow.
- **Water and Moisture:** Do not expose the TV to rain or moisture. Do not place objects filled with liquids on the TV.
- **Cleaning:** Unplug the TV before cleaning. Use a soft, dry cloth. Avoid liquid cleaners.
- **Placement:** Place the TV on a stable, level surface to prevent it from falling.
- **Servicing:** Do not attempt to service this product yourself. Refer all servicing to qualified service personnel.

3. Package Contents

Verify that all items are present in the package:

- Dynex LCD Television (15, 19, or 22-inch model)
- Remote Control with Batteries
- Power Cord
- TV Stand (with screws)
- User Manual
- Quick Setup Guide

4. Setup

4.1 Attaching the TV Stand

1. Carefully place the TV face down on a soft, clean surface to prevent screen damage.
2. Align the TV stand with the mounting holes on the bottom of the TV.
3. Secure the stand using the provided screws. Do not overtighten.

4.2 Connecting Cables

- **Power:** Connect the power cord to the TV's power input and then to a wall outlet.
- **Antenna/Cable:** Connect an RF coaxial cable from your antenna or cable wall jack to the "ANT/CABLE IN" port on the TV.
- **HDMI Devices:** For high-definition devices (Blu-ray player, game console), connect an HDMI cable from the device to an "HDMI IN" port on the TV.
- **AV Devices:** For standard-definition devices (DVD player, VCR), connect composite video (yellow) and stereo audio (red/white) cables to the "VIDEO IN" and "AUDIO L/R" ports on the TV.

4.3 Initial Setup

1. Plug in the TV and press the **POWER** button on the remote control or TV.
2. Follow the on-screen instructions to select your language, time zone, and perform an automatic channel scan.

5. Operating Your TV

5.1 Remote Control Overview

The remote control allows you to access all TV functions. Insert two AAA batteries, observing polarity.

- **POWER:** Turns the TV on or off.
- **INPUT:** Selects the input source (TV, HDMI1, HDMI2, AV).
- **VOL +/-:** Adjusts the volume level.
- **CH +/-:** Changes channels.
- **MENU:** Opens the main menu for settings.
- **Navigation Buttons (Up/Down/Left/Right):** Navigate through menus.
- **ENTER:** Confirms selections.

5.2 Basic Functions

- **Turning On/Off:** Press the **POWER** button.
- **Changing Channels:** Use **CH +/-** or enter channel numbers directly.
- **Adjusting Volume:** Use **VOL +/-**.
- **Selecting Input:** Press **INPUT** repeatedly to cycle through available sources or use the navigation buttons to select.

5.3 Menu Navigation

Press the **MENU** button to access settings for Picture, Sound, Channel, and System. Use the navigation buttons to move and **ENTER** to confirm.

6. Maintenance

6.1 Cleaning the TV

- Always unplug the TV before cleaning.
- Use a soft, dry, lint-free cloth to wipe the screen and cabinet.
- For stubborn marks, lightly dampen the cloth with water. Never spray cleaner directly onto the TV.
- Avoid abrasive cleaners, waxes, or solvents.

6.2 Storage

If storing the TV for an extended period, unplug it and cover it to protect from dust. Store in a cool, dry place.

7. Troubleshooting

Problem	Possible Cause	Solution
No power	Power cord unplugged; outlet not working; TV off.	Check power cord connection; test outlet with another device; press POWER button.

Problem	Possible Cause	Solution
No picture, but sound is present	Incorrect input source selected; external device off or disconnected.	Press INPUT to select correct source; ensure external device is on and connected.
No sound, but picture is present	Volume muted or too low; external device audio issue.	Press MUTE or increase VOL; check audio settings on external device.
Remote control not working	Batteries dead or incorrectly inserted; obstruction; remote too far.	Replace batteries; ensure clear path to TV's IR sensor; move closer to TV.

8. Specifications

Brand: Dynex

Models: DX-15L150A11, DX-19L150A11, DX-22L150A11

Display Type: LCD

Screen Sizes: 15-inch, 19-inch, 22-inch

Publisher: DYNEX

Publication Date of Manual: January 1, 2009

Language of Manual: English (Original Spanish Edition available)

Manual Print Length: 35 pages

Manual Item Weight: 3 ounces

ASIN: B004IJHDF4

9. Warranty and Support

For warranty information, please refer to the warranty card included with your product or visit the official Dynex website. For technical support or service inquiries, please contact Dynex customer service through their official channels. Do not attempt to repair the television yourself.

