Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Weiser /
- > Weiser SmartCode 5 Electronic Deadbolt (9GED14900-001) User Manual

Weiser 9GED14900-001

Weiser SmartCode 5 Electronic Deadbolt (9GED14900-001) User Manual

Model: 9GED14900-001 | Brand: Weiser

INTRODUCTION

This manual provides detailed instructions for the installation, operation, maintenance, and troubleshooting of your Weiser SmartCode 5 Electronic Deadbolt. The SmartCode 5 deadbolt offers keyless entry convenience with a keypad and enhanced security features, including SmartKey re-key technology. Please read this manual thoroughly before installation and use to ensure proper function and longevity of your lock.



Image: The Weiser SmartCode 5 Electronic Deadbolt in Polished Brass finish, featuring a keypad and traditional keyhole.

PRODUCT FEATURES

- Keyless Entry: Operate the deadbolt using a personalized code on the electronic keypad.
- SmartKey Re-key Technology: Re-key the lock yourself in seconds in three easy steps, allowing you to match your existing keys.
- Traditional Keyed Entry: Includes a standard keyhole for manual operation.
- Interior Turn Button: Lock or unlock the deadbolt from the inside with a simple turn.
- Enhanced Security: Designed for exterior doors where robust security is essential.
- Durable Construction: Features a 1-inch deadbolt throw for added security.



Image: Diagram illustrating the SmartKey Security features, including resistance to kick-ins, bumps, picks, drills. and saws.

SETUP AND INSTALLATION

Proper installation is crucial for the optimal performance and security of your SmartCode 5 deadbolt. It is recommended to follow the detailed instructions provided in the separate installation guide included with your product. Ensure your door preparation meets the specified dimensions before beginning installation.

Key Installation Steps:

- 1. Prepare the door and frame according to the provided template.
- 2. Install the latch and strike plate.
- 3. Install the exterior keypad assembly.
- 4. Install the interior assembly, ensuring proper cable connection.
- 5. Insert 4 AA batteries (not included) into the battery pack.
- 6. Perform the door handing process to calibrate the lock.

SmartKey Re-keying Instructions:

The SmartKey feature allows you to re-key your lock to an existing key. This process takes seconds and requires your functioning key and the SmartKey tool.

- 1. Insert the currently programmed key fully into the keyhole and turn it 90 degrees clockwise to the horizontal position.
- 2. Insert the SmartKey tool firmly and fully into the SmartKey hole. Remove the SmartKey tool.
- 3. Remove the currently programmed key.
- 4. Insert the new key you wish to use fully into the keyhole and turn it 90 degrees counter-clockwise to the vertical position.
- 5. Remove the new key. The lock is now re-keyed. Test with the new key to ensure proper operation.



Image: The Weiser SmartCode 5 Electronic Deadbolt installed on a dark wooden door, showcasing its appearance in a home setting.

OPERATING INSTRUCTIONS

Locking the Door:

- From Outside (Keypad): Press the 'Lock' button (the padlock icon) on the keypad.
- From Outside (Key): Insert your key and turn it to lock the deadbolt.
- From Inside: Turn the thumb turn on the interior assembly to the locked position.

Unlocking the Door:

- From Outside (Keypad): Enter your 4-8 digit user code. The deadbolt will retract.
- From Outside (Key): Insert your key and turn it to unlock the deadbolt.
- From Inside: Turn the thumb turn on the interior assembly to the unlocked position.

Programming User Codes:

The lock comes with a default programming code and two default user codes. It is highly recommended to change these immediately after installation.

- 1. Open the battery cover on the interior assembly.
- 2. Press the 'Program' button once.
- 3. Enter the 4-digit Programming Code (default is 0-0-0-0).
- 4. Press the 'Lock' button.
- 5. Enter a new 4-8 digit User Code.
- 6. Press the 'Lock' button.
- 7. Test the new user code to ensure it unlocks the door.

Refer to the full programming guide for instructions on deleting codes, enabling/disabling auto-lock, and other advanced features.

MAINTENANCE

Battery Replacement:

The SmartCode 5 deadbolt requires 4 AA batteries. When the batteries are low, the lock will emit a series of beeps and/or flash a red light during operation. Replace all four batteries simultaneously with new, high-quality alkaline AA batteries.

- 1. Remove the battery cover from the interior assembly.
- 2. Remove the old batteries.
- 3. Insert four new AA alkaline batteries, observing correct polarity (+/-).
- 4. Replace the battery cover.

Cleaning:

To clean the lock, use a soft, damp cloth. Avoid abrasive cleaners, solvents, or chemical sprays, as these can damage the finish and electronic components.

TROUBLESHOOTING

If you encounter issues with your Weiser SmartCode 5 Electronic Deadbolt, refer to the following common solutions:

- Lock not responding: Check battery levels and replace if necessary. Ensure the cable connection between the exterior and interior assemblies is secure.
- Keypad not lighting up: This usually indicates dead batteries. Replace all four AA batteries.
- **Deadbolt not extending/retracting fully:** Ensure the door frame strike plate is properly aligned and the door is not warped. Perform the door handing process again.
- **User code not working:** Verify the code is entered correctly. Try reprogramming the user code. Ensure the programming code has not been changed or forgotten.
- SmartKey re-keying issue: Ensure the original key is fully inserted and turned 90 degrees. The SmartKey tool must be inserted firmly and fully.

For more complex issues or if the problem persists, contact Weiser customer support or consult the full troubleshooting guide available on the Weiser website.

SPECIFICATIONS


| Specification | Detail |
|--------------------|-------------------------------|
| Manufacturer | Weiser |
| Model Number | 9GED14900-001 |
| Style | SmartCode 5 |
| Color | Polished Brass |
| Material | Brass |
| Product Dimensions | 13.79 x 8.97 x 25.3 cm |
| Item Weight | 1.36 kg |
| Batteries Required | 4 AA batteries (not included) |
| Lock Type | Key Lock, Electronic Keypad |
| UPC | 059184200164 |

WARRANTY AND SUPPORT

Weiser products are backed by a limited lifetime mechanical and finish warranty, and a 1-year limited electronics warranty. For specific warranty details, claims, or technical support, please visit the official Weiser website or contact their customer service department. Keep your proof of purchase for warranty purposes.

Weiser Customer Support: Refer to your product packaging or the official Weiser website for current contact information.

Related Documents - 9GED14900-001

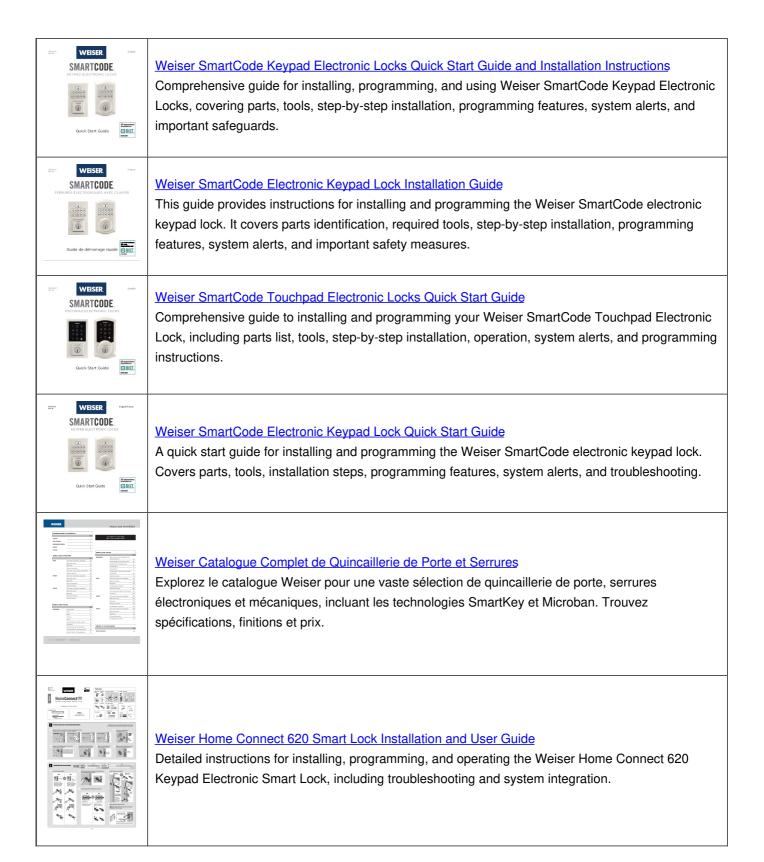

Documents - Weiser - 9GED14900-001



[pdf]

TABLE DES MATIÈRES Weiser Pricebook August 1 2018 FR distmorissette 2019 09 |||
TABLE DES MATIRES RENSEIGNEMENTS GNRAUX MODALITS POUR
COMMANDER RENSEIGNEMENTS GNRAUX SMARTKEY Pag ... R Laiton luisant
vie 11P Venetian bronze 15 Nickel satin Prix courant Quantit par caisse GED 1490

9GED14900-001 9GED14900-003 9GED14900-002 304 2 20 min. LECTRONIQUES
Emballage standard Emballa...

lang:fr score:17 filesize: 7.7 M page_count: 133 document date: 2018-07-06