

[Manuals.plus](#) /

› [Redecker](#) /

› Redecker Gutter Scoop Instruction Manual

Redecker 70-306020-02

Redecker Gutter Scoop Instruction Manual

Brand: Redecker | **Model:** 70-306020-02

PRODUCT OVERVIEW

The Redecker Gutter Scoop is a functional tool designed for efficient cleaning of gutters. Its robust construction and adjustable handle make it suitable for reaching difficult areas and removing debris effectively.



Image 1: The Redecker Gutter Scoop, featuring a polished stainless steel blade and a light-colored wooden handle. The handle is designed with an adjustable joint for versatile use.

Key Features:

- Functional scoop for cleaning all gutters with side edges.
- Constructed from oiled beech wood and stainless steel for durability.
- Adjustable handle allows access to hard-to-reach spots.
- Dimensions: 34.5 cm (length) / 10 cm (diameter of scoop).

SETUP

The Redecker Gutter Scoop requires minimal setup before use. It is designed for immediate functionality.

1. **Unpack:** Carefully remove the gutter scoop from its packaging.
2. **Inspect:** Before first use, inspect the scoop for any signs of damage or loose components. Ensure the wooden handle is securely attached to the stainless steel blade.
3. **Adjust Handle (if necessary):** The handle features an adjustable joint. Loosen the wing nut or screw on the joint, position the handle to your desired angle for optimal reach and comfort, and then securely tighten the fastener. This allows for better maneuverability in various gutter configurations.

OPERATING INSTRUCTIONS

Follow these steps for effective and safe use of your Redecker Gutter Scoop:

1. **Safety First:** Always use appropriate safety equipment, including sturdy gloves and eye protection. When working at height, ensure you have a stable ladder or platform and follow all ladder safety guidelines. Consider having a second person to stabilize the ladder.
2. **Positioning:** Position yourself safely near the section of the gutter you intend to clean.
3. **Insert Scoop:** Carefully insert the stainless steel scoop into the gutter, ensuring the side edges align with the gutter's profile.
4. **Collect Debris:** Gently push the scoop along the gutter to collect leaves, dirt, and other debris. The curved design and side edges help to efficiently gather material.
5. **Remove Debris:** Once the scoop is full, carefully lift it out of the gutter and empty the collected debris into a bucket or waste bag.
6. **Repeat:** Continue this process along the entire length of the gutter until all debris is removed. Utilize the adjustable handle to reach difficult or angled sections of the gutter.



Image 2: A hand demonstrating the use of the Redecker Gutter Scoop to clear accumulated leaves and debris from a residential gutter. The scoop is shown effectively gathering material.

MAINTENANCE

Proper maintenance will extend the lifespan of your Redecker Gutter Scoop.

- **Cleaning:** After each use, rinse the stainless steel blade thoroughly with water to remove any remaining dirt or debris. For stubborn grime, use a mild soap and water solution.
- **Drying:** Dry the stainless steel blade completely with a cloth to prevent water spots or potential corrosion. Allow the wooden handle to air dry, but avoid prolonged exposure to moisture.
- **Wood Care:** The beech wood handle is oiled. Periodically, you may re-oil the wood with a suitable wood care oil to maintain its condition and prevent drying or cracking.
- **Storage:** Store the gutter scoop in a dry place, away from direct sunlight and extreme temperatures. Hanging the scoop can help prevent damage to the blade or handle.

TROUBLESHOOTING

This section addresses common issues you might encounter with your gutter scoop.

- **Scoop does not fit in gutter:**
Solution: The Redecker Gutter Scoop has a diameter of 10 cm. If your gutter is narrower than this, the scoop may not fit. Verify your gutter dimensions. This scoop is designed for standard-sized gutters.
- **Handle feels loose:**
Solution: Check the adjustable joint on the handle. Tighten the wing nut or screw firmly to secure the handle in place. Avoid over-tightening, which could damage the wood.
- **Debris is difficult to remove:**
Solution: For heavily compacted or wet debris, it may require more effort. Try breaking up larger clumps with the scoop before attempting to remove them. Ensure the scoop is angled correctly to maximize collection.

SPECIFICATIONS

Feature	Detail
Brand	Redecker
Model Number	70-306020-02
Material	Oiled Beech Wood (handle), Stainless Steel (blade)
Dimensions (Product)	34.5 cm (Length) / 10 cm (Scoop Diameter)
Package Dimensions	22.7 x 10.6 x 7.5 cm
Item Weight	Approximately 340.19 grams
Color	Wood, Metallic
Style	Adjustable

WARRANTY AND SUPPORT

Information regarding specific warranty terms or direct customer support contacts for the Redecker Gutter Scoop is not available in the provided product data. For any inquiries, please refer to the retailer or the official Redecker website for the most current information.

© 2024 Redecker. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question