

[Manuals.plus](#) /

› [Bose](#) /

› Bose® Wave® Music System with Multi-CD Changer - Titanium Silver User Manual

Bose AWRCC1

Bose® Wave® Music System with Multi-CD Changer - Titanium Silver User Manual

Model: AWRCC1

INTRODUCTION

The Bose® Wave® Music System with Multi-CD Changer is designed to provide high-quality audio performance in a compact, user-friendly package. This system integrates an FM/AM radio, a CD player, and a multi-CD changer, allowing for extended listening without interruption. Its proprietary waveguide speaker technology delivers rich, full-bodied sound, especially in lower frequencies, from a small enclosure.

This manual provides essential information for setting up, operating, and maintaining your Bose Wave Music System with Multi-CD Changer.

WHAT'S IN THE BOX

Upon unpacking, ensure all components are present:

- Bose Wave Music System
- Multi-CD Changer
- Remote control
- Spare remote control
- Power cable for Wave Music System
- Power cord for Multi-CD Changer
- Bose link cable (for connecting the changer to the main system)
- Product Specific batteries (included for remotes)



Image: The Bose Wave Music System (top unit) with the Multi-CD Changer (bottom unit), a remote control, and several CDs. The system is in Titanium Silver color.

SETUP

The Bose Wave Music System is designed for easy setup. Follow these steps to get started:

1. **Placement:** Place the Wave Music System and the Multi-CD Changer on a stable, flat surface. The changer is designed to sit directly beneath the main unit.
2. **Connect Multi-CD Changer:** Connect the Multi-CD Changer to the Wave Music System using the provided Bose link cable. This cable typically connects from the "Bose link" output on the changer to the "Bose link" input on the main system.
3. **Power Connection:**
 - Connect the power cable to the AC power input on the Wave Music System.
 - Connect the power cord from the Multi-CD Changer to its AC power input.
 - Plug both power cables into a wall outlet.
4. **Antenna Connection (Optional):** For improved FM/AM radio reception, connect an external FM antenna (75 ohm) to the dedicated FM antenna connector on the rear of the Wave Music System.
5. **Auxiliary Input (Optional):** If you wish to connect an external audio source (e.g., MP3 player, iPod, DVD player), use a 3.5mm stereo input cable to connect it to the AUX IN port on the Wave Music System or the additional connection on the CD changer.

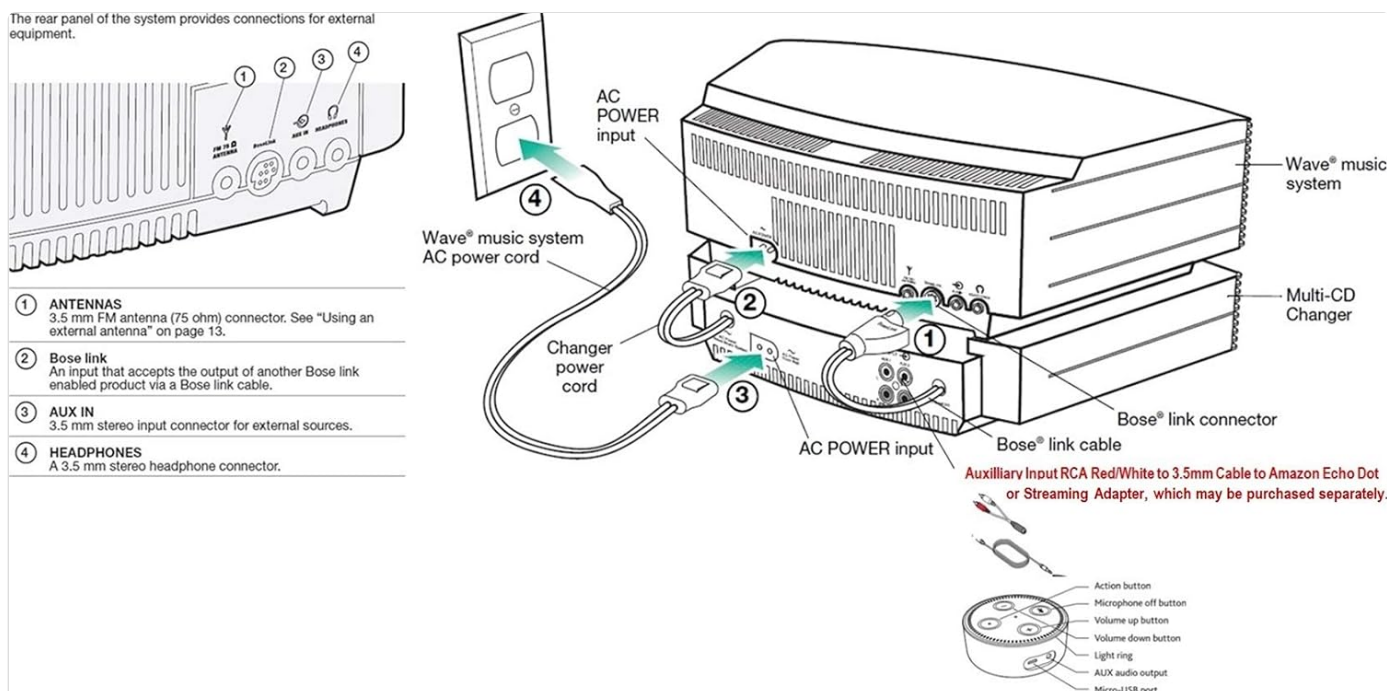


Image: A diagram illustrating the rear panel connections for the Bose Wave Music System and its Multi-CD Changer. It shows connections for AC power, Bose link cable, auxiliary input, and headphones, along with an external antenna connection.

OPERATING INSTRUCTIONS

Powering On/Off

Press the **Power** button on the remote control to turn the system on or off. The system will display the current time when off.

CD Playback

The system supports standard audio CDs and MP3 CDs.

- **Loading CDs:**

- For the main unit: Gently slide one CD or MP3 CD into the slot on the front of the Wave Music System. The system will automatically pull the disc in.
- For the Multi-CD Changer: Insert up to three additional CDs into the slots on the front of the changer. The changer will load them sequentially.

- **Playing CDs:** The system will automatically begin playing the loaded CD. Use the remote control to select tracks, pause, play, skip, or change discs.

- **Ejecting CDs:** Press the **Eject** button on the remote or the system to eject a CD. For the multi-CD changer, you may need to cycle through discs to eject a specific one.

FM/AM Radio

Press the **FM/AM** button on the remote to switch to radio mode. Use the **Tune/Seek** buttons to find stations. You can save favorite stations as presets using the remote's preset buttons.

Auxiliary Input

Connect your external audio device to the AUX IN port. Press the **AUX** button on the remote to select the auxiliary input source. Adjust the volume on both your external device and the Wave Music System.

Headphone Jack

Plug headphones into the headphone jack on the rear of the Wave Music System for private listening. The main speakers will

mute automatically.

Remote Control

The system is primarily controlled by the slim, credit card-sized remote. All functions, including CD control, radio tuning, volume, clock, and alarm, are accessible via the remote. A spare remote is included for convenience.

The large display panel on the system provides clear information, including artist, title, and album names for MP3 CDs, and radio station frequencies.



Image: An internal cutaway view of the Bose Wave Music System, highlighting the proprietary waveguide speaker technology. This shows the intricate acoustic pathways designed to enhance sound quality, particularly bass response.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the system. Do not use liquid cleaners or sprays directly on the unit.
- **CD Care:** Handle CDs by their edges. Keep them clean and free of scratches. Store CDs in their cases when not in use.
- **Remote Battery:** If the remote control's range decreases or it becomes unresponsive, replace the battery (Product Specific batteries, included). Refer to the remote's battery compartment for specific instructions.

TROUBLESHOOTING

Problem	Possible Cause / Solution
No power / System unresponsive	Ensure power cables are securely plugged into the system and a working wall outlet. Check if the power outlet is functional. Replace remote control batteries if the remote is unresponsive.
No sound	Increase the volume on the system and any connected auxiliary devices. Ensure headphones are not plugged in. Verify the correct source (CD, FM/AM, AUX) is selected.
CD not playing / "READING DISC" message frozen	Ensure the CD is clean and free of scratches or smudges. Try a different CD to determine if the issue is with the disc. Power off the system, wait a few seconds, and power it back on.

Problem	Possible Cause / Solution
CD not ejecting properly / Stuck discs	Press the Eject button multiple times. For the multi-CD changer, try cycling through the discs using the remote to see if it helps release the stuck disc. <i>If discs remain stuck or only partially eject, contact Bose customer support for assistance. Do not force discs out as this may damage the mechanism.</i>
Poor radio reception	Adjust the position of the system or the external antenna. Check for sources of interference (e.g., other electronic devices).

SPECIFICATIONS

Feature	Detail
Product Dimensions (L x W x H)	9.9 x 14.6 x 6.5 inches
Item Weight	19.6 pounds
Model Number	AWRCC1
Brand	Bose
Connectivity Technology	Infrared (for remote control)
Color	Titanium Silver
Speaker Type	Stereo
Power Source	AC Power
CD Capacity	1 (main unit) + 3 (changer) = 4 total
Radio Tuner	FM/AM Digital Tuner
Auxiliary Input	Yes (3.5mm stereo)
Headphone Jack	Yes (3.5mm)

WARRANTY AND SUPPORT

For detailed warranty information, please refer to the documentation included with your product at the time of purchase or visit the official Bose website. Bose provides customer support for product inquiries, technical assistance, and service requests. You can find more information and support resources on the official Bose store page: [Bose Store on Amazon](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question