

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Soehnle](#) /

› [Soehnle Exacta 65108 Touch Kitchen Scale User Manual](#)

## Soehnle 65108

# Soehnle Exacta 65108 Touch Kitchen Scale User Manual



## 1. INTRODUCTION

---

This manual provides essential information for the proper setup, operation, and maintenance of your Soehnle Exacta 65108 Touch Kitchen Scale. Please read these instructions carefully before using the device to ensure safe and efficient operation. Keep this manual for future reference.

## 2. SAFETY INFORMATION

---

- Always place the scale on a firm, flat, and stable surface to ensure accurate measurements.
- Do not immerse the scale in water or other liquids. Clean with a damp cloth only.
- Avoid exposing the scale to extreme temperatures, direct sunlight, or high humidity.
- Do not overload the scale beyond its maximum capacity of 5 kg (11 lbs).
- Keep the scale away from strong electromagnetic fields, which may affect accuracy.
- This device is for household use only and not intended for commercial or medical purposes.

## 3. PACKAGE CONTENTS

---

Verify that all items are present in the package:

- Soehnle Exacta 65108 Touch Kitchen Scale
- 1 x CR2032 Battery (pre-installed or included separately)
- Instruction Manual (this document)

## 4. PRODUCT OVERVIEW

---

The Soehnle Exacta 65108 is a sleek digital kitchen scale designed for precise weighing of ingredients. It features a durable glass weighing surface and intuitive touch controls.



Figure 1: Top view of the Soehnle Exacta 65108 Touch Kitchen Scale, showing the weighing surface and display.

### Components:

- **Weighing Surface:** Glass platform for placing items to be weighed.
- **LCD Display:** Shows weight measurements and unit indicators.
- **Power/Unit Button ( ):** Used to turn the scale on/off and switch between measurement units (grams, pounds, ounces).
- **Tare Button (TARE):** Used to reset the display to zero, allowing for weighing multiple ingredients in the same container.

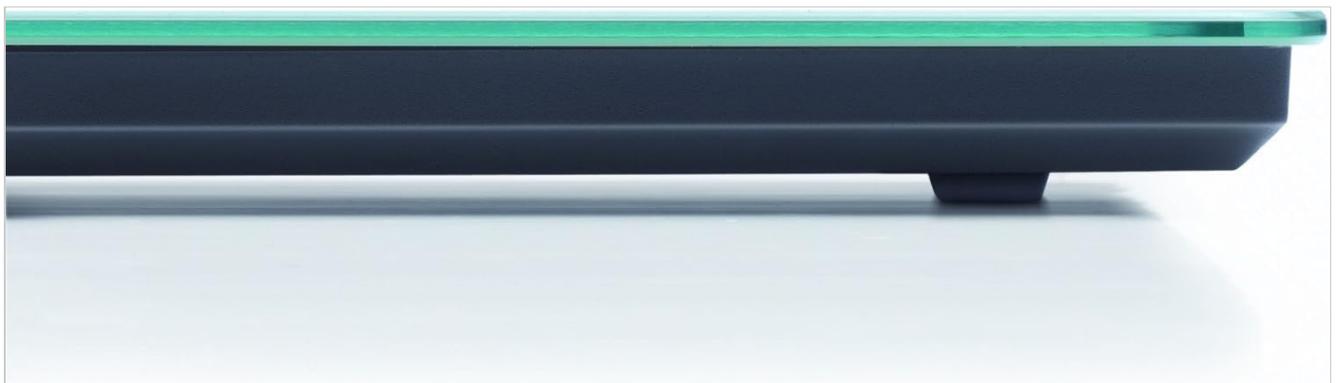


Figure 2: Close-up view of the display and touch controls (Power/Unit and Tare buttons).



Figure 3: Side profile of the Soehnle Exacta 65108, highlighting its slim design.

## 5. SETUP

---

### 5.1. Battery Installation

1. Locate the battery compartment on the underside of the scale.
2. Open the battery compartment cover.
3. Insert the CR2032 battery, ensuring the correct polarity (+/-).
4. Close the battery compartment cover securely.

### 5.2. Initial Placement

Place the scale on a hard, flat, and level surface. Uneven surfaces can lead to inaccurate readings.

## 6. OPERATING INSTRUCTIONS

---

### 6.1. Powering On/Off

- **To Turn On:** Lightly touch the Power/Unit button ( ). The display will show '0' or '0.0'.
- **To Turn Off:** Press and hold the Power/Unit button ( ) for approximately 2-3 seconds. The scale also features an automatic shut-off function after approximately 4 minutes of inactivity to conserve battery life.

### 6.2. Changing Measurement Units

With the scale turned on, lightly touch the Power/Unit button ( ) repeatedly to cycle through the available units: grams (g), pounds (lb), and ounces (oz).

### 6.3. Tare Function (Zeroing)

The Tare function allows you to weigh multiple ingredients consecutively without emptying the container, or to simply subtract the weight of a container.

1. Place an empty container on the weighing surface. The display will show its weight.
2. Lightly touch the Tare button (TARE). The display will reset to '0'.
3. Add the first ingredient to the container. The display will show the weight of the ingredient.
4. To add another ingredient, touch the Tare button (TARE) again to reset the display to '0', then add the next ingredient.
5. The scale also supports negative tare, allowing you to remove items and see the subtracted weight.

### 6.4. Weighing Items

1. Turn on the scale and ensure the display shows '0'.
2. Place the item(s) directly onto the weighing surface or in a container (using the Tare function).
3. Read the weight displayed on the LCD screen. The scale measures in increments of 1 gram (or equivalent in other units) starting from a minimum of approximately 3 grams.

## 7. MAINTENANCE AND CARE

---

### 7.1. Cleaning

The glass weighing surface is easy to clean. Wipe the scale with a slightly damp cloth. Do not use abrasive cleaners or immerse the scale in water.

### 7.2. Battery Replacement

When the battery is low, a low battery indicator (e.g., 'Lo') may appear on the display. Replace the CR2032 battery as described in Section 5.1. Dispose of used batteries responsibly.

### 7.3. Storage

Store the scale in a cool, dry place. Avoid placing heavy objects on the scale when not in use.

## 8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Scale does not turn on.	Dead or incorrectly installed battery.	Replace the CR2032 battery or ensure it is installed with correct polarity.
Inaccurate or inconsistent readings.	<ul style="list-style-type: none"><li>Scale on an uneven or unstable surface.</li><li>Scale overloaded.</li><li>Low battery.</li><li>Temperature fluctuations.</li></ul>	<ul style="list-style-type: none"><li>Place scale on a firm, level surface.</li><li>Do not exceed 5 kg capacity.</li><li>Replace battery.</li><li>Ensure scale is used at room temperature.</li></ul>
Display shows 'Err' or other error message.	Scale overloaded or internal error.	Remove items from the scale. Turn off and then on again. If error persists, contact support.
Touch buttons are unresponsive or too sensitive.	<ul style="list-style-type: none"><li>Incorrect touch pressure.</li><li>Moisture on the surface.</li></ul>	<ul style="list-style-type: none"><li>Ensure fingers are dry and apply a light, firm touch.</li><li>Wipe the surface clean and dry.</li><li>Try touching slightly off-center if needed.</li></ul>

## 9. SPECIFICATIONS

Feature	Detail
Model Number	65108
Brand	Soehnle
Maximum Weight Capacity	5 Kilograms (11 Pounds)
Minimum Measurement	Approx. 3 grams
Measurement Units	Grams (g), Pounds (lb), Ounces (oz)
Dimensions (L x W x H)	23 x 17 x 1.7 cm (9.06 x 6.69 x 0.67 inches)
Product Weight	498.95 g (1.1 Pounds)
Material	Plastic base with Glass weighing surface

Feature	Detail
Color	Silver
Battery Type	1 x CR2032 (included)
Auto-Off Function	Yes, after approximately 4 minutes

## 10. WARRANTY AND SUPPORT

---

Soehnle products are manufactured to high-quality standards. For information regarding warranty terms and conditions, please refer to the warranty card included with your purchase or visit the official Soehnle website. For technical support or service inquiries, please contact Soehnle customer service through their official channels.

Official Soehnle Website: [www.soehnle.com](http://www.soehnle.com)

