

Braun G1500

Braun G1500 1500-watt Meat Mincer and Grinder User Manual

Model: G1500 | Brand: Braun

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation, maintenance, and care of your Braun G1500 1500-watt Meat Mincer and Grinder. Please read these instructions thoroughly before first use and keep them for future reference. This appliance is designed for mincing and grinding meat.





Image 1.1: The Braun G1500 Meat Mincer and Grinder, fully assembled and ready for use. This view highlights the motor unit, mincing head, and feeding tray.

2. IMPORTANT SAFETY INSTRUCTIONS

WARNING: This appliance operates on 220 Volts and is intended for overseas use only. It is NOT FOR USE IN USA/CANADA or any region with 110-120V electrical systems without a suitable voltage converter.

- Always ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting.
- Do not immerse the motor unit in water or any other liquid. Clean only with a damp cloth.
- Keep hands and utensils away from moving parts during operation to prevent injury. Always use the food

pusher provided.

- Ensure all parts are correctly assembled before operating the appliance.
- Unplug the appliance from the power outlet before cleaning, assembling, disassembling, or when not in use.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Do not operate the appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Avoid continuous operation for more than 10 minutes. Allow the appliance to cool down for at least 30 minutes before resuming use.
- If the motor struggles or emits an unusual odor, immediately switch off the appliance and allow it to cool. Do not force the motor.

3. PRODUCT COMPONENTS

Familiarize yourself with the various parts of your Braun G1500 Meat Mincer and Grinder:

1. **Motor Unit:** The main body containing the powerful 1500-watt motor.
2. **Mincing Head:** The assembly where meat is processed, typically made of metal.
3. **Feeding Tray:** A large metal bowl placed on top of the mincing head to hold meat pieces.
4. **Screw (Auger):** A spiral component that pushes meat towards the blade and disc.
5. **Blade:** A sharp, cross-shaped cutting blade.
6. **Mincing Discs:** Perforated discs (fine, medium, coarse) that determine the texture of the minced meat.
7. **Locking Ring:** Secures the mincing head components.
8. **Food Pusher:** Used to guide meat into the mincing head safely.



Image 3.1: A close-up view of the mincing disc and blade assembly, showing the perforations for grinding meat.



Image 3.2: Various stainless steel mincing discs and a sausage stuffer attachment, providing versatility for different food preparations.

4. SETUP AND ASSEMBLY

Follow these steps to assemble your meat mincer before use:

1. Place the motor unit on a stable, flat, and dry surface.
2. Insert the mincing head into the motor unit's opening, ensuring it is securely locked into place. Some models may require a slight twist to lock.
3. Insert the screw (auger) into the mincing head, pointed end first.
4. Place the cutting blade onto the square shaft of the screw, ensuring the sharp edges face outwards towards the mincing disc.

5. Select the desired mincing disc (fine, medium, or coarse) and place it over the blade.
6. Screw the locking ring onto the mincing head until all components are firmly secured. Do not overtighten.
7. Place the feeding tray onto the top of the mincing head.
8. Ensure the appliance is unplugged before connecting to power.

5. OPERATING INSTRUCTIONS

To operate your Braun G1500 Meat Mincer and Grinder:

1. **Prepare the Meat:** Cut meat into small pieces (approximately 2-3 cm cubes) that can easily fit into the feeding tray opening. Remove any bones, gristle, or tough tendons.
2. **Place a Container:** Position a bowl or container under the outlet of the mincing head to collect the minced meat.
3. **Connect Power:** Plug the appliance into a 220-volt power outlet.
4. **Start Mincing:** Switch the appliance ON. Place the prepared meat into the feeding tray.
5. **Use the Pusher:** Gently guide the meat into the mincing head using the food pusher. Never use your fingers or other utensils to push meat.
6. **Monitor Operation:** The 1500-watt motor and stainless steel blades ensure efficient mincing. If the appliance sounds strained, switch it off immediately, clear any blockages, and then resume.
7. **Finish:** Once all meat is minced, switch the appliance OFF and unplug it from the power outlet.

6. CLEANING AND MAINTENANCE

Regular cleaning ensures the longevity and hygienic operation of your appliance. The Braun G1500 is designed for easy cleaning.

1. **Disassembly:** Ensure the appliance is unplugged. Reverse the assembly steps to disassemble the mincing head, removing the locking ring, mincing disc, blade, screw, and feeding tray.
2. **Washing Parts:** Wash all removable parts (mincing head, feeding tray, screw, blade, mincing discs, pusher) in warm, soapy water. Rinse thoroughly.
3. **Motor Unit:** Wipe the motor unit with a damp cloth. Never immerse the motor unit in water.
4. **Drying:** Dry all parts immediately after washing to prevent rust, especially for metal components.
5. **Storage:** Store the clean, dry appliance and its accessories in a safe, dry place, away from children.

7. TROUBLESHOOTING

If you encounter issues with your Braun G1500, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet issue; faulty switch.	Check power connection. Test outlet with another appliance. If switch is faulty, contact service.
Motor struggles or stops during operation.	Overloaded with meat; meat pieces too large; blockage.	Switch off and unplug. Disassemble and clear any blockages. Cut meat into smaller pieces. Do not overload.

Problem	Possible Cause	Solution
Poor mincing results (meat not finely ground).	Incorrect mincing disc; dull blade; meat not properly prepared.	Ensure correct mincing disc is used. Check blade for sharpness and correct orientation. Remove gristle/tendons from meat.
Unusual noise or odor from motor.	Overheating; internal issue.	Switch off immediately and unplug. Allow to cool completely. If problem persists, discontinue use and seek professional service.

8. SPECIFICATIONS

Key technical specifications for the Braun G1500 Meat Mincer and Grinder:

Feature	Specification
Model Number	G1500
Brand	Braun
Wattage	1500 Watts
Voltage	220 Volts (For overseas use only, NOT FOR USE IN USA/CANADA)
Material	Stainless Steel (blades, discs, mincing head)
Item Weight	2.72 kg (2 kg 720 g)
Item Dimensions (LxWxH)	30.5 x 25.4 x 35.6 Centimeters



Image 8.1: The Braun G1500 Meat Mincer with approximate dimensions indicated, showing its compact size.

9. WARRANTY AND SUPPORT

For warranty information, please refer to the documentation provided with your purchase. Braun products are designed for reliability and performance. If you require technical assistance or have questions not covered in this manual, please contact Braun customer support in your region. Keep your proof of purchase for any warranty claims.

© 2026 Braun. All rights reserved.