Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Tepro /
- > Tepro 1037 "Detroit" Barrel Grill Instruction Manual

Tepro 1037

Tepro 1037 "Detroit" Barrel Grill

Instruction Manual

1. Introduction

Thank you for choosing the Tepro 1037 "Detroit" Barrel Grill. This charcoal barbecue is designed for versatile outdoor grilling, offering a large cooking area suitable for various occasions. To ensure safe and optimal performance, please read this manual thoroughly before assembly and use. Keep this manual for future reference.



Image 1.1: The Tepro 1037 "Detroit" Barrel Grill, showcasing its robust design and dual grilling surfaces.

2. SAFETY INFORMATION

Always follow these safety guidelines to prevent injury or damage:

- Use the grill outdoors only, in a well-ventilated area.
- Keep children and pets away from the hot grill.
- Do not move the grill while it is hot or in use.
- Use heat-resistant gloves when handling hot components.
- Ensure the grill is placed on a stable, level, non-combustible surface.
- Never use gasoline, kerosene, or alcohol to light charcoal. Use only charcoal starter fluid compliant with EN 1860-3.
- Allow charcoal to cool completely before disposing of ashes.

3. Parts List

Before assembly, verify that all parts are present and undamaged. Refer to the assembly diagram for identification.

- Barrel body (1)
- Legs (4)
- Wheels (2)
- Axle (1)
- Lower grid shelf (1)
- Charcoal sheets (2)
- Chrome-plated grill grates (2) with removable handles
- Wind protection (1)
- Fire tray with handle (1)
- Hardware pack (screws, nuts, washers)

4. SETUP AND ASSEMBLY

Follow these steps for proper assembly. It is recommended to have two people for certain steps.

- 1. **Attach Legs:** Securely attach the four legs to the main barrel body using the provided hardware. Ensure they are firmly tightened for stability.
- 2. **Install Wheels:** Insert the axle through the designated holes on two of the legs. Attach the wheels to the axle, securing them with the appropriate fasteners. This allows for easy mobility.
- 3. **Assemble Lower Shelf:** Attach the lower grid shelf to the bottom of the legs. This shelf provides convenient storage for grilling tools and accessories.
- 4. **Insert Fire Tray and Charcoal Sheets:** Place the fire tray into the bottom of the barrel. Position the two lacquered charcoal sheets on top of the fire tray. These sheets support the charcoal.
- 5. **Attach Wind Protection:** Secure the lacquered wind protection to the top edge of the barrel. This helps to shield the embers from wind and aids in heat retention.
- 6. **Place Grill Grates:** Position the two chrome-plated grill grates onto the designated supports within the barrel. These grates have removable handles for easy adjustment and cleaning.



Transport – das untere Ablagegitter bietet Platz für Grillzubehör und Zutaten, damit alles griffbereit ist.

Image 4.1: The grill's mobile design, featuring two wheels and a practical lower storage shelf for accessories.

5. OPERATING INSTRUCTIONS

Learn how to effectively use your Tepro "Detroit" Barrel Grill for optimal grilling results.

5.1. Charcoal Preparation and Lighting

- Place charcoal (max. 3.0 kg) onto the charcoal sheets within the fire tray.
- Use a charcoal chimney starter or appropriate charcoal starter fluid to ignite the charcoal. Allow the charcoal to ash over completely (typically 15-20 minutes) before placing food on the grates.

Starke Hitzeleistung



Zwei Kohleroste für bis zu 3 kg Holzkohle – ideal für langes Grillvergnügen ohne ständiges Nachlegen.

Image 5.1: Illustration of the charcoal bed, showing the two charcoal sheets designed to hold up to 3.0 kg of charcoal for sustained heat.

5.2. Temperature Control

The grill features a triple grill height adjustment for precise temperature control. Adjust the height of the grill grates relative to the embers:

- Higher position: For lower temperatures, ideal for slow cooking or keeping food warm.
- Lower position: For higher temperatures, suitable for searing and quick cooking.

Flexible Hitze, doppelter Genuss




Dreifach höhenverstellbar für präzise Temperaturkontrolle – mit zwei verchromten Grillrosten und abnehmbaren Griffen für einfaches Wenden und Reinigen.

Image 5.2: Depiction of the triple height adjustment mechanism for the grill grates, allowing for flexible heat control.

5.3. Grilling Techniques

The dual grill grates allow for separate preparation of different foods. Utilize the removable handles to safely adjust or remove grates during grilling.

Große Grillfläche

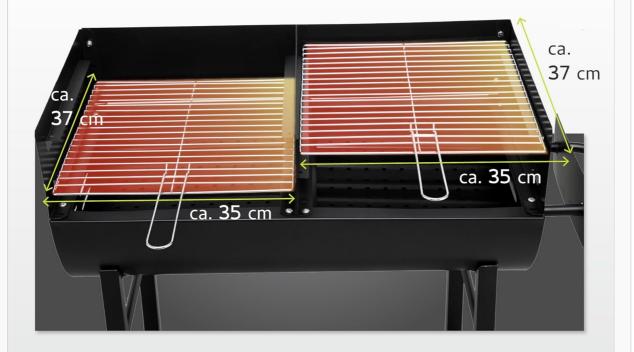

Zwei Grillroste (je ca. 35 x 37 cm) bieten reichlich Platz für verschiedenste Speisen – ideal für Familienfeiern oder Events.

Image 5.3: Detailed view of the two grill grates, each approximately 35 x 37 cm, providing ample space for diverse grilling needs.

6. MAINTENANCE

Regular cleaning and proper storage will extend the life of your grill.

6.1. Cleaning

- Allow the grill to cool completely before cleaning.
- Remove grill grates and clean with a grill brush and warm soapy water. Rinse thoroughly and dry.
- Empty the fire tray of ashes. Clean the interior and exterior surfaces of the barrel with a damp cloth.
- Do not use abrasive cleaners or harsh chemicals, as they can damage the finish.

6.2. Storage

- Store the grill in a dry, covered area when not in use, especially during off-season.
- Consider using a grill cover to protect it from the elements.

7. TROUBLESHOOTING

Common issues and their solutions:

Problem	Possible Cause	Solution
Grill unstable	Loose fasteners; uneven surface	Tighten all screws and bolts; move to a level surface.
Charcoal not lighting	Insufficient starter fluid; damp charcoal	Ensure proper amount of starter fluid; use dry charcoal.
Food burning too quickly	Grates too close to embers; too much charcoal	Raise grill grates; reduce charcoal quantity.
Food cooking too slowly	Grates too far from embers; insufficient charcoal	Lower grill grates; add more charcoal.

8. Specifications

Key technical details for the Tepro 1037 "Detroit" Barrel Grill:

• Model: 1037 "Detroit"

• Product Dimensions: Approximately 43 cm (D) x 94 cm (W) x 92 cm (H)

• Working Height: Approximately 77/83/89 cm (adjustable)

• Weight: 14.5 kg

• Material: Metal (lacquered)

• **Grilling Surface:** 2 x approx. 35 x 37 cm (chrome-plated grill grates)

• Charcoal Capacity: Max. 3.0 kg

• **Features:** Wind protection, fire tray with handle, 2 lacquered charcoal sheets, 4 lacquered legs, 2 plastic wheels, lacquered grid floor shelf.



Image 8.1: Overview of the grill's key dimensions, including overall height, width, depth, and adjustable working height.

9. WARRANTY AND SUPPORT

Tepro products are manufactured to high-quality standards. For warranty information or technical support, please refer to the contact details provided with your purchase documentation or visit the official Tepro website. Keep your proof of purchase for any warranty claims.

For further assistance, please contact Tepro customer service.

© 2024 Tepro. All rights reserved.



Tepro Grill Model 28691053: Essential Safety Instructions

Comprehensive safety guidelines for the Tepro Grill Model 28691053, covering safe operation, handling, and maintenance to prevent accidents and ensure user safety.



Tepro Grill Safety Instructions and Usage Guide

Essential safety instructions and operating guidelines for the Tepro grill (model 28675880) from TEST RITE tepro GmbH. Learn how to use your grill safely.



tepro Schaschlik- und Kebabgrill "Samara" (Art. Nr. 1125) – Bedienungsanleitung

Umfassende Bedienungsanleitung für den tepro Schaschlik- und Kebabgrill "Samara" (Art. Nr. 1125). Erfahren Sie mehr über Montage, Bedienung, Wartung und Sicherheitshinweise für Ihren Holzkohlengrill.



Tepro Milwaukee Smoker Charcoal Grill Instruction Manual

Comprehensive instruction manual for the Tepro Milwaukee Smoker Charcoal Grill, covering safety, assembly, operation, maintenance, and technical specifications.



Tepro Keansburg 6 Gas Grill User Manual - Assembly, Operation, Safety & Technical Details

Official user manual for the Tepro Keansburg 6 gas grill (Model 3316UK). Provides comprehensive instructions for assembly, safe operation, maintenance, troubleshooting, and technical specifications.



Bedienungsanleitung Tepro Riverton Gas-Feuerstelle Art. Nr. 3322

Umfassende Bedienungsanleitung für die Tepro Riverton Gas-Feuerstelle (Art. Nr. 3322). Enthält wichtige Sicherheitshinweise, Installationsanleitungen, Bedienung, Wartung und Fehlerbehebung für den sicheren Gebrauch im Freien.