

[manuals.plus](#) /› [Thor](#) /› **Thor AC Power Adapter Cord Instruction Manual for Sylvania Portable DVD Players (Models SDVD1023, SDVD1023bj, SDVD1030, SDVD7011, SDVD7012, SDVD7014)**

Thor zbe-100

Thor AC Power Adapter Cord Instruction Manual

For Sylvania Portable DVD Players: SDVD1023, SDVD1023bj, SDVD1030, SDVD7011, SDVD7012, SDVD7014

1. INTRODUCTION

This instruction manual provides essential information for the safe and effective use of your Thor AC Power Adapter Cord. This adapter is designed to provide reliable power to compatible Sylvania Portable DVD Players. Please read this manual thoroughly before use and retain it for future reference.

2. PRODUCT OVERVIEW

The Thor AC Power Adapter Cord is a UL Listed power supply designed for specific Sylvania Portable DVD Player models. It features a 5-foot cord for convenient use.

Key Features:

- **UL Listed Quality:** Ensures safety and reliability.
- **Extended Cord Length:** Features a 5-foot (approximately 1.5 meters) cord.
- **Compatibility:** Specifically designed for Sylvania Portable DVD Player models SDVD1023, SDVD1023bj, SDVD1030, SDVD7011, SDVD7012, and SDVD7014.

Product Images:



Figure 2.1: General view of the Thor AC Power Adapter Cord. This image shows the main adapter block with two prongs for wall outlets and the attached power cord ending in a barrel connector.



Figure 2.2: Close-up view of the adapter block, displaying the 'UpBright' branding and technical specifications printed on its surface.



Figure 2.3: An alternative angle of the Thor AC Power Adapter Cord, highlighting the coiled cable and the barrel connector.

3. SETUP INSTRUCTIONS

Follow these steps to properly connect your AC Power Adapter Cord to your Sylvania Portable DVD Player.

- 1. Identify the Power Port:** Locate the DC input power port on your Sylvania Portable DVD Player. This is typically a small, round port.
- 2. Connect to DVD Player:** Insert the barrel connector end of the AC Power Adapter Cord firmly into the DC input power port of your portable DVD player. Ensure a snug fit.
- 3. Connect to Power Outlet:** Plug the two-pronged adapter block into a standard AC wall outlet (100-240V, 50/60Hz).
- 4. Verify Connection:** Once connected, your DVD player should indicate that it is receiving power or charging (e.g., via an LED indicator).

4. OPERATING INSTRUCTIONS

Once the AC Power Adapter Cord is connected, your Sylvania Portable DVD Player can be operated or charged.

- **Powering the Device:** With the adapter connected to both the DVD player and a power outlet, you can power on your DVD player for immediate use.
- **Charging the Battery:** If your portable DVD player has a rechargeable battery, the adapter will automatically charge the battery while connected and the device is either on or off. Refer to your DVD player's manual for specific charging indicators and times.

5. MAINTENANCE

Proper care and maintenance will extend the life of your AC Power Adapter Cord.

- **Cleaning:** Disconnect the adapter from the power outlet and the DVD player before cleaning. Use a soft, dry cloth to wipe the adapter and cord. Do not use liquid cleaners or abrasive materials.
- **Storage:** When not in use, store the adapter in a cool, dry place, away from direct sunlight and extreme temperatures. Avoid tightly coiling the cord to prevent damage.
- **Handling:** Do not pull the cord to disconnect from the outlet or DVD player; always grasp the plug or connector. Avoid placing heavy objects on the cord or exposing it to sharp edges.

6. TROUBLESHOOTING

If you encounter issues with your AC Power Adapter Cord, refer to the following common solutions.

- **Device Not Powering On or Charging:**
 - Ensure the adapter is securely plugged into a functional wall outlet. Test the outlet with another device.
 - Verify that the barrel connector is fully inserted into the DVD player's power port.
 - Check the cord for any visible damage, kinks, or frayed wires. If damaged, discontinue use and replace the adapter.
- **Loose Connection:**
 - If the connector feels loose in the DVD player's port, ensure it is pushed in firmly. Avoid moving the DVD player excessively while connected to prevent accidental disconnection.
 - If the connection remains consistently loose, the port on the DVD player or the adapter's connector may be worn.

7. SPECIFICATIONS

Specification	Value
Model Number	zbe-100
Input Voltage	100-240 Volts AC
Output Voltage	12 Volts DC
Output Current	0.83 Amps

Specification	Value
Connector Type	Barrel Connector
Cord Length	5 Feet (approx. 1.5 meters)
Product Dimensions	5 x 3 x 3 inches
Item Weight	0.352 ounces

8. WARRANTY AND SUPPORT

Your Thor AC Power Adapter Cord comes with a **7-Year Warranty** and a **100% Satisfaction Guarantee**.

For any questions, concerns, or support needs regarding this product, please refer to the 'Customer Questions & Answers' section on the product's purchase page or contact the seller directly. When contacting support, please provide your product model number (zbe-100) and the specific Sylvania DVD player model you are using.