

## Lasko 1885

# Lasko Cyclone 18-inch Pedestal Fan Model 1885 Instruction Manual

Brand: Lasko | Model: 1885

## INTRODUCTION

The Lasko 18" Cyclone Pedestal 3-Speed Fan is designed to powerfully circulate air and create a cool feel in larger rooms, such as a living room or kitchen. This white pedestal fan features 3 speed settings, a tilt-back fan head, optional oscillation, and fully-adjustable height to direct air where needed. It offers quiet operation and energy-efficient performance. The fan is easy to assemble and disassemble for cleaning without tools. For safety, it is E.T.L-listed and includes a fused safety plug.

## SETUP

The Lasko Cyclone Pedestal Fan is designed for easy, tool-free assembly. Follow the instructions below to set up your fan.

- 1. Base Assembly:** Attach the fan pole to the round base. Ensure it is securely fastened.
- 2. Adjust Height:** Loosen the height adjustment collar on the pole, extend the pole to your desired height (between 41" and 53.5"), and then tighten the collar to secure.
- 3. Attach Fan Head:** Secure the fan head assembly to the top of the adjustable pole.
- 4. Install Grills and Blades:** Attach the rear grill, then the fan blades, and finally the front grill. Ensure all components are properly aligned and secured.
- 5. Power Connection:** Plug the fan into a standard 120-volt AC outlet.

# Better Air Starts Here.

**Lasko®**




Source: Circana/Retail Tracking Service  
U.S. dollar sales, 12 months ending December 2024

*Image: Fully assembled Lasko Cyclone Pedestal Fan, showcasing its sleek design and adjustable height.*

# Discover Your Perfect Fit

Lasko®

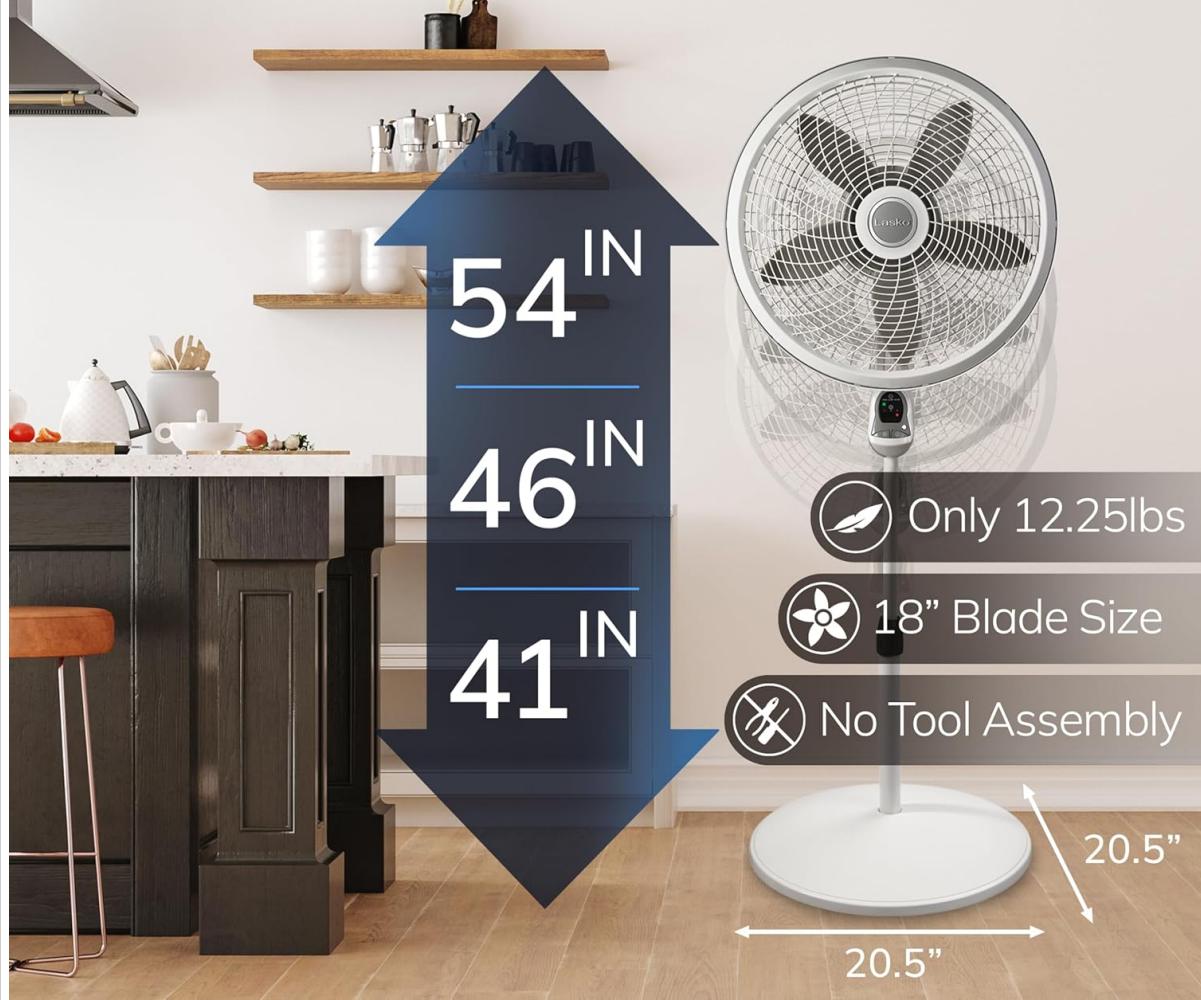

*Image: Diagram illustrating the adjustable height feature of the Lasko Cyclone Pedestal Fan, ranging from 41 to 54 inches.*

## OPERATING INSTRUCTIONS

Your Lasko Cyclone Pedestal Fan offers multiple settings for customized comfort, controllable via the integrated control panel or the included remote control.

- Power On/Off:** Press the power button on the control panel or remote to turn the fan on or off.
- Speed Settings:** Select from 3 adjustable speed settings (1, 2, or 3) to control the airflow intensity. Use the speed buttons on the control panel or remote.
- Oscillation:** Activate the 90-degree widespread oscillation feature by pressing the oscillation button on the control panel or remote to distribute air across a wider area.
- Tilt Function:** Manually adjust the tilt-back fan head to direct airflow precisely where needed.
- Auto-Off Timer:** Set the fan to automatically turn off after 1, 2, or 4 hours using the timer button on the control panel or remote.
- Remote Control:** The multi-function remote allows convenient operation of all fan features from a distance.

# Simple Controls

Lasko®



- Oscillation On/Off
- Adjust Fan Speed
- 4-Hour Timer

*Image: Close-up of the fan's control panel and the remote control, highlighting buttons for power, speed, oscillation, and timer.*





*Image: The fan head shown tilted at various angles, demonstrating its adjustable tilt feature.*





---

*Image: The fan oscillating, indicated by a blurred effect, showcasing its widespread air distribution.*

## MAINTENANCE

Regular cleaning ensures optimal performance and longevity of your Lasko Cyclone Pedestal Fan. The fan is designed for easy disassembly for cleaning.

- **Cleaning the Grills and Blades:** The front grill can be easily removed without tools to access the fan blades for dusting and cleaning. Wipe with a soft, damp cloth.
- **Exterior Cleaning:** Wipe the exterior surfaces of the fan with a soft, dry cloth. Do not use abrasive cleaners or chemicals.
- **Storage:** When not in use for extended periods, store the fan in a cool, dry place.

## TROUBLESHOOTING

If your fan is not operating as expected, please refer to the following common issues and solutions:

- **Fan Does Not Turn On:**
  - Ensure the power cord is securely plugged into a working electrical outlet.
  - Check if the fused safety plug has tripped. If so, replace the fuse according to the instructions in the full user manual.
  - Verify that the power button on the fan or remote is pressed.
- **Reduced Airflow:**
  - Clean the fan blades and grills to remove any dust or debris buildup.
  - Ensure the fan is set to a higher speed setting.
- **Unusual Noise:**
  - Check for any loose parts or obstructions around the fan blades.
  - Ensure the fan is placed on a stable, flat surface.

For further assistance, please contact Lasko customer support.

## SPECIFICATIONS

Feature	Detail
Brand	Lasko
Model Name	1885
Style	Pedestal Fan
Color	Off-White
Product Dimensions	20.2"D x 20.2"W x 54"H
Item Weight	11.05 pounds
Power Source	Corded Electric

<b>Voltage</b>	120 Volts
<b>Wattage</b>	114 watts
<b>Number of Speeds</b>	3
<b>Special Features</b>	Adjustable Height, Adjustable Tilt, Remote Controlled, Timer, Widespread Oscillation
<b>Noise Level</b>	62.9 Decibels
<b>Included Components</b>	Pedestal Fan, Remote Control, User Manual
<b>Safety Certification</b>	E.T.L-listed, Fused Safety Plug

## WARRANTY AND SUPPORT

The Lasko Cyclone Pedestal Fan Model 1885 comes with a **1-year limited warranty** from the date of purchase.

For warranty claims, technical support, or any questions regarding your product, please contact Lasko customer service. Refer to the full user manual included with your product for detailed contact information and warranty terms.

You can also visit the official Lasko website for additional resources and support: [www.lasko.com](http://www.lasko.com)